

FH-150R

SERVICE MANUAL

*AEP Model
UK Model
E Model*



- FH-150R consists of ST-177R, TA-177R, TC-177R and APM-177M.
- Remote commander RM-177R is supplied accessory.


'Dolby' and the double-D symbol are the trade marks of Dolby Laboratories Licensing Corporation. Noise reduction system manufactured under license from Dolby Laboratories Licensing Corporation.

CONTENTS

FH-150R	<i>Page</i>	ST-177R (E model)	<i>Page</i>
FEATURES	2	REPAIRING PRECAUTION	ST-1
SPECIFICATIONS	3	SECTION 1 BLOCK DIAGRAM	ST-2
MODEL IDENTIFICATIONS	4	SECTION 2 ADJUSTMENTS	ST-3
CONNECTION BETWEEN EACH SET	5	SECTION 3 DIAGRAMS	
FUNCTION OF CONTROLS	6	3-1. MOUNTING DIAGRAM	ST-7
EXPLODED VIEW AND PARTS LIST	8	Semiconductor Lead Layouts	ST-7
ST-177R (AEP, UK model)		3-2. SCHEMATIC DIAGRAM	ST-9
REPAIRING PRECAUTION	ST-1	SECTION 4 EXPLODED VIEW AND	
SECTION 1 BLOCK DIAGRAM	ST-2	PARTS LIST	ST-12
SECTION 2 ADJUSTMENTS	ST-3	SECTION 5 ELECTRICAL PARTS LIST	ST-13
SECTION 3 DIAGRAMS	ST-7		
3-1. MOUNTING DIAGRAM	ST-7		
3-2. SCHEMATIC DIAGRAM	ST-9		
Semiconductor Lead Layouts	ST-12		
SECTION 4 EXPLODED VIEW AND			
PARTS LIST	ST-13		
SECTION 5 ELECTRICAL PARTS LIST	ST-14		

— Continued on page 2 —

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.



**COMPACT HI-DENSITY
COMPONENT SYSTEM
SONY®**



TA-177R

1. IC'S OPERATION	TA-1
2. SERVICING NOTE (G-AEP model only)	TA-4
3. DISASSEMBLY	TA-5
4. BLOCK DIAGRAM	TA-8
Semiconductor Lead Layouts	TA-11
5. MOUNTING DIAGRAM	TA-12
6. SCHEMATIC DIAGRAM	TA-17
7. EXPLODED VIEWS AND PARTS LIST	TA-23
8. ELECTRICAL PARTS LIST	TA-25

TC-177R

SERVICING NOTE	TC-2
SECTION 1 BLOCK DIAGRAM	TC-3
SECTION 2 DISASSEMBLY	TC-5
SECTION 3 ADJUSTMENTS	
3-1. MECHANICAL ADJUSTMENTS	TC-11
3-2. ELECTRICAL ADJUSTMENTS	TC-15
Semiconductor Lead Layouts	TC-18
SECTION 4 DIAGRAMS	
4-1. SCHEMATIC DIAGRAM	TC-19
4-2. MOUNTING DIAGRAM	TC-23

Page

Page

SECTION 5 EXPLODED VIEWS AND

PARTS LIST	TC-26
------------------	-------

SECTION 6 ELECTRICAL PARTS LIST	TC-31
---------------------------------------	-------

APM-177M

SERVICING NOTE	APM-1
1. DISASSEMBLY	APM-1
2. WIRING DIAGRAM	APM-2
3. EXPLODED VIEW AND PARTS LIST	APM-2

FEATURES

Compact hi-density component system with simple operation

Consists of an FM stereo FM-AM tuner, a high quality cassette deck, and an integrated amplifier, each of which can be connected quickly and securely. The functions are switched directly.

Supplied remote commander for remote control operation

Allows you to control the whole system from a distance.

Amplifier with power output of 40 W + 40 W (1 kHz, 5% THD) for AEP, AED, UK models, with peak music power output of 320 W for E, EA3 models

- Includes a 7-band graphic equalizer controls for fine adjustment of tone quality for both recording and playback, and a 7-band spectrum analyzer.
- Microphone mixing jack and microphone level control.

High sensitivity and high selectivity tuner

Permits extremely precise tuning of FM/MW/LW stations (for AEP, AED, UK models) or FM/MW/SW₁/SW₂ stations (for E, EA3 models) using the electronic digital readout on the frequency display. Five stations on each band can be memorized.

Auto-reverse cassette deck with select cassette-deck operations

- B-type and C-type Dolby NR circuit incorporated
- Automatic tape select system
- Automatic music sensor (AMS)
- Automatic recording level control system

3-way speaker system with APM woofer

By installing speaker boxes in the appropriate position, the localization of the sound can be arranged to fit your listening situation.

Newly-developed AMFB (Accurate Motional Feedback) function

Feeds back movement of Aluminum Honey-comb diaphragm on the speaker to the amplifier as electric signal in order to obtain sufficient bass sounds like a larger speaker system.

SPECIFICATIONS

ST-177R

System FM stereo, FM/AM superheterodyne tuner
Quartz-locked PLL digital synthesizer system

FM tuner section

Tuning range 87.5 - 108 MHz
Antenna Telescopic antenna
Antenna terminals 75 ohms unbalanced
Intermediate frequency 10.7 MHz
Usable sensitivity $2.3 \mu\text{V}$ (S/N = 30 dB/75 ohms)
Signal-to-noise ratio 78 dB (mono) 70 dB (stereo)
Harmonic distortion at 1 kHz 0.2% (mono) 0.5% (stereo)
Separation at 1 kHz 40 dB
Selectivity at 400 kHz 55 dB

 
MW/LW tuner section (for AEP, AED, UK models)

	MW	LW
Tuning range	522 - 1,611 kHz	144 - 288 kHz
Antenna	Built-in ferrite bar antenna External antenna terminal	
Intermediate frequency	450 kHz	
Usable sensitivity	Built-in ferrite bar antenna	250 $\mu\text{V}/\text{m}$ (999 kHz)
	External antenna	500 $\mu\text{V}/\text{m}$ (230 kHz)
Signal-to-noise ratio	52 dB (50 mV/m)	
Harmonic distortion	0.3% (50 mV/m, 400 Hz)	

SW/MW tuner section (for E, EA3 models)

	SW 1	SW 2	MW
Tuning range	3.2 - 7.3 MHz	9.5 - 21.75 MHz	531 - 1,602 kHz (at 9 kHz step) 530 - 1,610 kHz (at 10 kHz step)
Antenna	Built-in ferrite bar antenna External antenna terminal		
Intermediate frequency	450 kHz		
Usable sensitivity	Built-in ferrite bar antenna	250 $\mu\text{V}/\text{m}$ (999 or 1,000 kHz)	
	External antenna	23 μV (5 MHz) 30 μV (15 MHz)	100 μV (999 or 1,000 kHz)
Signal-to-noise ratio	50 dB (5 mV)		
Harmonic distortion	0.3% (5 mV, 400 Hz)		

10-pin DC input connector of ST-177R




General

Dimensions Approx. 215 × 55 × 240 mm (w/h/d)
(8 1/2 × 2 1/8 × 9 5/8 inches)
incl. projecting parts and controls
Weight Approx. 0.9 kg (2 lb) net

TC-177R

Recording system 4-track 2-channel stereo
Frequency response DOLBY NR OFF (DIN)
With TYPE IV cassettes (Sony METAL-S)
30-16,000 Hz (±3 dB)
With TYPE II cassettes (Sony UCX)
30-15,000 Hz (±3 dB)
With TYPE I cassettes (Sony HF-S)
30-14,000 Hz (±3 dB)
Wow and flutter 0.07% WRMS (NAB)
± 0.2% (DIN)
Dimensions Approx. 215 × 115 × 240 mm (w/h/d)
(8 1/2 × 4 5/8 × 9 5/8 inches)
incl. projecting parts and controls
Weight Approx. 2.3 kg (5 lb 2 oz) net

 13-pin DC input connector of TC-177R



TA-177R

Continuous RMS power output (AEP, AED, UK models)
40 + 40 watts
(6 ohms, at 1 kHz, 5% THD)
30 + 30 watts
(6 ohms, 40 Hz - 20 kHz, 1% THD)
Peak music power output 320 W (6 ohms) (E, EA3 models)

Inputs	Sensitivity	Impedance
PHONO (phono jacks)	2.5 mV	50 kilohms
CD/AUX (phono jacks)	250 mV	50 kilohms
MIC (phone jack)	1 mV	low impedance

Outputs	
PRE OUT (phono jacks)	Voltage 250 mV, Impedance 4.7 kilohms
HEADPHONES (stereo phone jack)	Accepts headphones of 8 ohms or more
SPEAKER	Accepts only the APM-177M

Frequency response PHONO: RIAA curve ± 0.5 dB
CD/AUX 40 Hz - 30 kHz ±0.3 dB
MIC: 100 Hz - 10 kHz ±0.3 dB
Dimensions Approx. 215 × 115 × 235 mm (w/h/d)
(8 1/2 × 4 1/2 × 9 3/8 inches)
incl. projecting parts and controls
Weight Approx. 4.5 kg (9 lb 15 oz) net

APM-177M

Speaker system 3 way speaker system
Speaker units Woofer : 110 cm² APM type
Tweeter : 5 cm dia, cone type
Super tweeter : 3.5 cm dia, cone type
Enclosure type Bass reflex
Frequency range 30 Hz - 20 kHz (AMFB switch ON)
60 Hz - 20 kHz (AMFB switch OFF)
Sensitivity 90 dB/W/m
Impedance 6 ohms
Dimensions Approx. 170 × 280 × 220 mm (w/h/d)
(6 3/4 × 10 7/8 × 8 3/4 inches)
Weight Approx. 3.1 kg (6 lb 14 oz) net per speaker


General

Power requirements AEP, AED models: 220 V AC, 50/60 Hz
UK model: 240 V AC, 50 Hz
E, EA3 models: 120, 220 or 240 V AC
adjustable, 50/60 Hz
Power consumption 90 watts
Dimensions Approx. 570 × 345 × 230 mm (w/h/d)
(22 1/2 × 13 5/8 × 9 1/8 inches)
incl. projecting parts and controls
Weight Approx. 14.6 kg (32 lb 3 oz) net
Approx 16.4 kg (36 lb 3 oz) in shipping carton

MODEL IDENTIFICATIONS


TC-177R has no difference by the model.

ST-177R

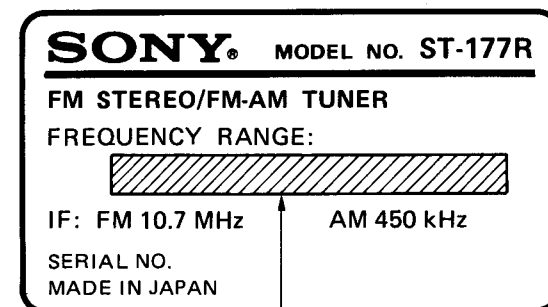


FM: 87.5 - 108 MHz SW₂: 9.5 - 21.75 MHz } E, Saudi Arabia models
SW₁: 3.2 - 7.3 MHz MW: 531 - 1,602 kHz }
FM: 87.5 - 108 MHz } AEP, Denmark models
MW: 522 - 1,611 kHz LW: 144 - 288 kHz } G-AEP, UK models

APM-177M

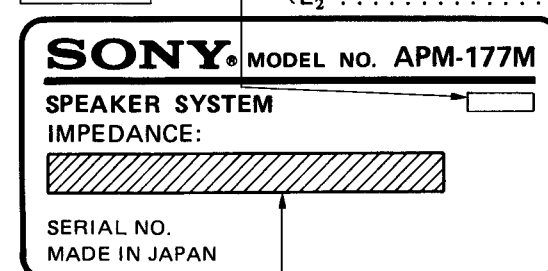

{ BLANK E₂, E₃ models
{ POWER HANDLING CAPACITY: 40W (NOM) E model
80W (MAX)


TA-177R

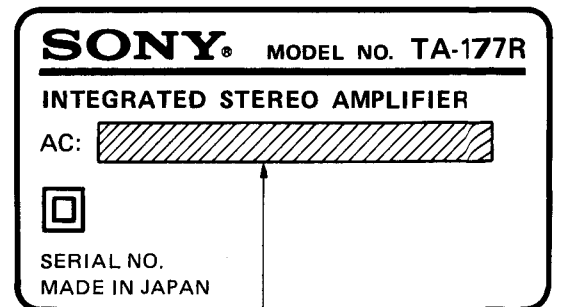


220V ~ 50/60Hz 90W AEP, Denmark models
240V ~ 50Hz 170W UK model
120/220/240V ~ 50/60Hz 90W } E₂/E₃, Saudi Arabia models

G-AEP


• This label is stuck on TA-177R (G-AEP model).

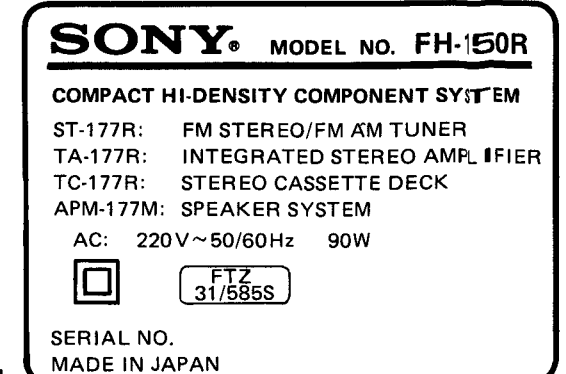

CONNECTION BETWEEN EACH SET

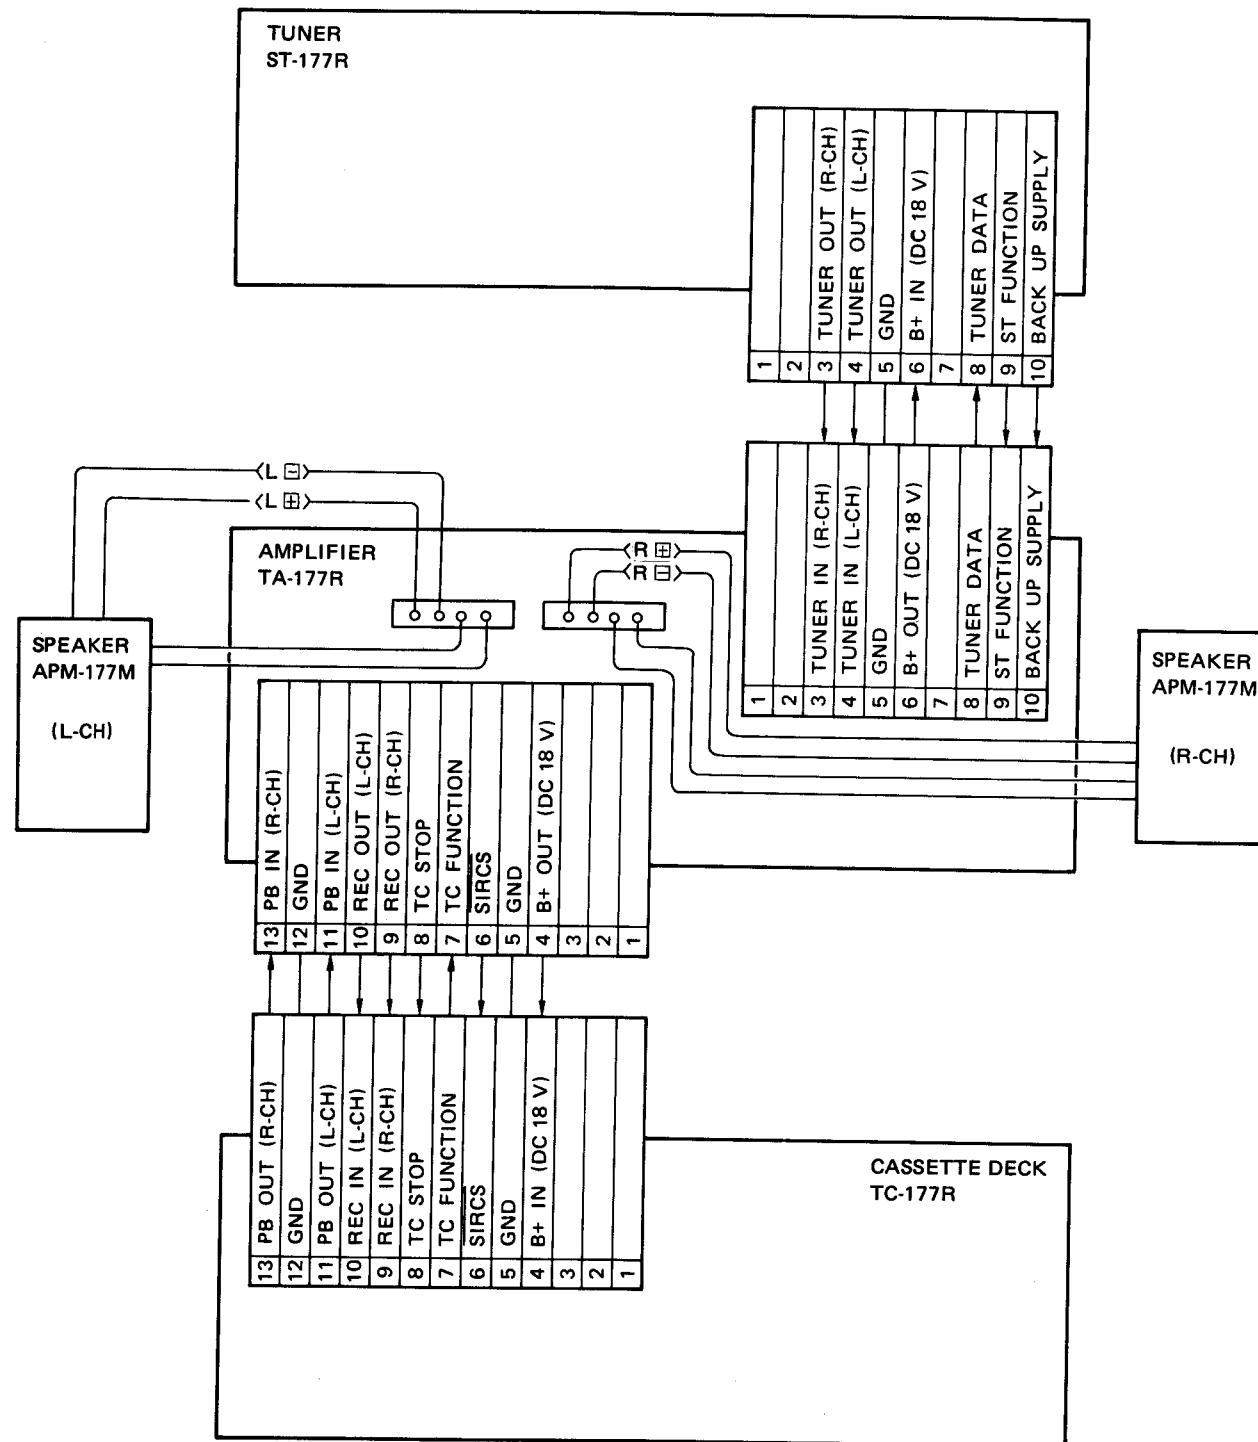

FUNCTION OF CONTROLS

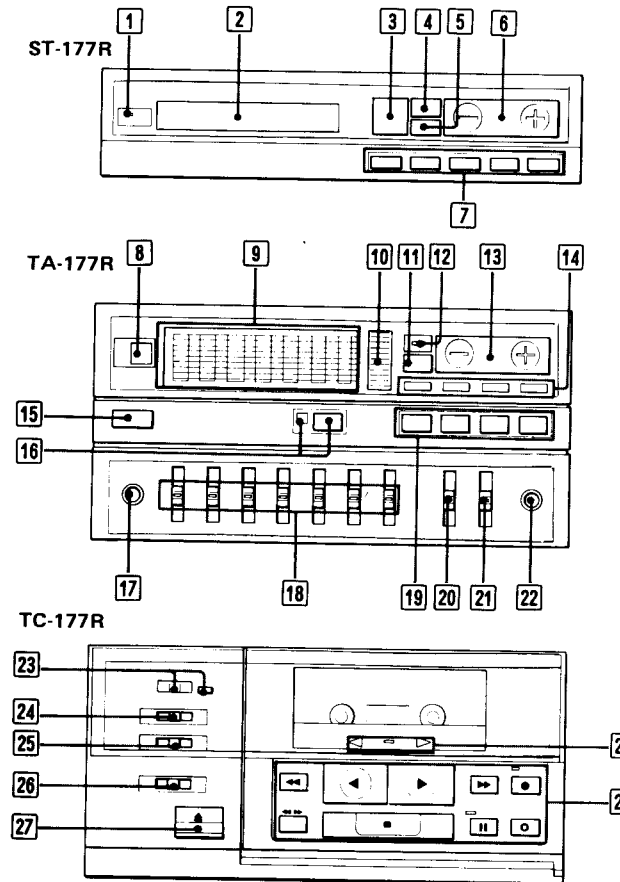

ST-177R tuner

- 1 STEREO indicator**
Lights when an FM stereo program of sufficient signal strength is tuned in.
- 2 Band/frequency display**
Displays the frequency received and the following items. When the PRESET button is pressed, the button number appears. When a signal is tuned in, the TUNED indicator appears. When the MEMORY button is pressed, the MEMORY indicator appears.
- 3 BAND select button**
Press to select the desired band. The band indicator appears in the display. With each press, the band changes as follows.
AEP, AED, UK models: FM → MW → LW
E, EA3 models: FM → SW₂ (SW 9.50–21.75MHz) → SW₁ (SW 3.20–7.30MHz) → MW
- 4 STEREO MUTING button**
This button serves the dual purpose of a mode and FM muting button.
Normally keep this button engaged (the MUTING indicator appears) to eliminate FM interstation noise while tuning from station to station.
The tuner operates in stereo mode for stereo sound sources and will be automatically switched to mono mode for monaural sound sources.
- 5 MEMORY button**
Press to memorize a tuned-in station on a PRESET button.

- 6 TUNING button**
Press the "+" side to tune in a higher frequency, and the "-" side to tune in a lower frequency. To change the frequency rapidly, keep the button pressed.
- 7 PRESET buttons**
Press the appropriate button to memorize a tuned-in station or to call up a memorized station.

TA-177R amplifier

- 8 REMOTE SENSOR**
Receives the infrared ray command transmitted from the supplied RM-177R remote commander.
- 9 7 BAND SPECTRUM ANALYZER display**
This is a 7-division real time analyzer, and the frequency band is the same as that of the graphic equalizer.
- 10 VOL LEVEL (volume level) indicator**
Indicates the output level of the amplifier.
- 11 MUTING button**
Press to reduce the sound level by 20 dB. Press again to restore the same listening level as before. This function is useful when you lower the tonearm onto a record or when you answer the telephone.
- 12 Muting indicator**
Lights when the MUTING button is pressed.
- 13 VOLUME control**
Press the "+" side to increase the overall sound level, or the "-" side to decrease it.

- 14 Function indicators**
The indicator lights to show the audio input source in use. When the power is turned on, the tuner indicator lights.
- 15 POWER switch**
Depress (ON) to turn on the power of the stereo system. To turn it off, press again (OFF).
- 16 AMFB (Accurate Motional Feedback) switch and indicator**
Depress when reinforcing bass sounds. The indicator lights up. This function will not work unless both the right and left speakers are connected. Also, this function will not work in case you are listening with headphones. Then, the indicator will go out.

17 HEADPHONES jack (stereo phone jack)

- 18 GRAPHIC EQUALIZER controls**
Slide each control upwards to increase the level of the frequency band, and downwards to decrease the level.
63 Hz: Use to boost or cut heavy bass.
150 Hz: Use to boost or cut normal bass.
400 Hz: Use to adjust the power, spaciousness and warmth of the sound.
1 kHz: Use to provide more presence for vocals.
3 kHz: Use to boost a brighter sound and to reduce stridency.
6 kHz: Use to adjust the brightness of sound.
14 kHz: Use to adjust the treble.

To record or listen to the sound with the original tone quality, set all the controls at their center positions.

19 FUNCTION select buttons

Select the desired button for program source.

TAPE: For listening to a taped program.

CD/AUX: For listening to or record a compact disc or auxiliary program source connected to CD/AUX inputs.

TUNER: For listening to or record a radio program.

PHONO: For listening to or record a record program source connected to PHONO inputs.

To select a tuner program, press any button of the tuner except MEMORY and STEREO MUTING buttons.

To select a taped program, set the cassette deck in playback mode.

20 BALANCE control

Adjusts the balance of the left and right channel output levels.

21 MIC LEVEL (microphone level) control

Controls the input level of the microphone.

Slide towards MAX to increase microphone level and towards MIN to decrease it.

When not in use of microphone mixing, set this control to the MIN position.

22 MIC (microphone) jack (phone jack)

Connect a microphone for microphone mixing.

TC-177R cassette deck

23 TAPE COUNTER and reset button

The tape counter provides a numerical reference point. To reset to zero, press the reset button.

24 DOLBY NR switch

Select the Dolby NR* (Noise Reduction) system to be used for recording or playback.

OFF: To record or play back without the Dolby NR process.

B: To record or play back with the Dolby B-type NR process.

C: To record or play back with the Dolby C-type NR process.

* Dolby and the double-D symbol are trade marks of the Dolby Laboratories Licensing Corporation. Noise reduction system manufactured under license from Dolby Laboratories Licensing Corporation.

25 DIRECTION MODE selector

Select the mode of tape transport for recording and playback.

→ : To record or play back one side of a cassette.

↔ : To record on both sides of a cassette or to repeat playback of both sides endlessly.

26 TIMER standby switch

Normally set to OFF. To start recording or playback automatically using an optional timer, set to REC or PLAY.

27 EJECT (eject) button

Press to open the cassette holder.

28 Tape transport direction mode indicators

29 Tape operation mode select buttons

◀ (fast reverse)/AUTO PLAY ▶ button

AMS (Automatic Music Sensor) button and indicator :

Press to activate the AMS function. The indicator lights.

To deactivate that function, press again.

◀ (reverse play) button


■ (stop) button ▶ (play) button

▶▶ (fast forward)/AUTO PLAY ◀ button

|| PAUSE button and indicator : Press to stop the tape momentarily during recording or playback. To disengage pause mode, press again. The indicator lights during pause and flickers just after the power is turned on and during record muting.

○ (record muting) button: Press to eliminate unwanted program material such as broadcasting commercials during recording.

● REC (record) button and indicator : To start recording keeping this button pressed, press the ◀ or ▶ buttons

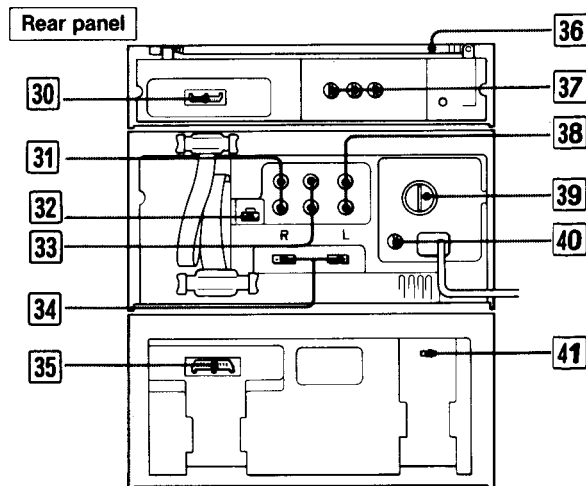

30 Power connector of tuner

31 PHONO inputs (phono jacks)

Accepts the outputs of a turntable system.

32 CONTROL S OUT connector (4-pin)

Connect the supplied CD player connecting cord to this connector to control the compact disc player from a remote location.

33 CD/AUX (compact disc/auxiliary) inputs (phono jacks)

Accepts the outputs of a compact disc player or input sources such as a playback only tape deck.

34 Speaker terminals

35 Power connector of tape deck

36 Telescopic antenna

Used for FM or SW (only for E, EA3 models) reception.

37 FM/LW/MW external antenna terminals (AEP, AED, JKC models)

FM/SW/MW external antenna terminals (E, EA3 models)

38 PRE OUT outputs (phono jacks)

Accepts the line inputs of a tape deck for tape recording. Recording the sound adjusted with the GRAPHIC EQUALIZER controls or the microphone sound mixed with sources can be made.

39 VOLTAGE SELECTOR (only for E, EA3 models)

40 Ground terminal (only for West Germany and Italy)

41 ISS (interference suppress switch)


If interference is encountered while recording MW or LW program, slide the switch to position 1, 2 or 3 depending on which best reduces the noise.

EXPLODED VIEW AND PARTS LIST

NOTE:

The mechanical parts with no reference number in the exploded views are not supplied.

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

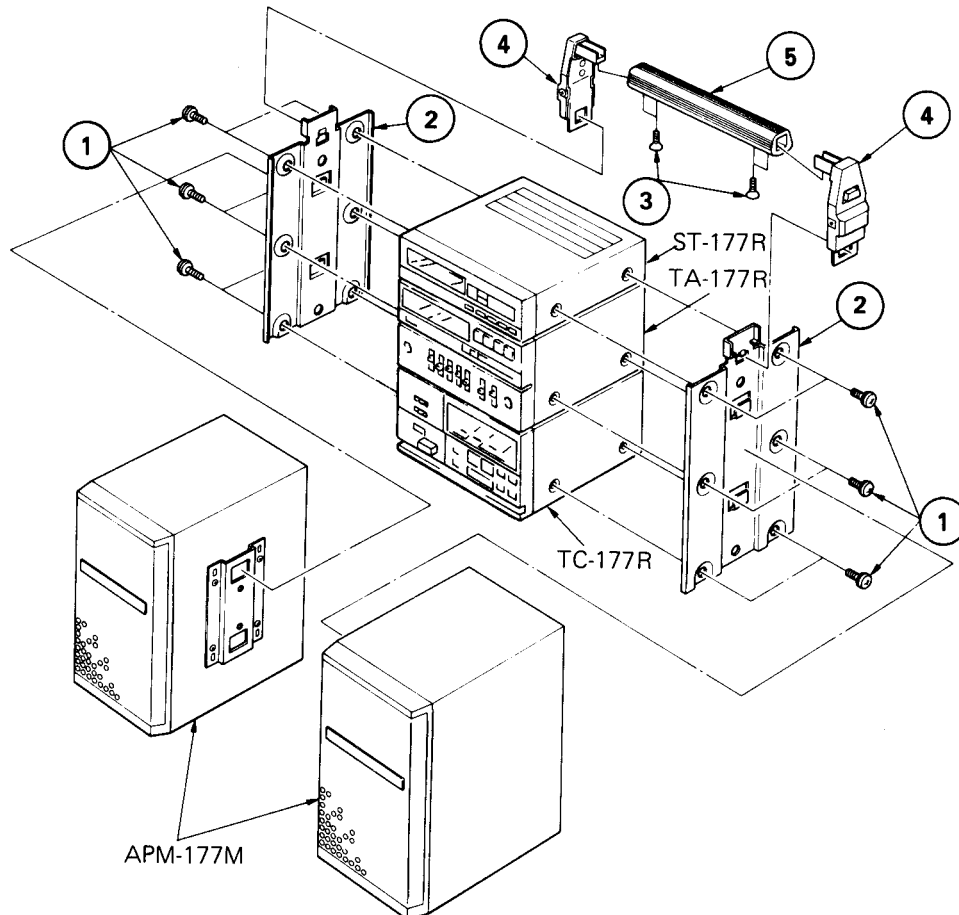

GENERAL SECTION

No.	Part No.	Description
1	X-4902-909-1	SCREW ASSY, SIDE PLATE
2	4-910-051-11	PLATE (C), SIDE
3	7-685-247-29	SCREW +KTP 3X10 TYPE2 SLIT
4	X-4910-069-1	BRACKET ASSY, HANDLE
5	2-249-402-01	HANDLE

ACCESSORY & PACKING MATERIAL

Part No.	Description
1-463-732-11	REMOTE COMMANDER (RM-177R)
1-556-372-61	CORD, CONNECTION (4 CORE)
3-701-630-00	BAG, POLYETHYLENE
3-765-098-11	(EXCEPT FOR G-AEP)...MANUAL, INSTRUCTION
3-765-098-41	(AEP,G-AEP,Denmark)...MANUAL, INSTRUCTION
*4-603-394-00	CUSHION (A)(RM-177R)
4-884-945-00	PARTITION

ACCESSORY & PACKING MATERIAL

Part No.	Description
4-872-911-00	(TC-177R)...SHEET, PROTECTION
4-872-911-00	(TA-177R)...SHEET, PROTECTION
4-884-884-00	(ST-177R)...SHEET, PROTECTION
4-910-323-01	(APM-177M)...SHEET, PROTECTION
4-907-610-01	JOINT
4-910-052-01	CUSHION (FRONT), UPPER
4-910-053-01	CUSHION (REAR), UPPER
4-910-054-01	CUSHION (FRONT), LOWER
4-910-055-01	CUSHION (REAR), LOWER
4-910-353-01	(APM-177M)...CUSHION, UPPER
4-910-324-01	(APM-177M)...CUSHION, LOWER
4-914-346-21	(E2/3,Saudi Arabia).....INDIVIDUAL CARTON
4-914-346-31	(AEP,G-AEP,UK,Denmark)...INDIVIDUAL CARTON
9-911-842-XX	CUSHION (F)
X-4902-908-1	BAG ASSY, SCREW

FM STEREO/FM-AM TUNER (ST-177R)


(AEP, UK model)

REPAIRING PRECAUTION

[To apply B+ voltage]

The power of this unit is fed from TA-177R.

Because of this, connect the regulated power supply as illustrated below when this unit alone operates.

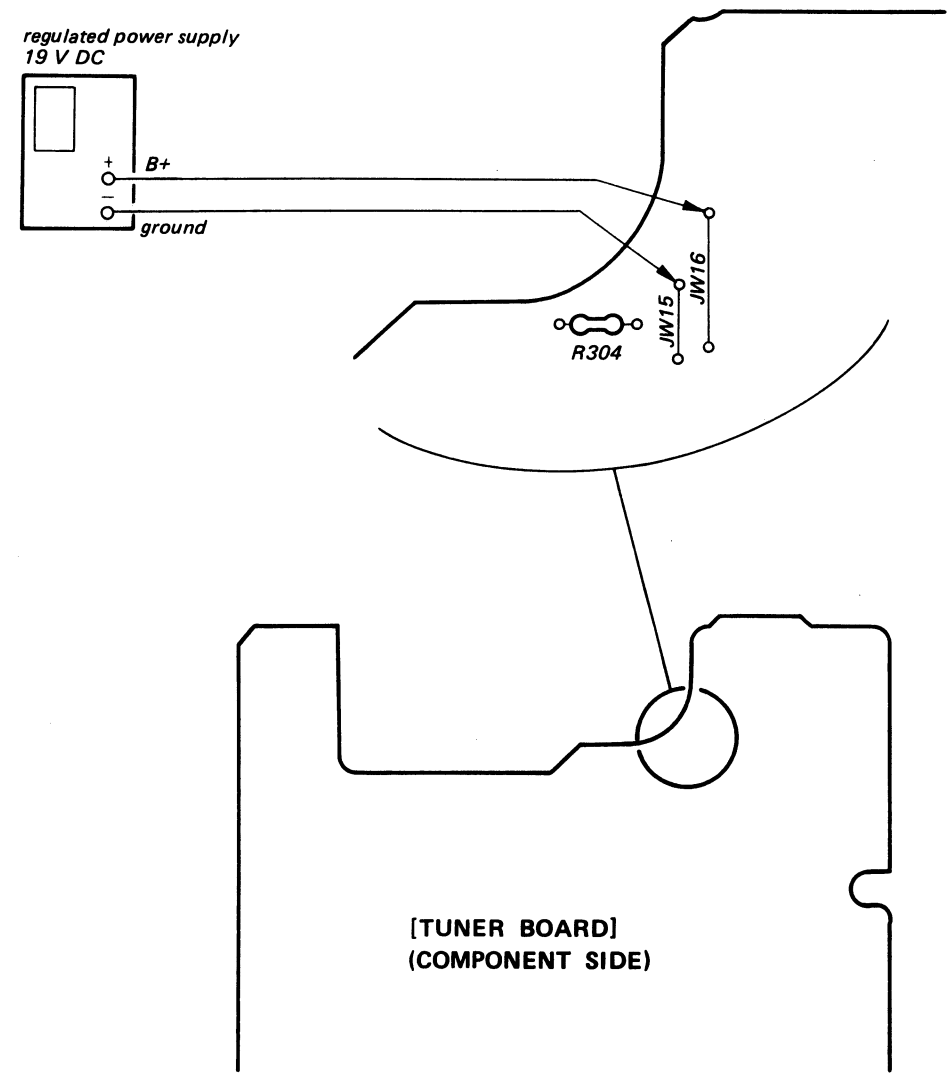


[TUNER BOARD]
(COMPONENT SIDE)

FH-15OR
ST-177R

(AEP, UK model)

SECTION 1 BLOCK DIAGRAM

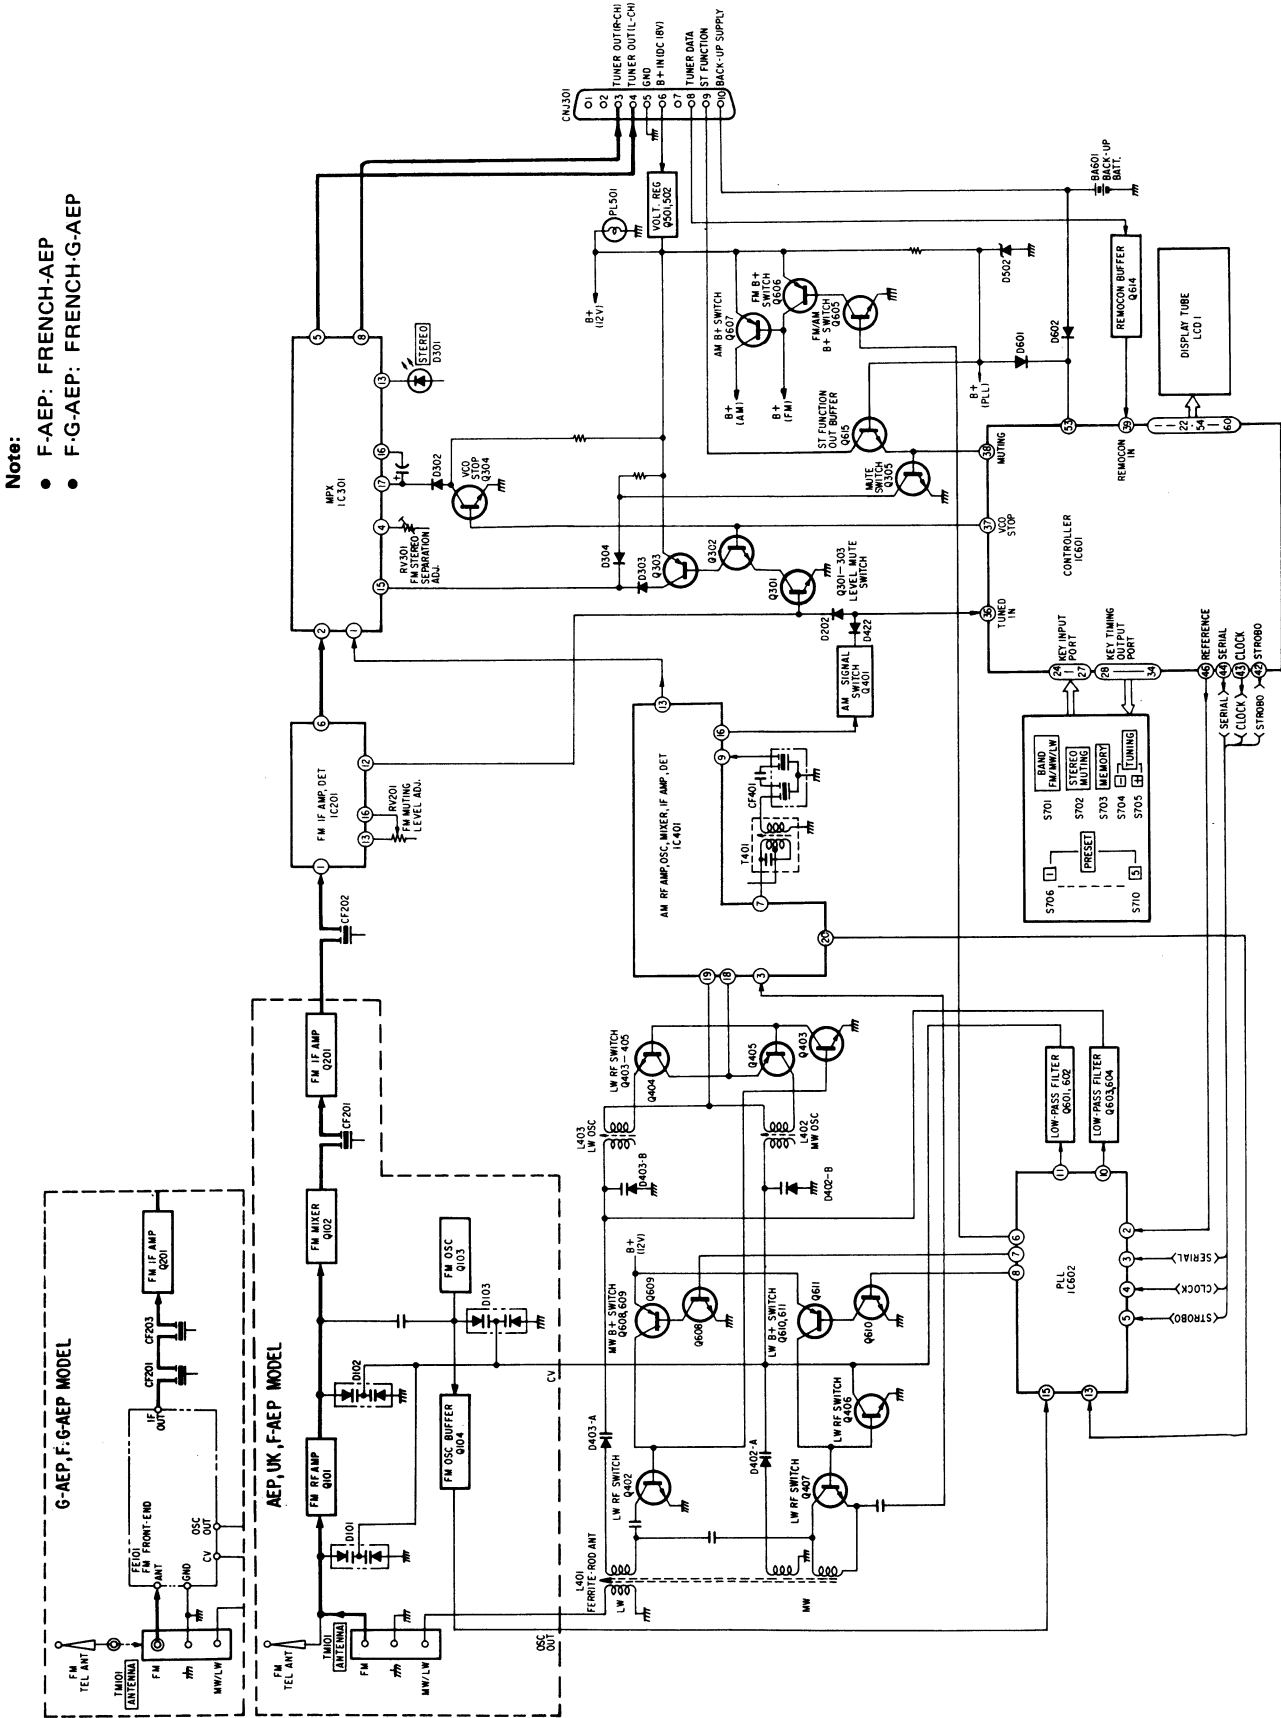

Note:
• F-AEP: FRENCH-AEP
• F-G-AEP: FRENCH-G-AEP

SECTION 2 ADJUSTMENTS

FH-150R
ST-177R

(AEP, UK model)

FH-150R
ST-177R

(AEP, UK model)


FM SECTION 1

Setting:

BAND selector switch FM

FM OSC Voltage Adjustment



Setting:

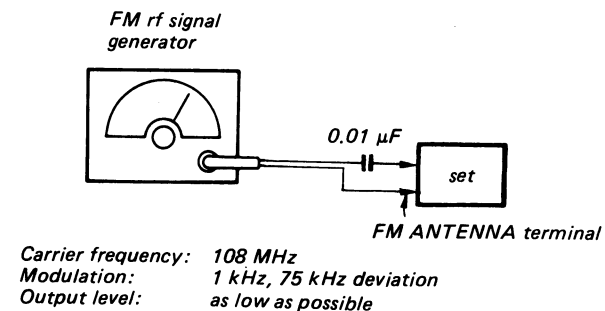

Procedure:

1. Push the TUNING (+, -) button for 108 MHz.
2. Adjust L105 for 8.9 - 9 V reading on the VOM.

[FE BOARD] (CONDUCTOR SIDE)

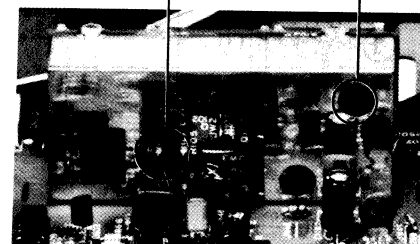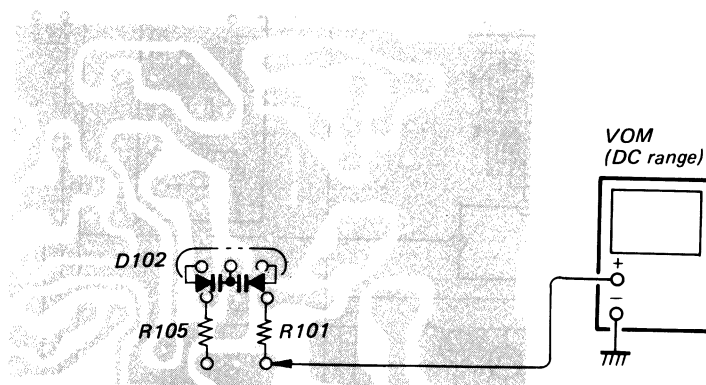


FE board

G-AEP, F-G-AEP Model:

The FM front-end is carefully adjusted at the factory and is supplied as one whole block for replacement.

FM Tracking Adjustment (Except for G-AEP, F-G-AEP model)


Setting:

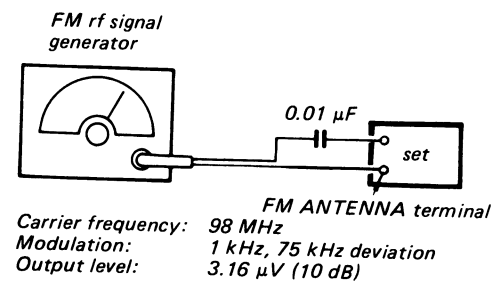


Procedure:

1. Push TUNING (+, -) button for 98 MHz.
2. Approach L102 and L103 not to contact each other.
3. Adjust L101 and L103, and repeat the adjustment 2 - 3 times for maximum VTVM reading.


(Adjust L103 in the direction as shown by arrow Ⓐ).

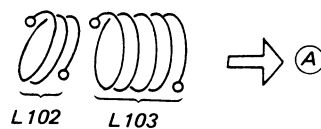


Note: Do not touch L102.
• F-G-AEP: FRENCH-G-AEP

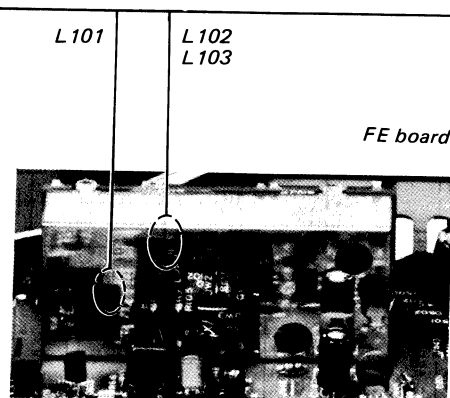

FE board

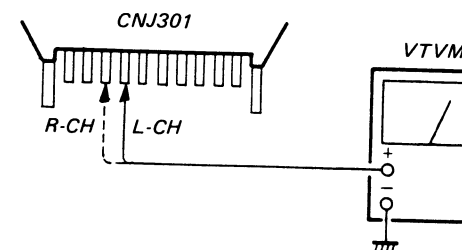


tuner board

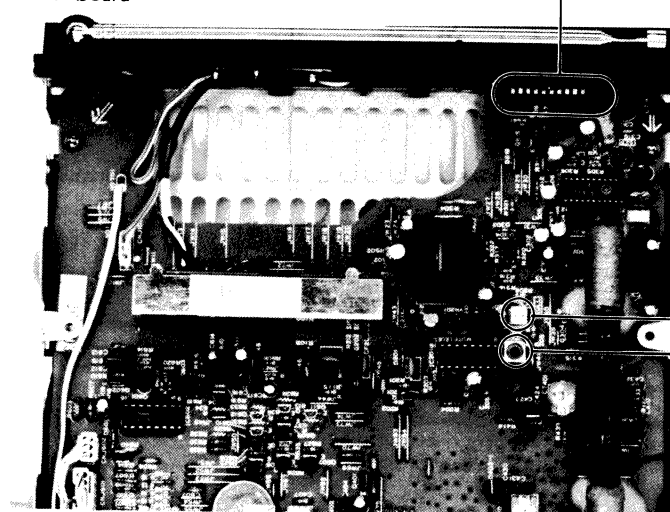


Note: FM discriminator alignment should be made after FM tracking adjustment.

FM Discriminator Alignment (NULL Check)

Setting:

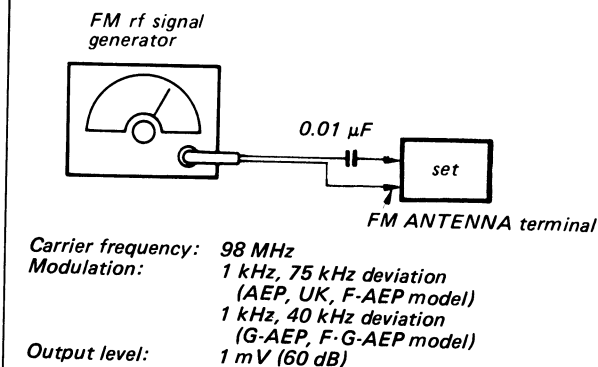

VOM
(DC range)

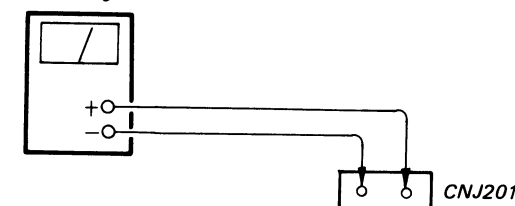

Procedure:

1. Push the TUNING (+, -) button for 98 MHz.
2. Adjust T201 for 0 V reading on the VOM.

Note:

- F-AEP: FRENCH-AEP
- F-G-AEP: FRENCH-G-AEP

CNJ201

T201



(AEP, UK model)

FH-15OR
ST-177R

FH-15OR
ST-177R

(AEP, UK model)


FM SECTION 2

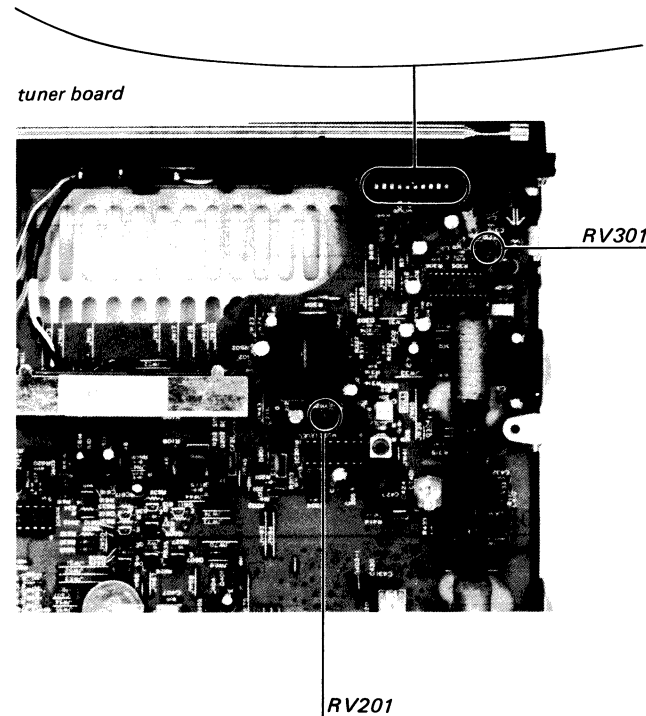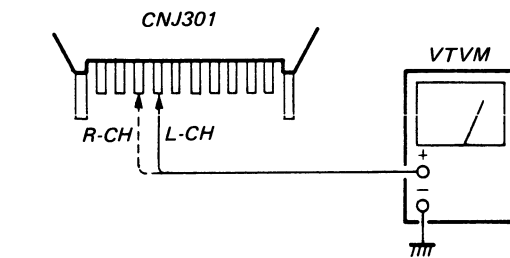

FM Muting Level Adjustment

Setting:
STEREO MUTING switch ON

Procedure:

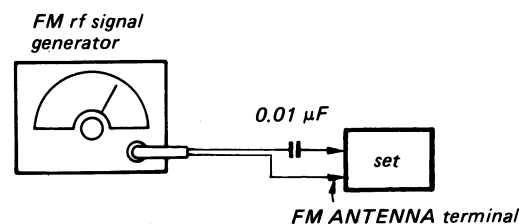

Carrier frequency: 98 MHz
Modulation: 1 kHz, 75 kHz deviation (AEP, UK, F-AEP model)
1 kHz, 40 kHz deviation (G-AEP, F-G-AEP model)
Output level: 17.9 µV (25 dB)


1. Push the TUNING (+, -) button for 98 MHz.
2. Adjust RV201 for a point the VTVM reading just drops to 0 V.

Note:
• F-AEP: FRENCH-AEP
• F-G-AEP: FRENCH-G-AEP

FM Stereo Separation Adjustment

Setting:
STEREO MUTING switch ON

Procedure:

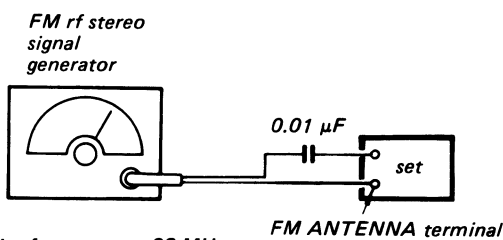

Carrier frequency: 98 MHz
Modulation: audio (1 kHz):
33.75 kHz deviation (AEP, UK, F-AEP model)
20 kHz deviation (G-AEP, F-G-AEP model)
pilot (19 kHz): 7.5 kHz deviation
sub-channel (38 kHz):
33.75 kHz deviation (AEP, UK, F-AEP model)
20 kHz deviation (G-AEP, F-G-AEP model)
Output level: 1 mV (60 dB)
Mode: stereo

FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	(A)
R-CH	L-CH	(B) Adjust RT301 for minimum reading.
R-CH	R-CH	(C)
L-CH	R-CH	(D) Adjust RT301 for minimum reading.

L-CH Stereo separation: (A) - (B)
R-CH Stereo separation: (C) - (D)


The separations of both channels should be equal.

Note:
• F-AEP: FRENCH-AEP
• F-G-AEP: FRENCH-G-AEP



AM SECTION

Setting:

BAND selector switch: MW or LW

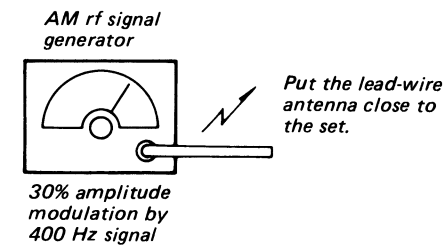

- Repeat the procedures in each adjustment several times, and the OSC voltage and tracking adjustments should be finally done by the trimmer capacitors.

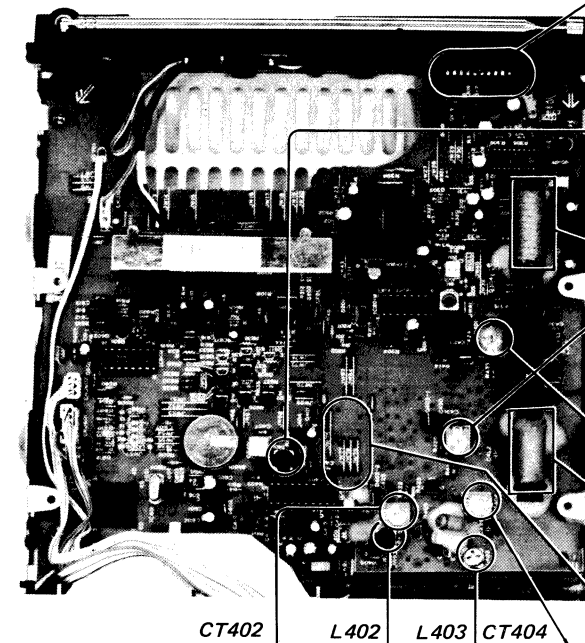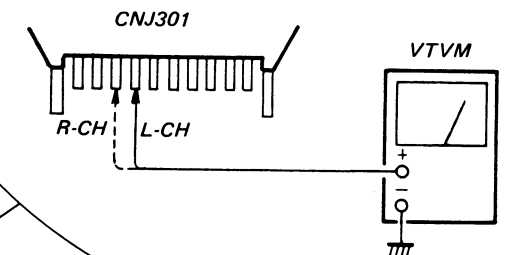

AM IF ALIGNMENT

Adjust for a maximum reading on VTVM.

T401 450 kHz

LW TRACKING ADJUSTMENT

Adjust for a maximum reading on VTVM.

L401 170 kHz

CT403 310 kHz

Note: MW tracking adjustment should be made after LW tracking adjustment.

MW TRACKING ADJUSTMENT

Adjust for a maximum reading on VTVM.


CT401 1,404 kHz

L401 603 kHz

MW/LW OSC Voltage Adjustment

Procedure:

1. Set BAND selector switch to MW.
2. Push TUNING (+, -) button for 531 kHz. Adjust L402 for 0.95 - 1.05 V VOM (2) reading.
3. Push the button for 1,602 kHz. Adjust CT402 for 8.9 - 9.0 V VOM (2) reading.
4. Set BAND selector switch to LW.
5. Push TUNING (+, -) button for 153 kHz. Adjust L403 for 0.95 - 1.05 V VOM (1) reading.
6. Push the button for 344 kHz. Adjust CT404 for 8.9 - 9.0 V VOM (1) reading.

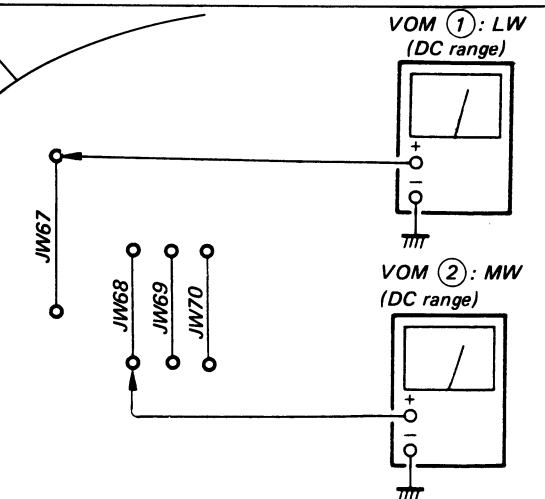

1 | 2


(AEP, UK model)

FH-150R
ST-177R

FH-150R
ST-177R

(AEP, UK model)

- Refer to page ST-12 for Semiconductor Lead Layouts.

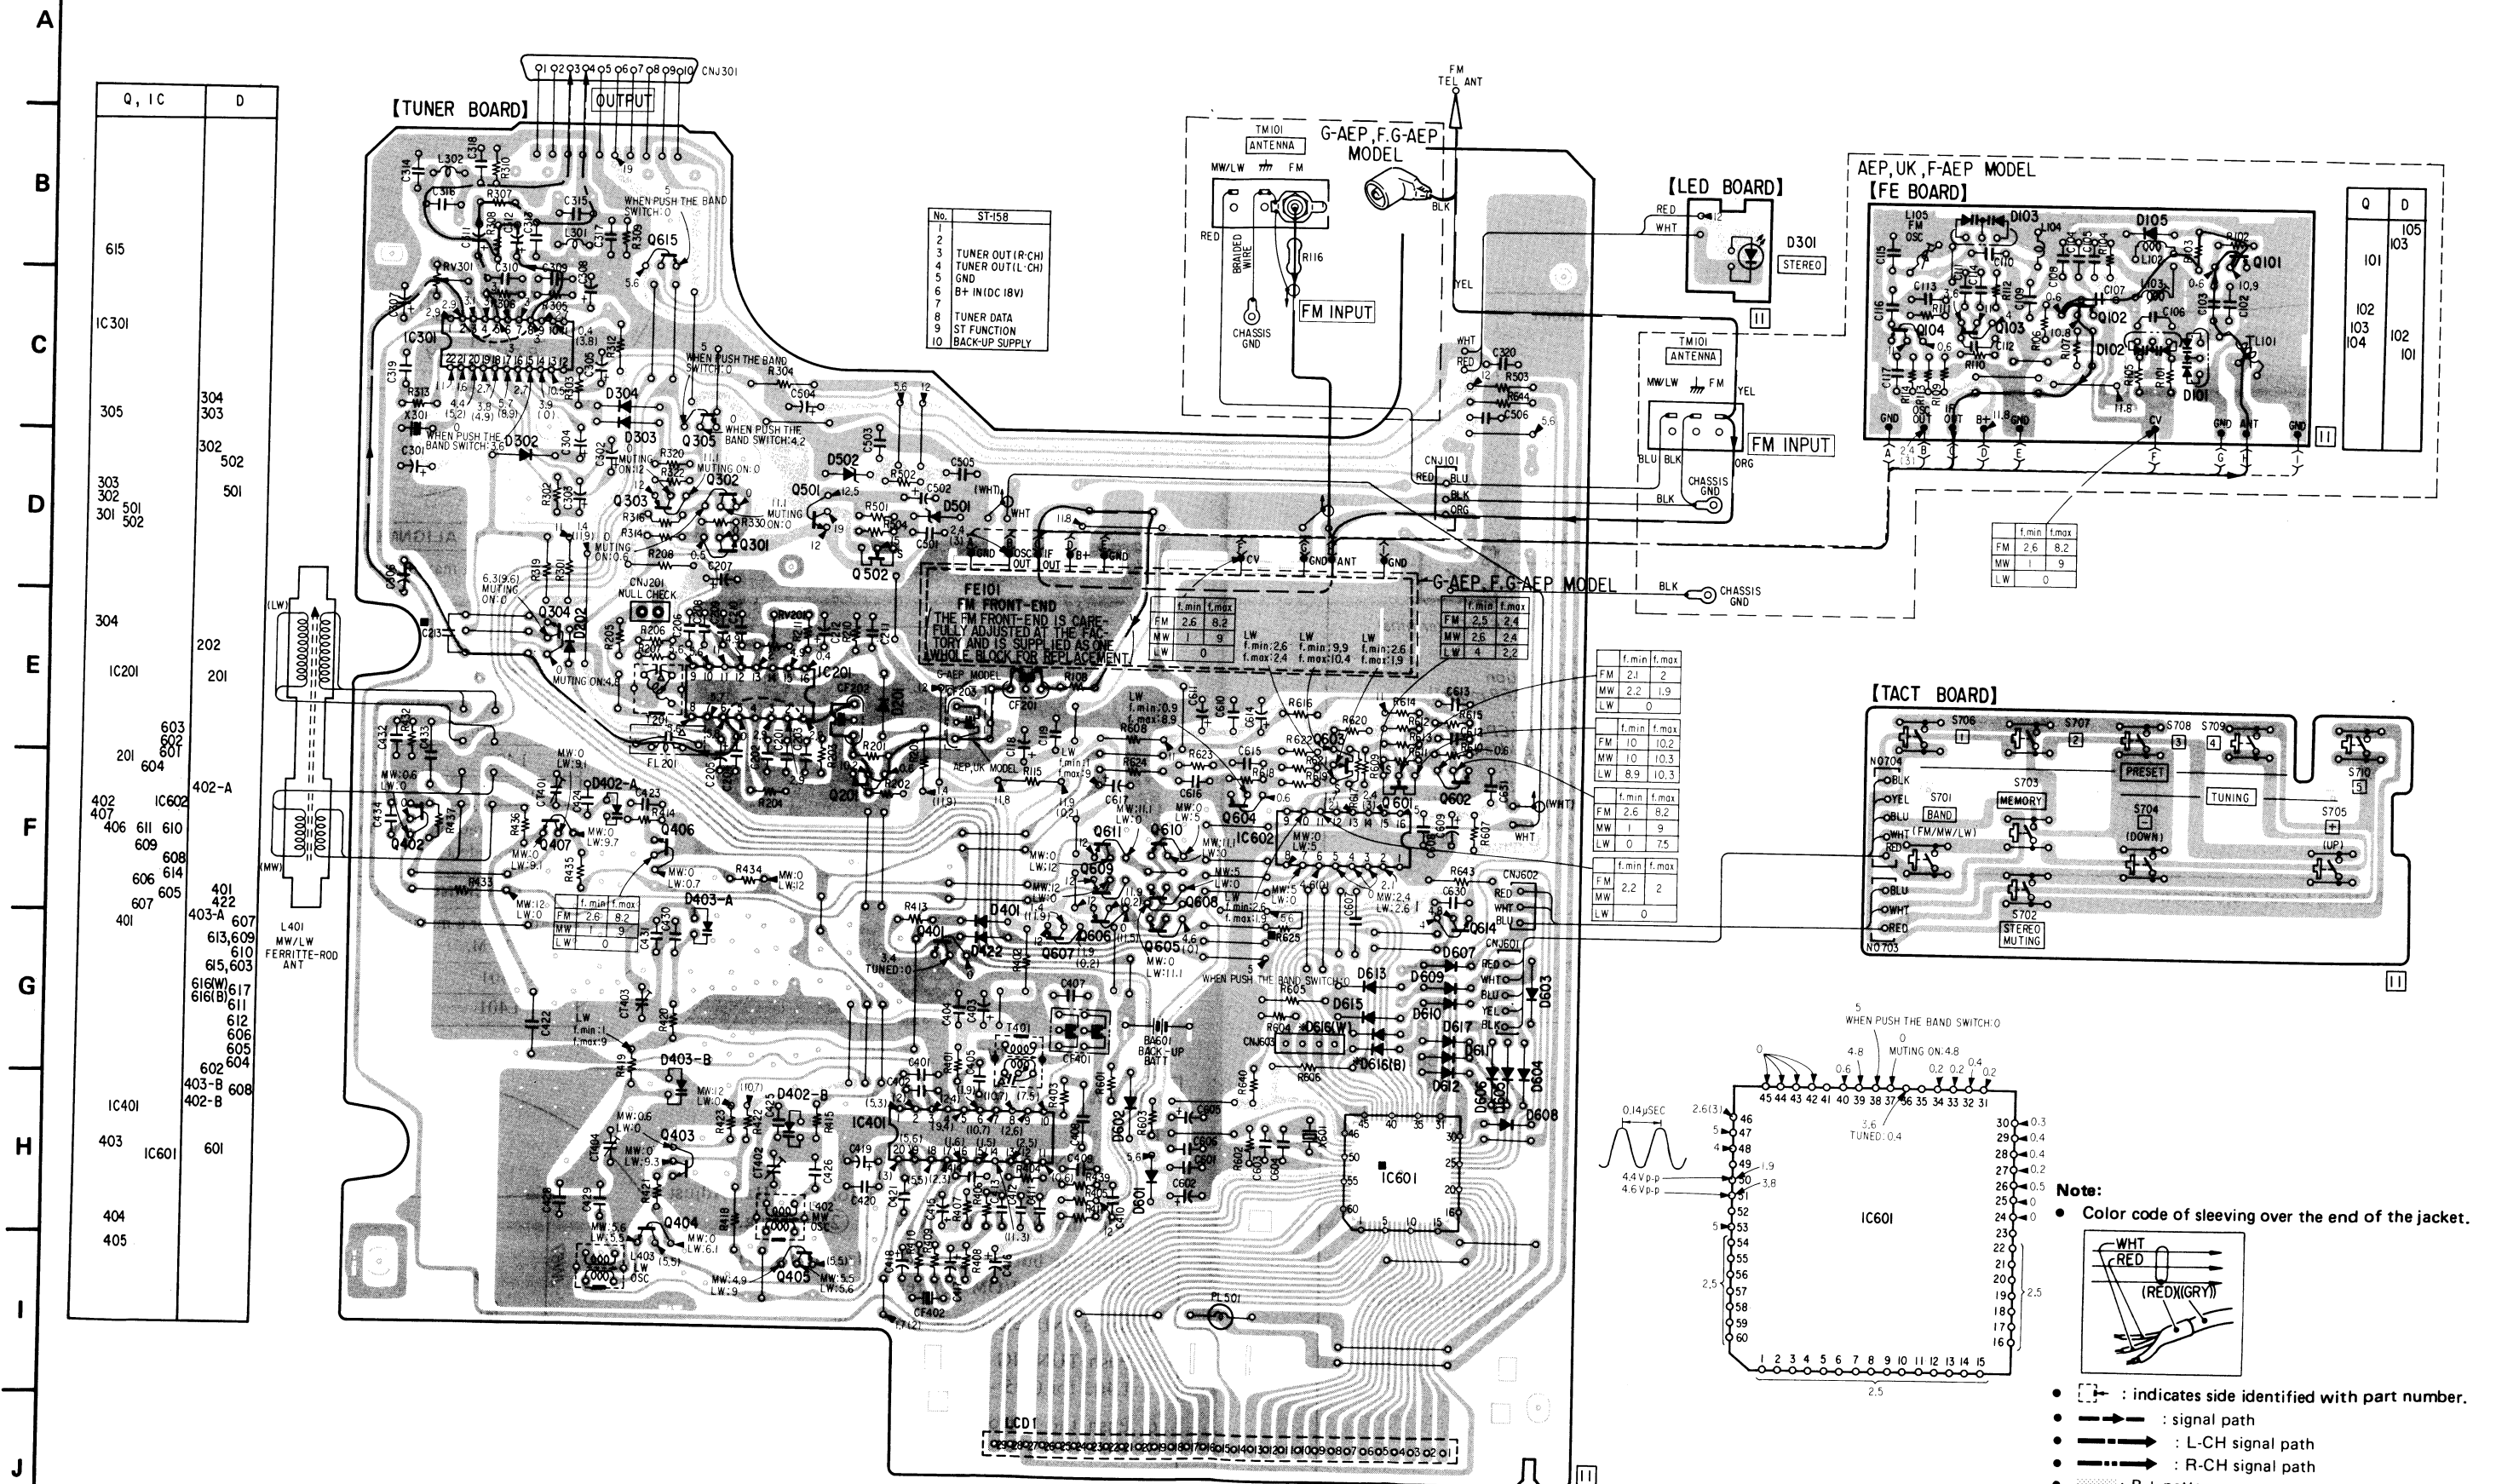

Note:

- Color code of sleeving over the end of the jacket.

- : indicates side identified with part number.
- : signal path
- : L-CH signal path
- : R-CH signal path
- : B + pattern
- : F-AEP: FRENCH-AEP
- : F-G-AEP: FRENCH-G-AEP


3-2. SCHEMATIC DIAGRAM


(AEP, UK model)

FH-150R
ST-177R


FH-150R
ST-177R

(AEP, UK model)

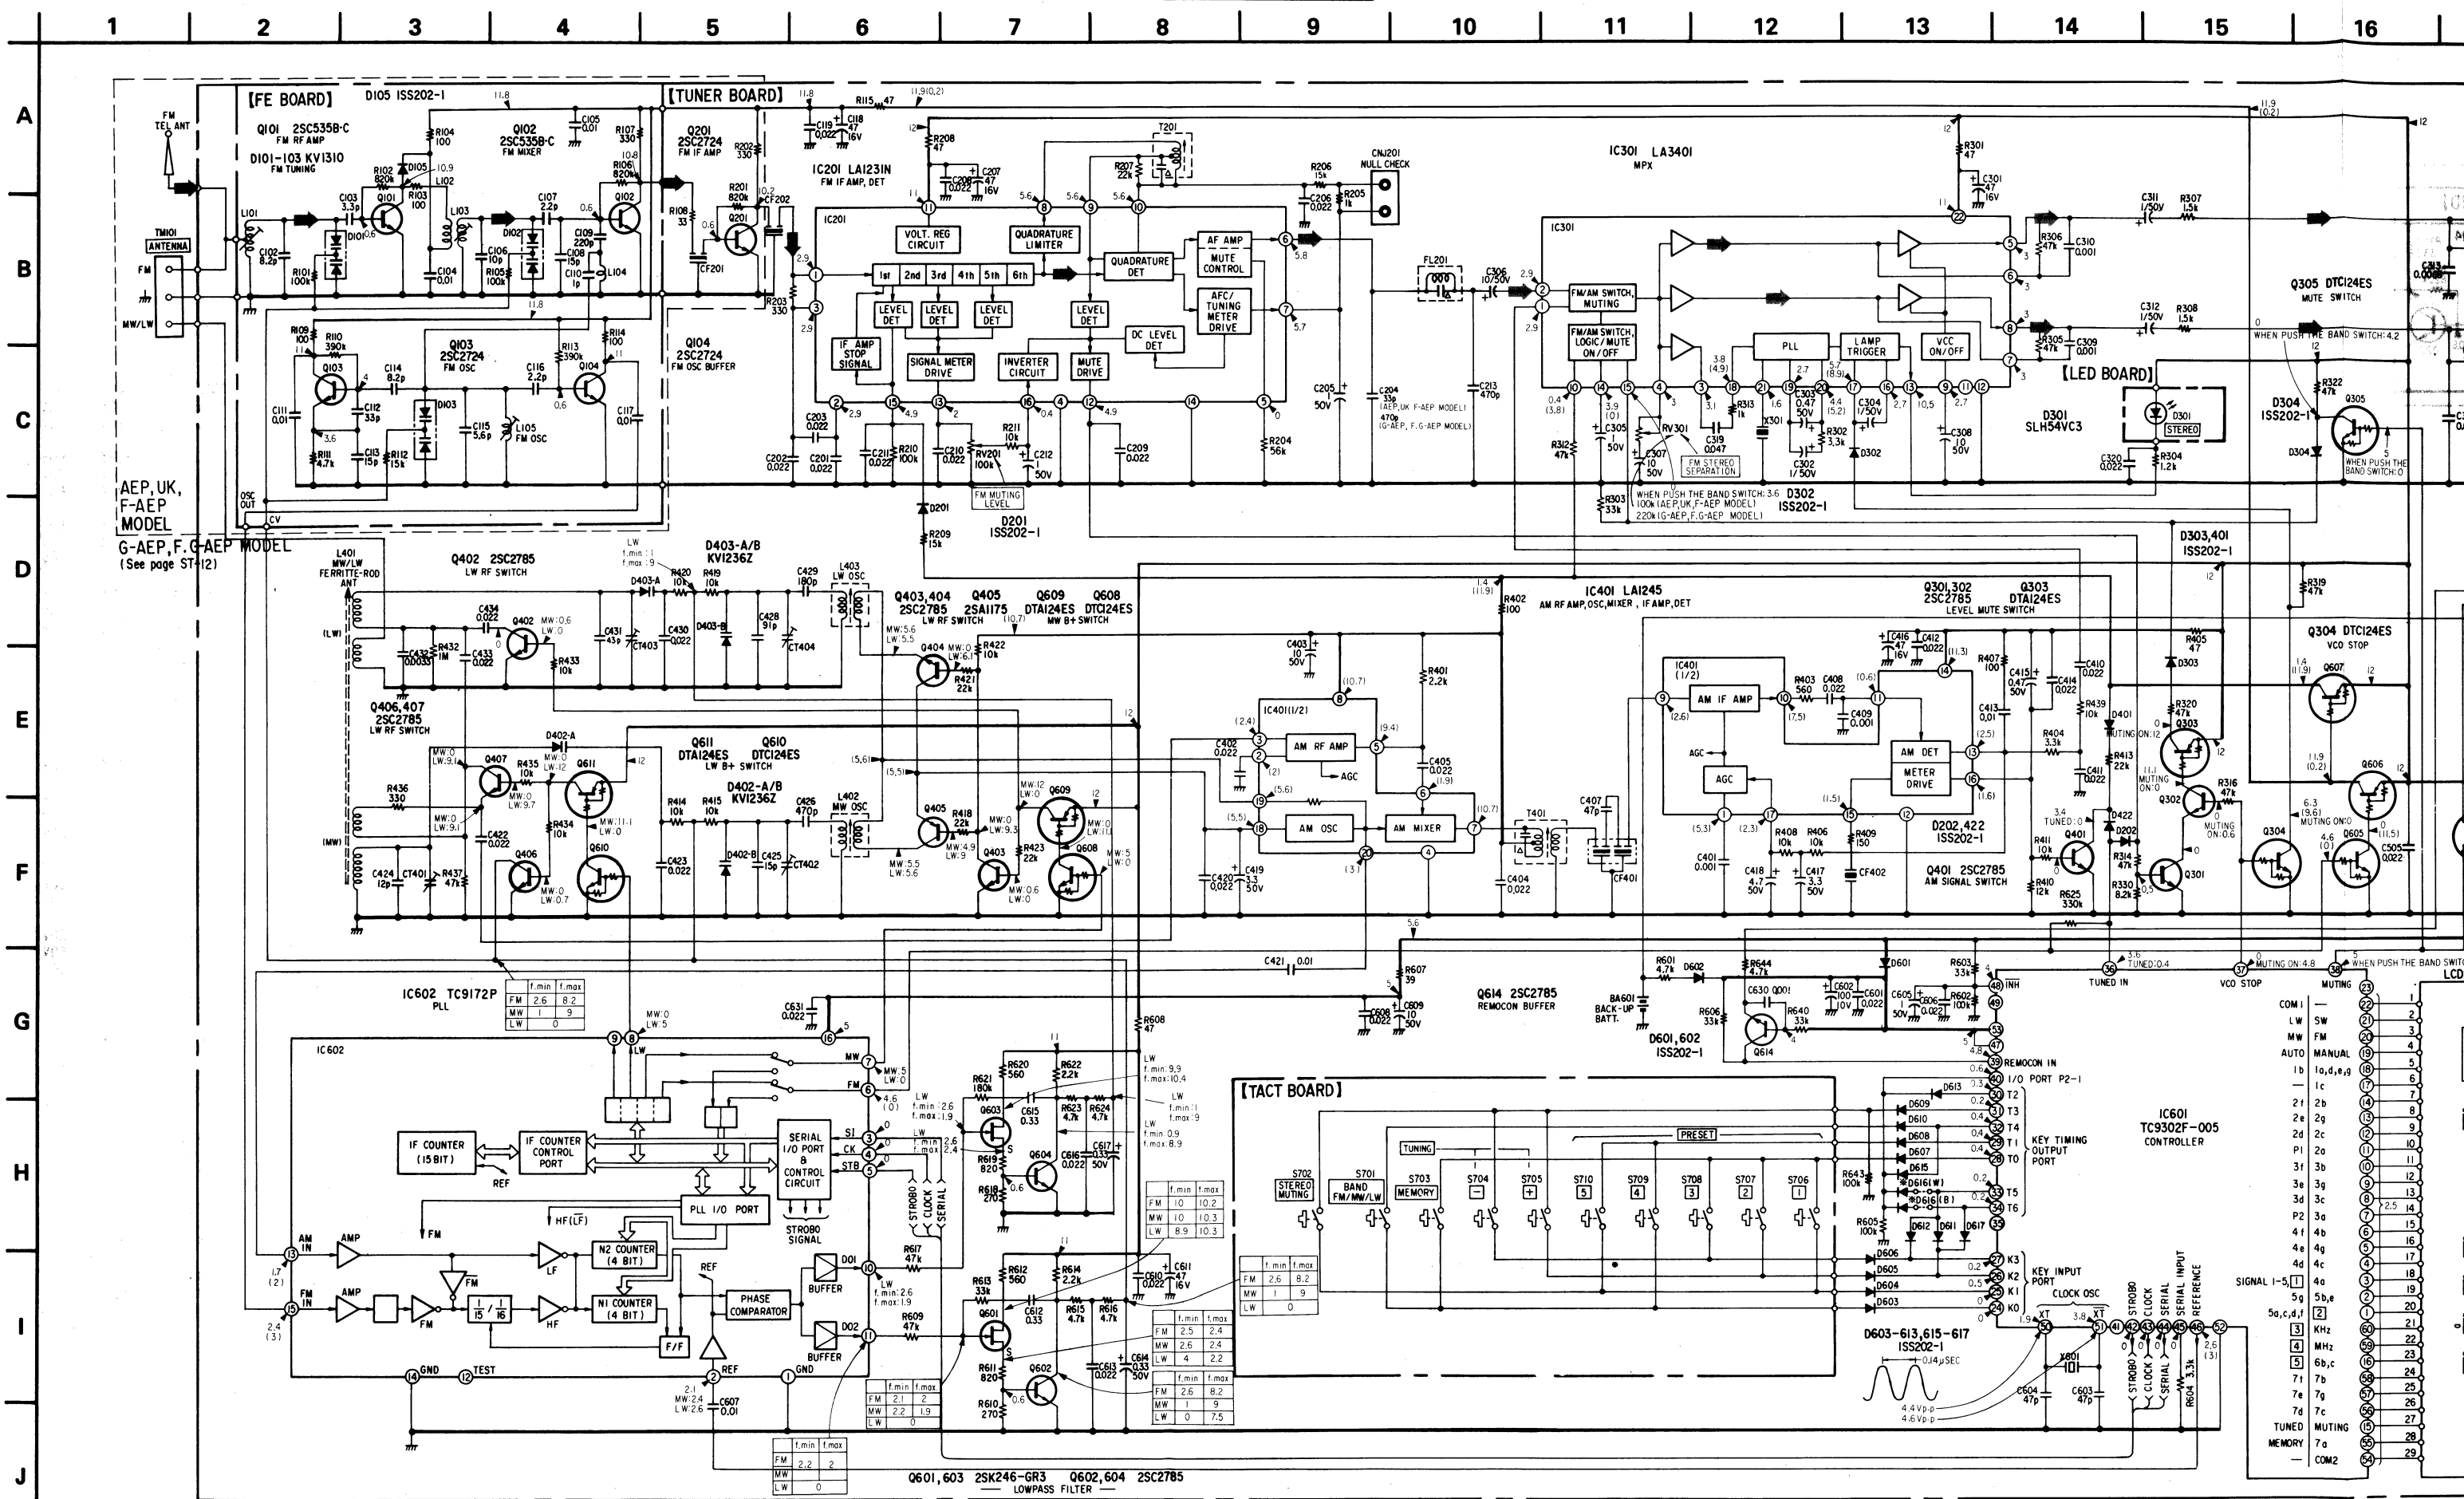


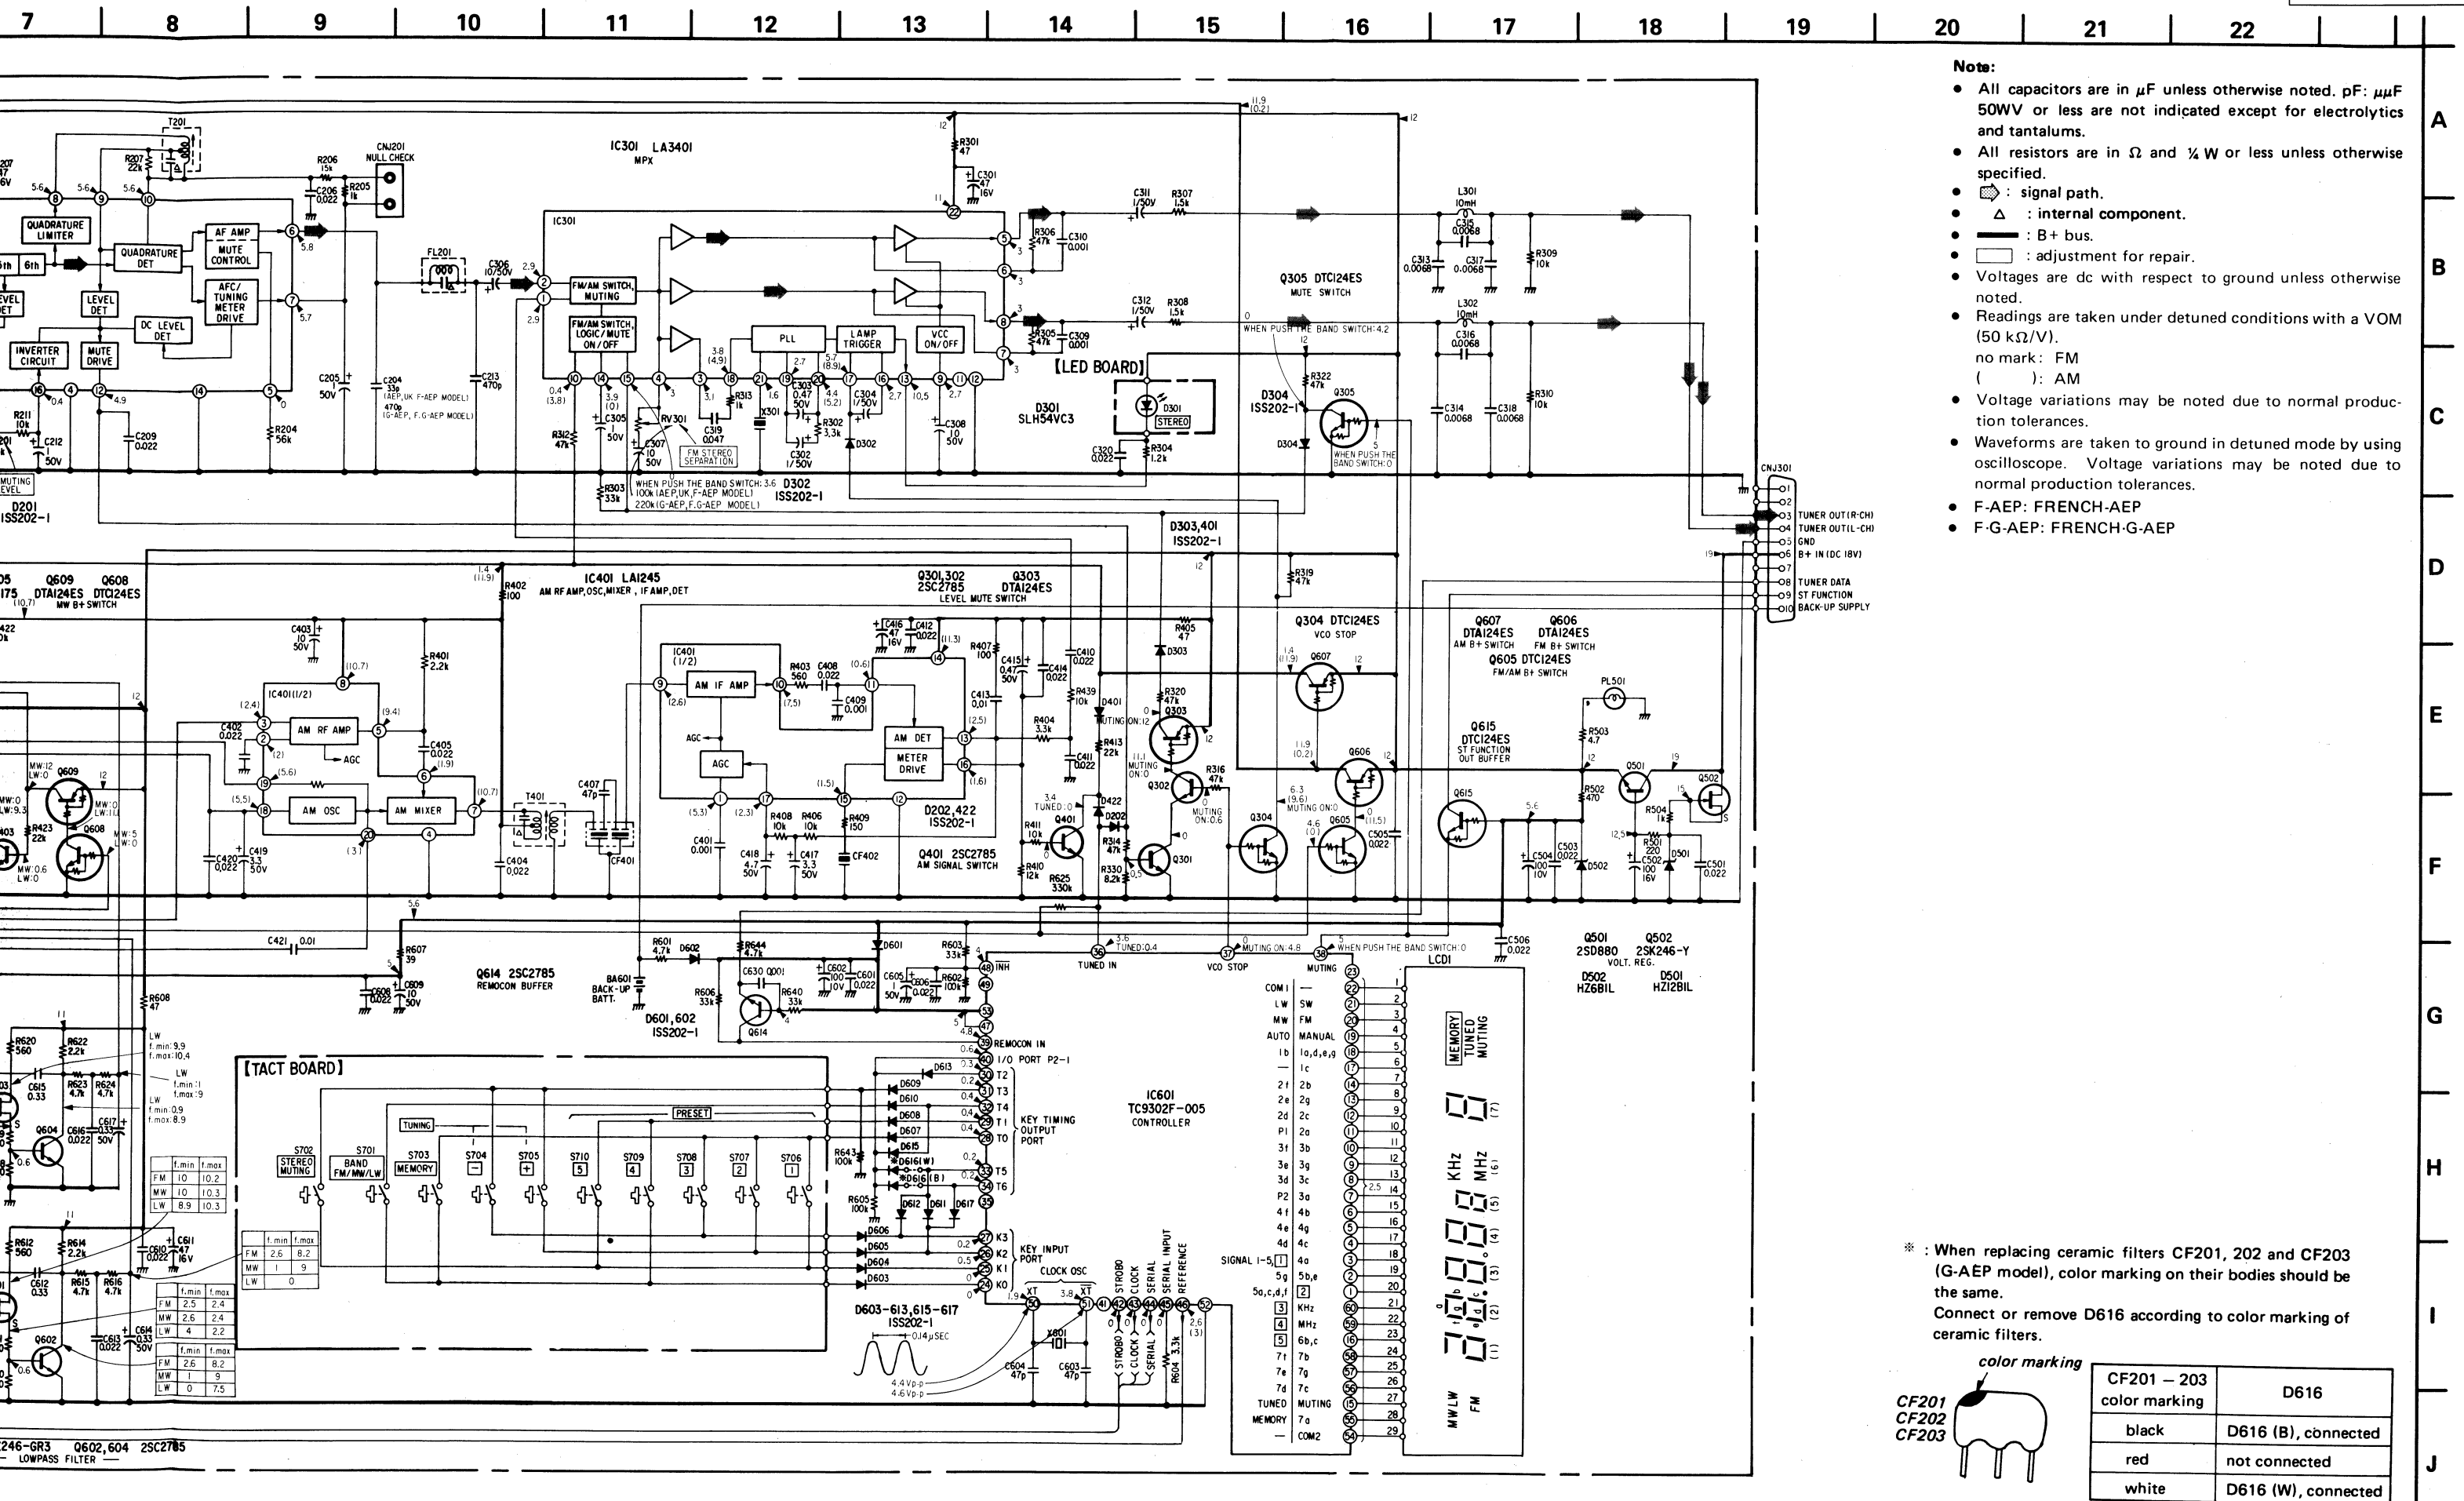

3-3. FM FRONT-END SCHEMATIC DIAGRAM (G-AEP, FRENCH-G-AEP MODEL)

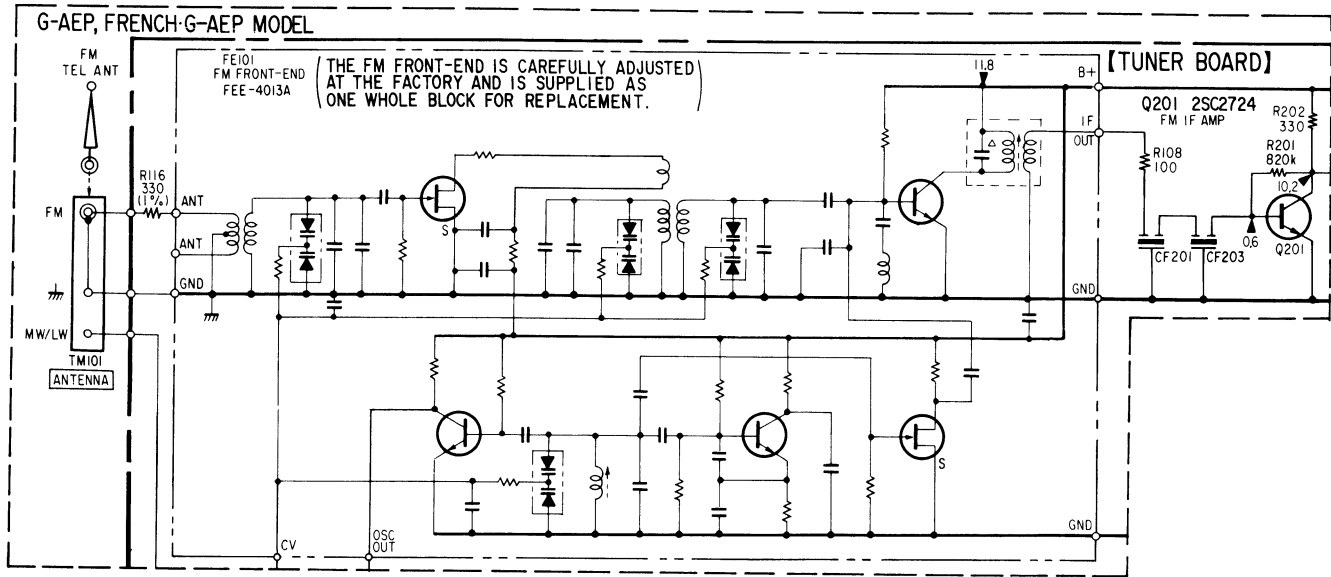


• Semiconductor Lead Layouts

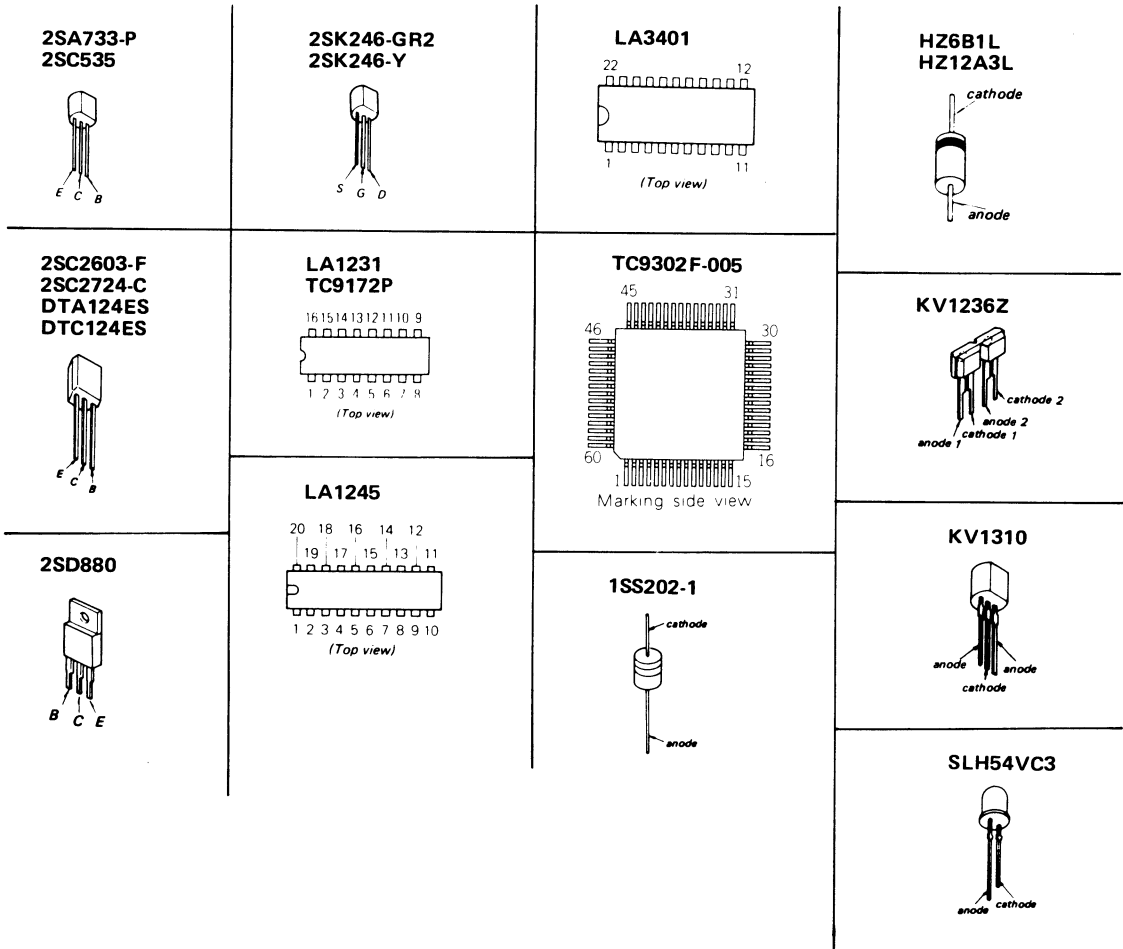

SECTION 4 (AEP, UK model)
EXPLODED VIEWS AND PARTS LIST

NOTE:
The mechanical parts with no reference number in the exploded views are not supplied.
Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
The construction parts of an assembled part are indicated with a collation number in the remark column.

- F-AEP: FRENCH-AEP
F-G-AEP: FRENCH-G-AEP

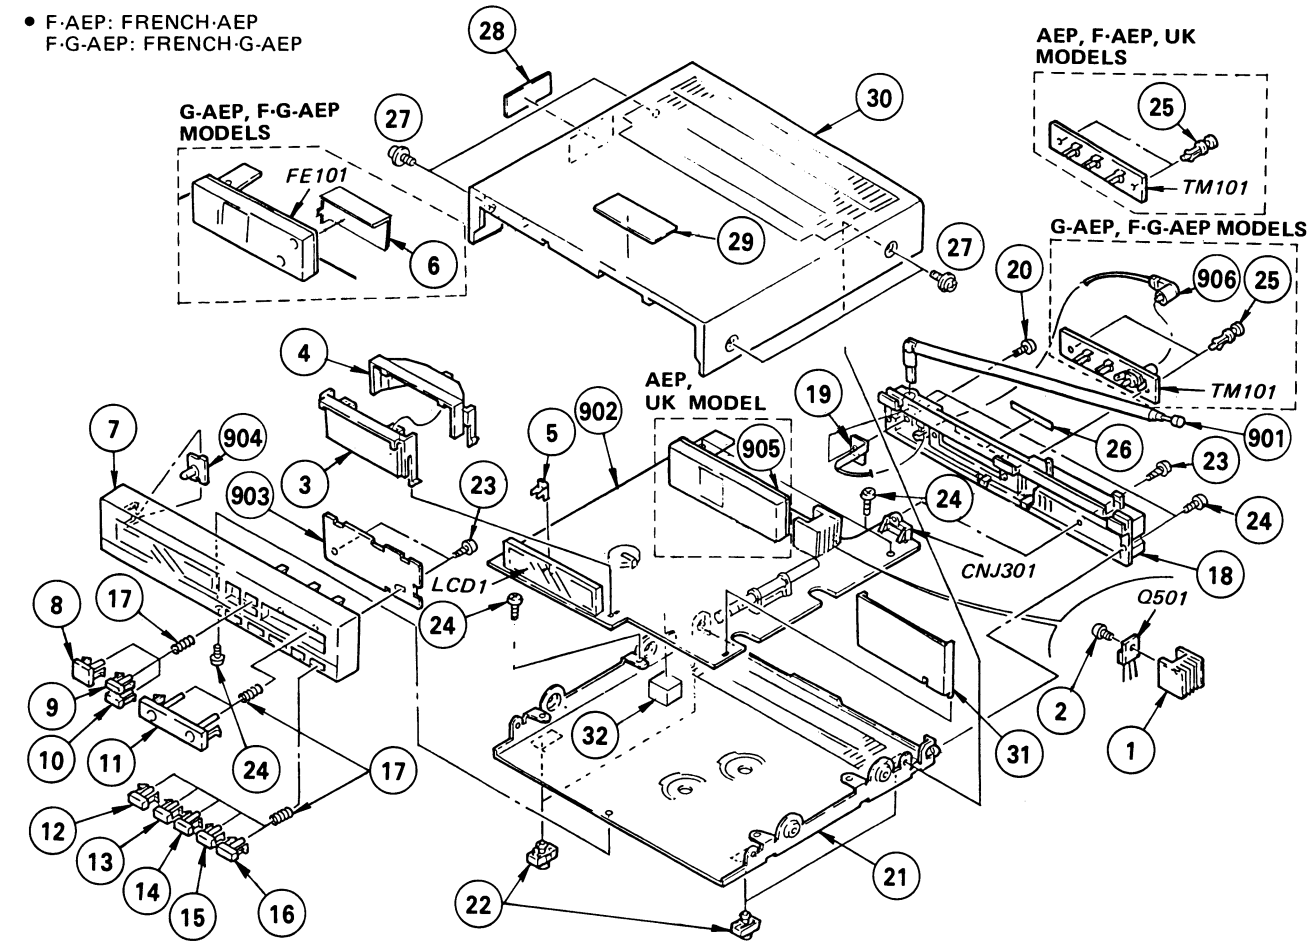

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	*4-363-146-21	HEAT SINK, V.OUT		26	*4-910-084-01	(AEP, F-G-AEP, UK)...LABEL, ANTENNA	
2	7-685-646-81	SCREW +BVTT 3X8 TYPE2		27	4-910-085-01	(G-AEP, F-G-AEP)...LABEL, ANTENNA	
3	*4-909-633-01	ILLUMINATOR			4-886-821-21	SCREW, M3 CASE STOPPER	
4	*4-904-515-01	HOUSE, LAMP		28	*4-914-318-01	(AEP, UK)...LABEL, MODEL NUMBER	
5	*4-904-507-01	BLIND, LAMP			*4-914-313-01	(F-AEP, F-G-AEP)...LABEL, MODEL NUMBER	
6	*4-910-359-01	PLATE, SHIELD			*4-914-365-01	(G-AEP)...LABEL, MODEL NUMBER	
7	X-4910-084-1	PANEL ASSY, FRONT		29	4-884-927-00	LABEL (SYSTEM), CAUTION	
8	4-910-093-11	BUTTON, SQUARE (BAND)		30	X-4902-904-1	CASE ASSY	
9	4-910-087-01	BUTTON (B), SQUARE (STEREO MUTING)		31	*4-910-090-01	PLATE, SHIELD	
10	4-910-087-71	BUTTON (B), SQUARE (MEMORY)		32	9-911-842-XX	CUSHION (F)	
11	4-910-094-11	BUTTON, SQUARE (TUNING)		901	1-501-321-11	ANTENNA, TELESCOPIC	
12	4-914-314-01	BUTTON, SQUARE (PRESET 1)		902	*A-4351-529-A	(AEP, F-AEP, UK)...MOUNTED PCB, TUNER	
13	4-914-314-11	BUTTON, SQUARE (PRESET 2)			*A-4351-530-A	(G-AEP, F-G-AEP)...MOUNTED PCB, TUNER	
14	4-914-314-21	BUTTON, SQUARE (PRESET 3)		903	*1-615-524-11	PC BOARD, TACT	
15	4-914-314-31	BUTTON, SQUARE (PRESET 4)		904	*1-615-525-11	PC BOARD, LED	
16	4-914-314-41	BUTTON, SQUARE (PRESET 5)		905	*1-615-526-11	(AEP, F-AEP, UK)...PC BOARD, F.E	
17	4-886-032-00	SPRING, COMPRESSION		906	*1-562-908-11	(G-AEP, F-G-AEP)...CONNECTOR, FEMALE (NO SHIELD)	
18	4-910-098-01	PLATE, JACK		CNJ301	1-562-479-12	SOCKET, CONNECTOR 10P	
19	*4-910-081-01	TERMINAL BOARD, ROD ANTENNA		FE101	1-463-611-11	(G-AEP, F-G-AEP)...FRONT END, FM (FEE-4013A)	
20	7-682-548-09	SCREW +B 3X8		LCD1	1-806-874-11	INDICATOR, L-CRYSTAL LT5056	
21	*4-902-941-21	CHASSIS		Q501	8-729-288-02	TRANSISTOR 2SD880	
22	X-4902-937-1	FOOT ASSY, RUBBER		TM101	1-536-733-00	(G-AEP, F-G-AEP)...TERMINAL BOARD, ANTENNA	
23	7-685-646-71	SCREW +BVTT 3X8 TYPE2 N-S		TM101	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA	
24	7-685-871-01	SCREW +BVTT 3X6 (S)					
25	4-829-039-00	RIVET, NYLON					

NOTE:
Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
The construction parts of an assembled part are indicated with a collation number in the remark column.

- F-AEP: FRENCH-AEP
F-G-AEP: FRENCH-G-AEP

Ref.No.	Part No.	Description
901	1-501-321-11	ANTENNA, TELESCOPIC
902	*A-4351-529-A	(AEP, F-AEP, UK)...MOUNTED PCB, TUNER
	*A-4351-530-A	(G-AEP, F-G-AEP)...MOUNTED PCB, TUNER
903	*1-615-524-11	PC BOARD, TACT
904	*1-615-525-11	PC BOARD, LED
905	*1-615-526-11	(AEP, F-AEP, UK)...PC BOARD, F.E
906	*1-562-908-11	(G-AEP, F-G-AEP)...CONNECTOR, FEMALE (NO SHIELD)
BA601	1-562-479-12	SOCKET, CONNECTOR 10P
C102	1-806-874-11	INDICATOR, L-CRYSTAL LT5056
C103	8-729-288-02	TRANSISTOR 2SD880
C104	1-536-733-00	(G-AEP, F-G-AEP)...TERMINAL BOARD, ANTENNA
C105	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C106	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C107	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C108	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C109	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C110	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C111	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C112	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C113	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C114	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C115	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C116	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C117	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C118	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C119	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C201	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C202	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C203	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C204	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C205	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C206	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C207	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C208	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C209	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C210	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C211	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C212	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C301	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C302	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C303	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C304	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA
C305	1-536-901-11	(AEP, F-AEP, UK)...TERMINAL BOARD 3P, ANTENNA

SECTION 4 (AEP, UK model) EXPLODED VIEWS AND PARTS LIST

FH-150R
ST-177R

FH-150R
ST-177R

(AEP, UK model)

SECTION 5 ELECTRICAL PARTS LIST


NOTE:

The mechanical parts with no reference number in the exploded views are not supplied.

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- F-AEP: FRENCH-AEP
- F-G-AEP: FRENCH-G-AEP

The construction parts of an assembled part are indicated with a collation number in the remark column.

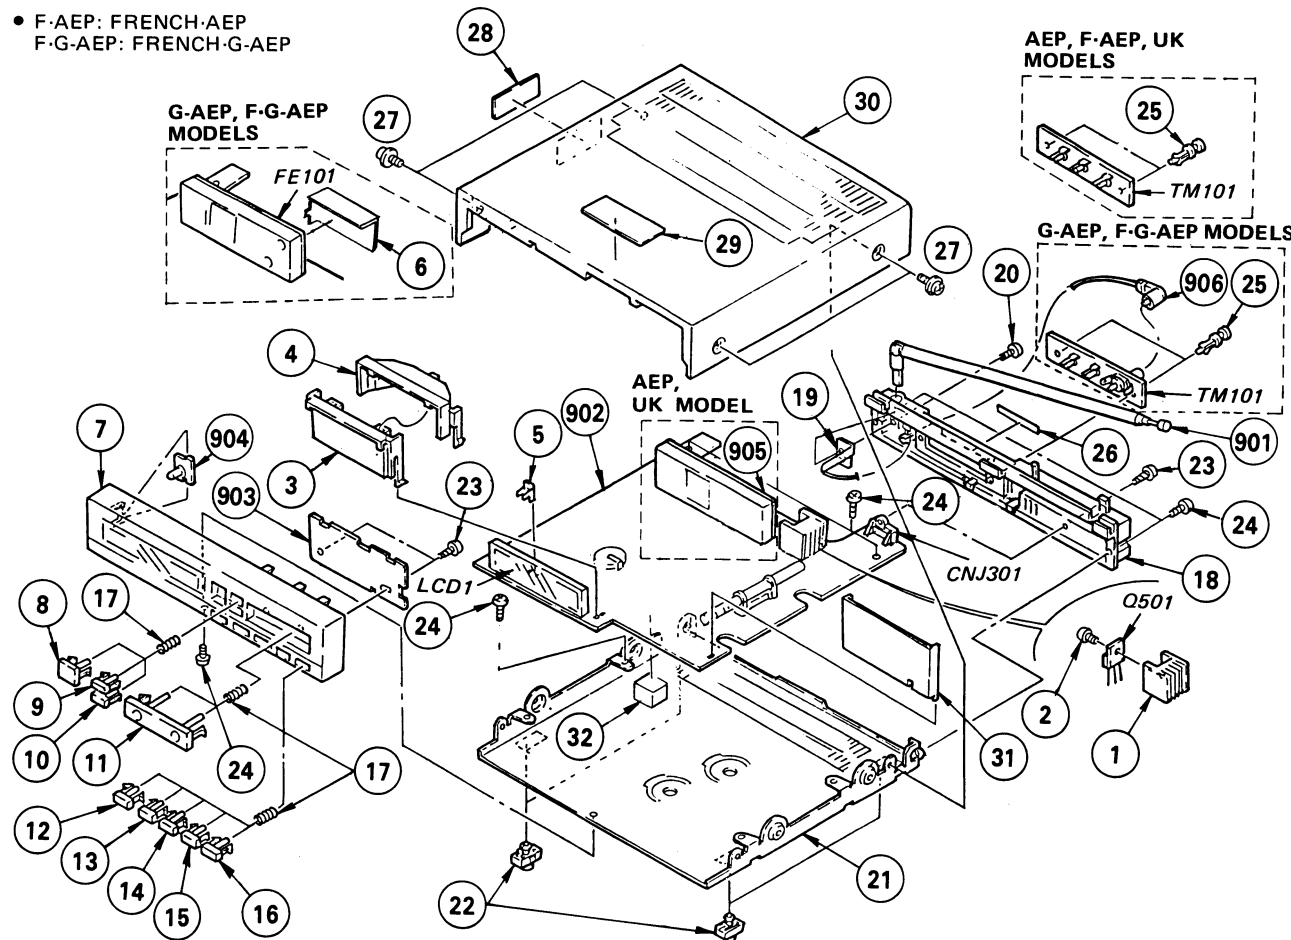

No.	Part No.	Description	Remarks
1	*4-363-146-21	HEAT SINK, V.OUT	
2	7-685-646-81	SCREW +BVTT 3X8 TYPE2	
3	*4-909-633-01	ILLUMINATOR	
4	*4-904-515-01	HOUSE, LAMP	
5	*4-904-507-01	BLIND, LAMP	
6	*4-910-359-01	PLATE, SHIELD	
7	X-4910-084-1	PANEL ASSY, FRONT	
8	4-910-093-11	BUTTON, SQUARE (BAND)	
9	4-910-087-01	BUTTON (B), SQUARE (STEREO MUTING)	
10	4-910-087-71	BUTTON (B), SQUARE (MEMORY)	
11	4-910-094-11	BUTTON, SQUARE (TUNING)	
12	4-914-314-01	BUTTON, SQUARE (PRESET 1)	
13	4-914-314-11	BUTTON, SQUARE (PRESET 2)	
14	4-914-314-21	BUTTON, SQUARE (PRESET 3)	
15	4-914-314-31	BUTTON, SQUARE (PRESET 4)	
16	4-914-314-41	BUTTON, SQUARE (PRESET 5)	
17	4-886-032-00	SPRING, COMPRESSION	
18	4-910-098-01	PLATE, JACK	
19	*4-910-081-01	TERMINAL BOARD, ROD ANTENNA	
20	7-682-548-09	SCREW +B 3X8	
21	*4-902-941-21	CHASSIS	
22	X-4902-937-1	FOOT ASSY, RUBBER	
23	7-685-646-71	SCREW +BVTT 3X8 TYPE2 N-S	
24	7-685-871-01	SCREW +BVTT 3X6 (S)	
25	4-829-039-00	RIVET, NYLON	

No.	Part No.	Description	Remarks
26	*4-910-084-01	(AEP,F-G-AEP,UK)...LABEL, ANTENNA	
27	4-910-085-01	(G-AEP,F-G-AEP)...LABEL, ANTENNA	
28	4-886-821-21	SCREW, M3 CASE STOPPER	
29	*4-914-318-01	(AEP,UK)...LABEL, MODEL NUMBER	
30	*4-914-313-01	(F-AEP,F-G-AEP)...LABEL, MODEL NUMBER	
31	*4-914-365-01	(G-AEP)...LABEL, MODEL NUMBER	
32	4-884-927-00	LABEL (SYSTEM), CAUTION	
33	X-4902-904-1	CASE ASSY	
34	*4-910-090-01	PLATE, SHIELD	
35	9-911-842-XX	CUSHION (F)	
36	1-501-321-11	ANTENNA, TELESCOPIC	
37	*A-4351-529-A	(AEP,F-AEP,UK)...MOUNTED PCB, TUNER	
38	*A-4351-530-A	(G-AEP,F-G-AEP)...MOUNTED PCB, TUNER	
39	*1-615-524-11	PC BOARD, TACT	
40	*1-615-525-11	PC BOARD, LED	
41	*1-615-526-11	(AEP,F-AEP,UK)...PC BOARD, F.E	
42	*1-562-908-11	(G-AEP,F-G-AEP)...CONNECTOR, FEMALE (NO SHIELD)	
43	CNJ301	1-562-479-12 SOCKET, CONNECTOR 10P	
44	FE101	1-463-611-11 (G-AEP,F-G-AEP)...FRONT END, FM (FEE-4013A)	
45	LCD1	1-806-874-11 INDICATOR, L-CRYSTAL LT5056	
46	Q501	8-729-288-02 TRANSISTOR 2SD880	
47	TM101	1-536-733-00 (G-AEP,F-G-AEP)...TERMINAL BOARD, ANTENNA	
48	TM101	1-536-901-11 (AEP,F-AEP,UK)...TERMINAL BOARD 3P, ANTENNA	

NOTE:

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

- F-AEP: FRENCH-AEP
- F-G-AEP: FRENCH-G-AEP

ELECTRICAL PARTS

Ref.No.	Part No.	Description
901	1-501-321-11	ANTENNA, TELESCOPIC
902	*A-4351-529-A	(AEP,F-AEP,UK)...MOUNTED PCB, TUNER
	*A-4351-439-A	(G-AEP,F-G-AEP)...MOUNTED PCB, TUNER
903	*1-615-524-11	PC BOARD, TACT
904	*1-615-525-11	PC BOARD, LED
905	*1-615-526-11	(AEP,F-AEP,UK)...PC BOARD, F.E
906	*1-562-908-11	(G-AEP,F-G-AEP)...CONNECTOR, FEMALE (NO SHIELD)
BA601	1-528-120-00	BATTERY, LITHIUM (CR-2025)
C102	1-162-198-31	(AEP,F-AEP,UK)...CERAMIC 8.2PF 10% 50V
C103	1-162-193-31	(AEP,F-AEP,UK)...CERAMIC 3.3PF 10% 50V
C104	1-162-306-31	(AEP,F-AEP,UK)...CERAMIC 0.01MF 20% 16V
C105	1-162-306-31	(AEP,F-AEP,UK)...CERAMIC 0.01MF 20% 16V
C106	1-162-199-31	(AEP,F-AEP,UK)...CERAMIC 10PF 5% 50V
C107	1-162-191-31	(AEP,F-AEP,UK)...CERAMIC 2.2PF 10% 50V
C108	1-162-203-31	(AEP,F-AEP,UK)...CERAMIC 15PF 5% 50V
C109	1-162-286-31	(AEP,F-AEP,UK)...CERAMIC 220PF 10% 50V
C110	1-162-187-31	(AEP,F-AEP,UK)...CERAMIC 1PF 10% 50V
C111	1-162-306-31	(AEP,F-AEP,UK)...CERAMIC 0.01MF 20% 16V
C112	1-162-211-31	(AEP,F-AEP,UK)...CERAMIC 33PF 5% 50V
C113	1-162-203-31	(AEP,F-AEP,UK)...CERAMIC 15PF 5% 50V
C114	1-162-198-31	(AEP,F-AEP,UK)...CERAMIC 8.2PF 10% 50V
C115	1-162-196-31	(AEP,F-AEP,UK)...CERAMIC 5.6PF 10% 50V
C116	1-162-191-31	(AEP,F-AEP,UK)...CERAMIC 2.2PF 10% 50V
C117	1-162-306-31	CERAMIC 0.01MF 20% 16V
C118	1-123-332-00	ELECT 47MF 20% 25V
C119	1-101-005-00	CERAMIC 0.022MF 50V
C201	1-101-005-00	CERAMIC 0.022MF 50V
C202	1-101-005-00	CERAMIC 0.022MF 50V
C203	1-101-005-00	CERAMIC 0.022MF 50V
C204	1-162-211-31	(AEP,F-AEP,UK)...CERAMIC 33PF 5% 50V
C205	1-162-290-31	(G-AEP,F-G-AEP)...CERAMIC 470PF 10% 50V
C206	1-123-380-00	ELECT 1MF 20% 50V
C207	1-101-005-00	CERAMIC 0.022MF 50V
C208	1-123-332-00	ELECT 47MF 20% 16V
C209	1-101-005-00	CERAMIC 0.022MF 50V
C210	1-101-005-00	CERAMIC 0.022MF 50V
C211	1-101-005-00	CERAMIC 0.022MF 50V
C212	1-123-380-00	ELECT 1MF 20% 50V
C301	1-123-332-00	ELECT 47MF 20% 16V
C302	1-123-380-00	ELECT 1MF 20% 50V
C303	1-123-379-00	ELECT 0.47MF 20% 50V
C304	1-123-380-00	ELECT 1MF 20% 50V
C305	1-123-380-00	ELECT 1MF 20% 50V

CAPACITORS:

MF:μF, PF:μF.

RESISTORS

All resistors are in ohms.

F: nonflammable

COILS

MMH: mH, UH: μH

SEMICONDUCTORS

In each case, U: μ, for example:

UA...: μA..., UPA...: μPA..., UPC...: μPC,

UPD...: μPD...

ELECTRICAL PARTS

Ref.No.	Part No.	Description
C306	1-123-356-00	ELECT 10MF 20% 50V
C307	1-123-356-00	ELECT 10MF 20% 50V
C308	1-123-356-00	ELECT 10MF 20% 50V
C309	1-162-294-31	CERAMIC 0.001MF 10% 50V
C310	1-162-294-31	CERAMIC 0.001MF 10% 50V
C311	1-123-380-00	ELECT 1MF 20% 50V
C312	1-123-380-00	ELECT 1MF 20% 50V
C313	1-162-305-31	CERAMIC 0.0068MF 20% 16V
C314	1-162-305-31	CERAMIC 0.0068MF 20% 16V
C315	1-162-305-31	CERAMIC 0.0068MF 20% 16V
C316	1-162-305-31	CERAMIC 0.0068MF 20% 16V
C317	1-162-305-31	CERAMIC 0.0068MF 20% 16V
C318	1-162-305-31	CERAMIC 0.0068MF 20% 16V
C319	1-130-491-00	MYLAR 0.047MF 5% 50V
C320	1-101-005-00	CERAMIC 0.022MF 50V
C401	1-162-294-31	CERAMIC 0.001MF 10% 50V
C402	1-101-005-00	CERAMIC 0.022MF 50V
C403	1-123-356-00	ELECT 10MF 20% 50V
C404	1-101-005-00	CERAMIC 0.022MF 50V
C405	1-101-005-00	CERAMIC 0.022MF 50V
C407	1-162-215-31	CERAMIC 47PF 5% 50V
C408	1-161-494-00	CERAMIC 0.022MF 30% 25V
C409	1-162-294-31	CERAMIC 0.001MF 10% 50V
C410	1-130-487-00	MYLAR 0.022MF 5% 50V
C411	1-101-005-00	CERAMIC 0.022MF 50V
C412	1-101-005-00	CERAMIC 0.022MF 50V
C413	1-162-306-31	CERAMIC 0.01MF 20% 16V
C414	1-101-005-00	CERAMIC 0.022MF 50V
C415	1-123-379-00	ELECT 0.47MF 20% 50V
C416	1-123-332-00	ELECT 47MF 20% 16V
C417	1-123-382-00	ELECT 3.3MF 20% 50V
C418	1-123-369-00	ELECT 4.7MF 20% 50V
C419	1-123-382-00	ELECT 3.3MF 20% 50V
C420	1-101-005-00	CERAMIC 0.022MF 50V
C421	1-162-306-31	CERAMIC 0.01MF 20% 16V
C422	1-161-494-00	CERAMIC 0.022MF 30% 25V
C423	1-101-005-00	CERAMIC 0.022MF 50V
C424	1-102-949-00	CERAMIC 12PF 5% 50V
C425	1-102-880-00	CERAMIC 15PF 5% 50V
C426	1-104-069-00	POLYSTYRENE 470PF 5% 50V
C428	1-102-701-00	CERAMIC 91PF 5% 50V
C429	1-103-707-00	STYROL 180PF 5% 50V
C430	1-101-005-00	CERAMIC 0.022MF 50V
C431	1-102-966-00	CERAMIC 43PF 5% 50V
C432	1-162-303-31	CERAMIC 0.0033MF 20% 16V

(AEP, UK model)

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C433	1-161-494-00	CERAMIC	0.022MF	30%	25V
C434	1-101-005-00	CERAMIC	0.022MF		50V
C501	1-101-005-00	CERAMIC	0.022MF		50V
C502	1-123-333-00	ELECT	100MF	20%	16V
C503	1-101-005-00	CERAMIC	0.022MF		50V
C504	1-123-307-00	ELECT	100MF	20%	10V
C505	1-101-005-00	CERAMIC	0.022MF		50V
C506	1-101-005-00	CERAMIC	0.022MF		50V
C601	1-101-005-00	CERAMIC	0.022MF		50V
C602	1-123-307-00	ELECT	100MF	20%	10V
C603	1-102-852-00	CERAMIC	47PF	5%	50V
C604	1-102-852-00	CERAMIC	47PF	5%	50V
C605	1-123-380-00	ELECT	1MF	20%	50V
C606	1-101-005-00	CERAMIC	0.022MF		50V
C607	1-162-306-31	CERAMIC	0.01MF	20%	16V
C608	1-101-005-00	CERAMIC	0.022MF		50V
C609	1-123-356-00	ELECT	10MF	20%	50V
C610	1-101-005-00	CERAMIC	0.022MF		50V
C611	1-123-332-00	ELECT	47MF	20%	16V
C612	1-136-171-00	FILM	0.33MF	5%	50V
C613	1-130-487-00	MYLAR	0.022MF	5%	50V
C614	1-123-609-00	ELECT	0.33MF	20%	50V
C615	1-136-171-00	FILM	0.33MF	5%	50V
C616	1-130-487-00	MYLAR	0.022MF	5%	50V
C617	1-123-609-00	ELECT	0.33MF	20%	50V
C630	1-162-294-31	CERAMIC	0.001	10%	50V
C631	1-101-005-00	CERAMIC	0.022MF		50V
CF201	1-527-968-00	FILTER, CERAMIC			
CF202	1-527-968-00	FILTER, CERAMIC			
CF203	1-527-968-00	(G-AEP,F-G-AEP)...FILTER, CERAMIC			
CF401	1-527-937-00	FILTER, CERAMIC			
CF402	1-527-981-00	FILTER, CERAMIC			
CNJ101	*1-562-327-00	(AEP,F-AEP,UK)...SOCKET, CONNECTOR 3P			
CNJ201	*1-560-060-00	PIN, CONNECTOR 2P (NULL CHECK POINT)			
CNJ301	1-562-479-12	SOCKET, CONNECTOR 10P			
CNJ601	*1-560-604-00	PIN, CONNECTOR 5P			
CNJ602	*1-560-602-00	PIN, CONNECTOR 3P			
CNJ603	*1-560-603-00	PIN, CONNECTOR 4P			
CT401	1-141-227-00	CAP, CERAMIC TRIMMER			
CT402	1-141-227-00	CAP, CERAMIC TRIMMER			
CT403	1-141-227-00	CAP, CERAMIC TRIMMER			
CT404	1-141-227-00	CAP, CERAMIC TRIMMER			
D101	8-719-918-45	(AEP,G-AEP,UK)...DIODE KV1310			
D102	8-719-918-45	(AEP,G-AEP,UK)...DIODE KV1310			
D103	8-719-918-45	(AEP,G-AEP,UK)...DIODE KV1310			
D105	8-719-107-94	(AEP,G-AEP,UK)...DIODE 1SS202-1			
D201	8-719-107-94	DIODE 1SS202-1			
D202	8-719-107-94	DIODE 1SS202-1			
D301	8-719-904-08	DIODE SLH54VC3			
D302	8-719-107-94	DIODE 1SS202-1			
D303	8-719-107-94	DIODE 1SS202-1			
D304	8-719-107-94	DIODE 1SS202-1			
D401	8-719-107-94	DIODE 1SS202-1			
D402	8-719-902-79	DIODE KV1236Z			
D403	8-719-902-79	DIODE KV1236Z			
D422	8-719-107-94	DIODE 1SS202-1			
D501	8-719-910-23	DIODE HZ12A3L			
D502	8-719-910-64	DIODE HZ6B1L			
D601	8-719-107-94	DIODE 1SS202-1			

ELECTRICAL PARTS

Ref.No.	Part No.	Description
D602	8-719-107-94	DIODE 1SS202-1
D603	8-719-107-94	DIODE 1SS202-1
D604	8-719-107-94	DIODE 1SS202-1
D605	8-719-107-94	DIODE 1SS202-1
D606	8-719-107-94	DIODE 1SS202-1
D607	8-719-107-94	DIODE 1SS202-1
D608	8-719-107-94	DIODE 1SS202-1
D609	8-719-107-94	DIODE 1SS202-1
D610	8-719-107-94	DIODE 1SS202-1
D611	8-719-107-94	DIODE 1SS202-1
D612	8-719-107-94	DIODE 1SS202-1
D613	8-719-107-94	DIODE 1SS202-1
D615	8-719-107-94	DIODE 1SS202-1
D616	8-719-107-94	DIODE 1SS202-1
D617	8-719-107-94	DIODE 1SS202-1
FE101	1-463-611-11	(G-AEP,F-G-AEP)...FRONT END, FM (FEE-4013A)
FL201	1-235-126-00	ENCAPSULATED COMPONENT
IC201	8-759-812-31	IC LA1231
IC301	8-759-801-80	IC LA3401
IC401	8-759-812-45	IC LA1245
IC601	8-759-204-24	IC TC9302F-005
IC602	8-759-202-63	IC TC9172P
L101	*1-422-214-11	(AEP,F-AEP,UK)...COIL, AIR-CORE
L102	*1-422-040-00	(AEP,F-AEP,UK)...COIL, AIR-CORE
L103	*1-422-081-00	(AEP,F-AEP,UK)...COIL (WITH CORE)
L104	*1-422-039-00	(AEP,F-AEP,UK)...COIL, AIR-CORE
L105	*1-459-396-00	(AEP,F-AEP,UK)...COIL (WITH CORE)
L301	1-408-924-00	MICRO INDUCTOR 10MMH
L302	1-408-924-00	MICRO INDUCTOR 10MMH
L401	1-402-151-11	ANTENNA, FERRITE-ROD (LW/MW)
L402	1-406-089-11	COIL (OSC)
L403	1-406-090-11	COIL (OSC)
LCD1	1-806-874-11	INDICATOR, L-CRYSTAL LT5056
PL501	1-518-511-21	LAMP, PILOT, YELLOW
Q101	8-729-353-52	(AEP,G-AEP,UK)...TRANSISTOR 2SC535
Q102	8-729-353-52	(AEP,G-AEP,UK)...TRANSISTOR 2SC535
Q103	8-729-672-42	(AEP,G-AEP,UK)...TRANSISTOR 2SC2724-C
Q104	8-729-672-42	(AEP,G-AEP,UK)...TRANSISTOR 2SC2724-C
Q201	8-729-672-42	TRANSISTOR 2SC2724-C
Q301	8-729-606-33	TRANSISTOR 2SC2603-F
Q302	8-729-606-33	TRANSISTOR 2SC2603-F
Q303	8-729-900-63	TRANSISTOR DTA124ES
Q304	8-729-900-36	TRANSISTOR DTC124ES
Q305	8-729-900-36	TRANSISTOR DTC124ES
Q401	8-729-606-33	TRANSISTOR 2SC2603-F
Q402	8-729-606-33	TRANSISTOR 2SC2603-F
Q403	8-729-606-33	TRANSISTOR 2SC2603-F
Q404	8-729-606-33	TRANSISTOR 2SC2603-F
Q405	8-729-173-37	TRANSISTOR 2SA733-P
Q406	8-729-606-33	TRANSISTOR 2SC2603-F
Q407	8-729-606-33	TRANSISTOR 2SC2603-F
Q501	8-729-288-02	TRANSISTOR 2SD880
Q502	8-729-224-61	TRANSISTOR 2SK246-Y
Q601	8-729-201-56	TRANSISTOR 2SK246-GR2
Q602	8-729-606-33	TRANSISTOR 2SC2603-F
Q603	8-729-201-56	TRANSISTOR 2SK246-GR2

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
Q604	8-729-606-33	TRANSISTOR 2SC2603-F			
Q605	8-729-900-36	TRANSISTOR DTC124ES			
Q606	8-729-900-63	TRANSISTOR DTA124ES			
Q607	8-729-900-63	TRANSISTOR DTA124ES			
Q608	8-729-900-36	TRANSISTOR DTC124ES			
Q609	8-729-900-63	TRANSISTOR DTA124ES			
Q610	8-729-900-36	TRANSISTOR DTC124ES			
Q611	8-729-900-63	TRANSISTOR DTA124ES			
Q614	8-729-606-33	TRANSISTOR 2SC2603-F			
Q615	8-729-900-36	TRANSISTOR DTC124ES			
R101	1-249-441-11	(AEP,F·AEP,UK)...CARBON	100K	5%	1/6W
R102	1-247-901-00	(AEP,F·AEP,UK)...CARBON	820K	5%	1/6W
R103	1-249-405-00	(AEP,F·AEP,UK)...CARBON	100	5%	1/6W
R104	1-249-405-00	(AEP,F·AEP,UK)...CARBON	100	5%	1/6W
R105	1-249-441-11	(AEP,F·AEP,UK)...CARBON	100K	5%	1/6W
R106	1-247-901-00	(AEP,F·AEP,UK)...CARBON	820K	5%	1/6W
R107	1-247-819-00	(AEP,F·AEP,UK)...CARBON	330	5%	1/6W
R108	1-247-795-00	(AEP,F·AEP,UK)...CARBON	33	5%	1/6W
R108	1-249-405-00	(G·AEP,F·G·AEP)...CARBON	100	5%	1/6W
R109	1-249-405-00	(AEP,F·AEP,UK)...CARBON	100	5%	1/6W
R110	1-247-893-00	(AEP,F·AEP,UK)...CARBON	390K	5%	1/6W
R111	1-249-425-11	(AEP,F·AEP,UK)...CARBON	4.7K	5%	1/6W
R112	1-247-859-00	(AEP,F·AEP,UK)...CARBON	15K	5%	1/6W
R113	1-247-893-00	(AEP,F·AEP,UK)...CARBON	390K	5%	1/6W
R114	1-249-405-00	(AEP,F·AEP,UK)...CARBON	100	5%	1/6W
R115	1-247-799-00	CARBON	47	5%	1/6W
R116	1-247-706-11	(G·AEP,F·G·AEP)...CARBON	330	5%	1/4W
R201	1-247-901-00	CARBON	820K	5%	1/6W
R202	1-247-819-00	CARBON	330	5%	1/6W
R203	1-247-819-00	CARBON	330	5%	1/6W
R204	1-247-873-00	CARBON	56K	5%	1/6W
R205	1-249-417-11	CARBON	1K	5%	1/6W
R206	1-247-859-00	CARBON	15K	5%	1/6W
R207	1-249-433-11	CARBON	22K	5%	1/6W
R208	1-247-799-00	CARBON	47	5%	1/6W
R209	1-247-859-00	CARBON	15K	5%	1/6W
R210	1-249-441-11	CARBON	100K	5%	1/6W
R211	1-249-429-11	CARBON	10K	5%	1/6W
R301	1-247-799-00	CARBON	47	5%	1/6W
R302	1-249-423-11	CARBON	3.3K	5%	1/6W
R303	1-249-435-11	CARBON	33K	5%	1/6W
R304	1-247-833-00	CARBON	1.2K	5%	1/6W
R305	1-249-437-11	CARBON	47K	5%	1/6W
R306	1-249-437-11	CARBON	47K	5%	1/6W
R307	1-249-419-11	CARBON	1.5K	5%	1/6W
R308	1-249-419-11	CARBON	1.5K	5%	1/6W
R309	1-249-429-11	CARBON	10K	5%	1/6W
R310	1-249-429-11	CARBON	10K	5%	1/6W
R312	1-249-437-11	CARBON	47K	5%	1/6W
R313	1-249-417-11	CARBON	1K	5%	1/6W
R314	1-249-437-11	CARBON	47K	5%	1/6W
R316	1-249-437-11	CARBON	47K	5%	1/6W
R319	1-249-437-11	CARBON	47K	5%	1/6W
R320	1-249-437-11	CARBON	47K	5%	1/6W
R322	1-249-437-11	CARBON	47K	5%	1/6W
R330	1-247-853-00	CARBON	8.2K	5%	1/6W
R401	1-249-421-11	CARBON	2.2K	5%	1/6W
R402	1-249-405-00	CARBON	100	5%	1/6W
R403	1-249-414-11	CARBON	560	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R404	1-249-423-11	CARBON	3.3K	5%	1/6W
R405	1-247-799-00	CARBON	47	5%	1/6W
R406	1-249-429-11	CARBON	10K	5%	1/6W
R407	1-249-405-00	CARBON	100	5%	1/6W
R408	1-249-429-11	CARBON	10K	5%	1/6W
R409	1-247-811-00	CARBON	150	5%	1/6W
R410	1-247-857-00	CARBON	12K	5%	1/6W
R411	1-249-429-11	CARBON	10K	5%	1/6W
R413	1-249-433-11	CARBON	22K	5%	1/6W
R414	1-249-429-11	CARBON	10K	5%	1/6W
R415	1-249-429-11	CARBON	10K	5%	1/6W
R418	1-249-433-11	CARBON	22K	5%	1/6W
R419	1-249-429-11	CARBON	10K	5%	1/6W
R420	1-249-429-11	CARBON	10K	5%	1/6W
R421	1-249-433-11	CARBON	22K	5%	1/6W
R422	1-249-429-11	CARBON	10K	5%	1/6W
R423	1-249-433-11	CARBON	22K	5%	1/6W
R432	1-247-903-00	CARBON	1M	5%	1/6W
R433	1-249-429-11	CARBON	10K	5%	1/6W
R434	1-249-429-11	CARBON	10K	5%	1/6W
R435	1-249-429-11	CARBON	10K	5%	1/6W
R436	1-247-819-00	CARBON	330	5%	1/6W
R437	1-249-437-11	CARBON	47K	5%	1/6W
R439	1-249-429-11	CARBON	10K	5%	1/6W
R501	1-247-815-00	CARBON	220	5%	1/6W
R502	1-247-823-00	CARBON	470	5%	1/6W
R503	1-247-775-00	CARBON	4.7	5%	1/6W
R504	1-249-417-11	CARBON	1K	5%	1/6W
R601	1-249-425-11	CARBON	4.7K	5%	1/6W
R602	1-249-441-11	CARBON	100K	5%	1/6W
R603	1-249-435-11	CARBON	33K	5%	1/6W
R604	1-249-423-00	CARBON	3.3K	5%	1/6W
R605	1-249-441-11	CARBON	100K	5%	1/6W
R606	1-247-435-11	CARBON	33K	5%	1/6W
R607	1-247-797-00	CARBON	39	5%	1/6W
R608	1-247-799-00	CARBON	47	5%	1/6W
R609	1-249-437-11	CARBON	47K	5%	1/6W
R610	1-247-817-00	CARBON	270	5%	1/6W
R611	1-247-829-00	CARBON	820	5%	1/6W
R612	1-249-414-11	CARBON	560	5%	1/6W
R613	1-249-435-00	CARBON	33K	5%	1/6W
R614	1-249-421-11	CARBON	2.2K	5%	1/6W
R615	1-249-425-11	CARBON	4.7K	5%	1/6W
R616	1-249-425-11	CARBON	4.7K	5%	1/6W
R617	1-249-437-11	CARBON	47K	5%	1/6W
R618	1-247-817-00	CARBON	270	5%	1/6W
R619	1-247-829-00	CARBON	820	5%	1/6W
R620	1-249-414-11	CARBON	560	5%	1/6W
R621	1-247-885-00	CARBON	180K	5%	1/6W
R622	1-249-421-11	CARBON	2.2K	5%	1/6W
R623	1-249-425-11	CARBON	4.7K	5%	1/6W
R624	1-249-425-11	CARBON	4.7K	5%	1/6W
R625	1-247-891-00	CARBON	330K	5%	1/6W
R640	1-249-435-11	CARBON	33K	5%	1/6W
R643	1-249-441-11	CARBON	100K	5%	1/6W
R644	1-249-425-11	CARBON	4.7K	5%	1/6W

ELECTRICAL PARTS

<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>
RV201	1-228-997-00	RES, ADJ, CARBON 100K
RV301	1-228-997-00	(AEP,F·AEP,UK)...RES, ADJ, CARBON 100K
RV301	1-228-998-00	(G-AEP,F·G-AEP)..RES, ADJ, CARBON 220K
S701	1-554-303-21	SWITCH, KEY BOARD (BAND)
S702	1-554-303-21	SWITCH, KEY BOARD (STEREO MUTING)
S703	1-554-303-21	SWITCH, KEY BOARD (MEMORY)
S704	1-554-303-21	SWITCH, KEY BOARD (TUNING -)
S705	1-554-303-21	SWITCH, KEY BOARD (TUNING +)
S706	1-554-303-21	SWITCH, KEY BOARD (PRESET 1)
S707	1-554-303-21	SWITCH, KEY BOARD (PRESET 2)
S708	1-554-303-21	SWITCH, KEY BOARD (PRESET 3)
S709	1-554-303-21	SWITCH, KEY BOARD (PRESET 4)
S710	1-554-303-21	SWITCH, KEY BOARD (PRESET 5)
T201	1-404-419-00	COIL, DISCRIMINATOR
T401	1-404-535-11	COIL (WITH IFT)
TM101	1-536-733-00	(G-AEP,F·G-AEP)TERMINAL BOARD, ANTENNA
TM101	1-536-901-11	(AEP,F·AEP,UK)TERMINAL BOARD 3P, ANTENNA
X301	1-567-250-11	OSCILLATOR, CERAMIC
X601	1-567-125-00	VIBRATOR, CRYSTAL

SECTION 2 ADJUSTMENTS

(E model)

FH-150R
ST-177R

FH-150R
ST-177R

(E model)


FM SECTION 1

Setting:

BAND selector switch FM

FM OSC Voltage Adjustment

Setting:


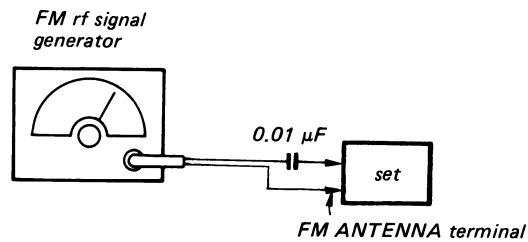


Carrier frequency: 108 MHz
Modulation: 1 kHz, 75 kHz deviation
Output level: as low as possible

Procedure:

1. Push the TUNING (+, -) button for 108 MHz.
2. Adjust L105 for 8.9 - 9 V reading on the VOM.


[FE BOARD] (CONDUCTOR SIDE)

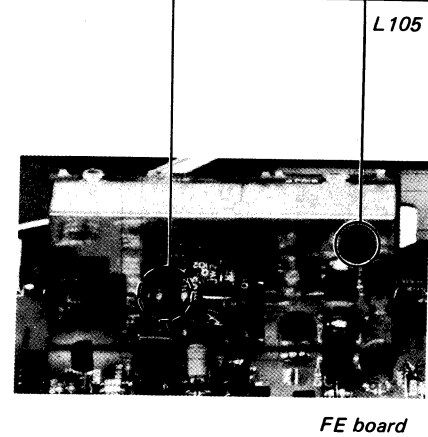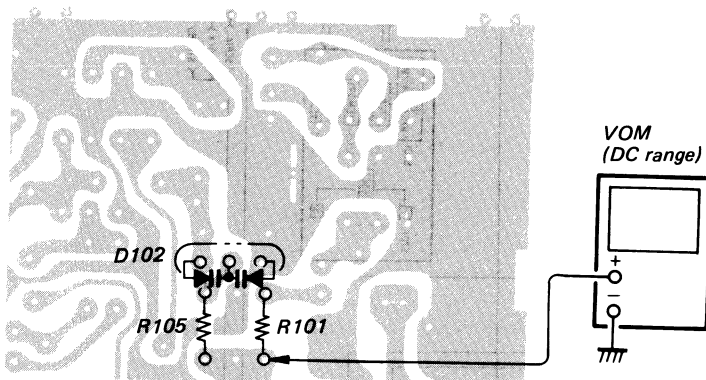

FE board

FM Tracking Adjustment

Setting:

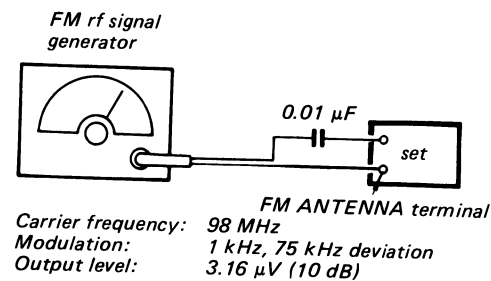


Carrier frequency: 98 MHz
Modulation: 1 kHz, 75 kHz deviation
Output level: 3.16 μV (10 dB)

Procedure:

1. Push TUNING (+, -) button for 98 MHz.
2. Approach L102 and L103 not to contact each other.
3. Adjust L101 and L103, and repeat the adjustment 2 - 3 times for maximum VTVM reading.

(Adjust L103 in the direction as shown by arrow Ⓐ.)

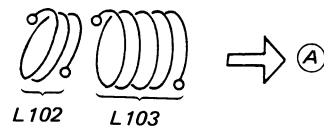


Note: Do not touch L102.


L101
L102
L103



FE board

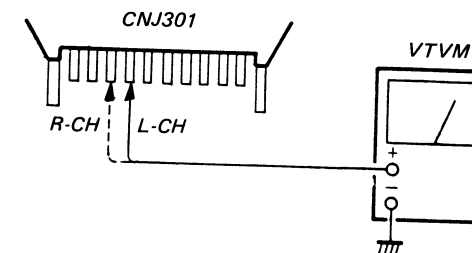


tuner board

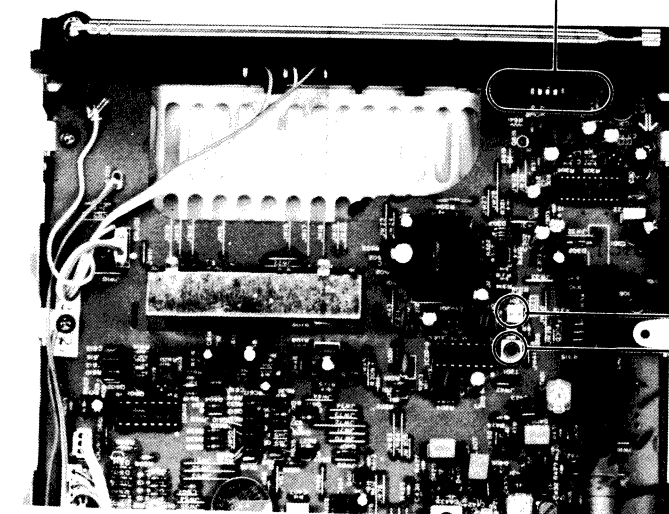

Note: FM discriminator alignment should be made after FM tracking adjustment.


FM Discriminator Alignment (NULL Check)

Setting:

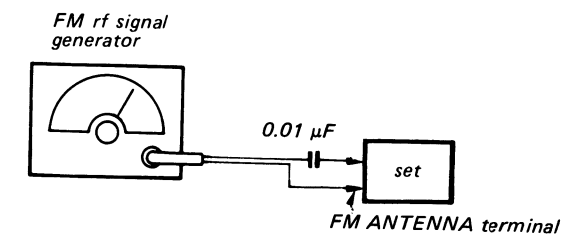

Carrier frequency: 98 MHz
Modulation: 1 kHz, 75 kHz deviation
Output level: 1 mV (60 dB)

VOM
(DC range)

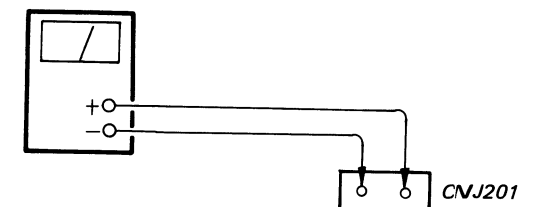

Procedure:

1. Push the TUNING (+, -) button for 98 MHz.
2. Adjust T201 for 0 V reading on the VOM.



CNJ201

T201


(E model)

FH-150R
ST-177R**FH-150R**
ST-177R

(E model)

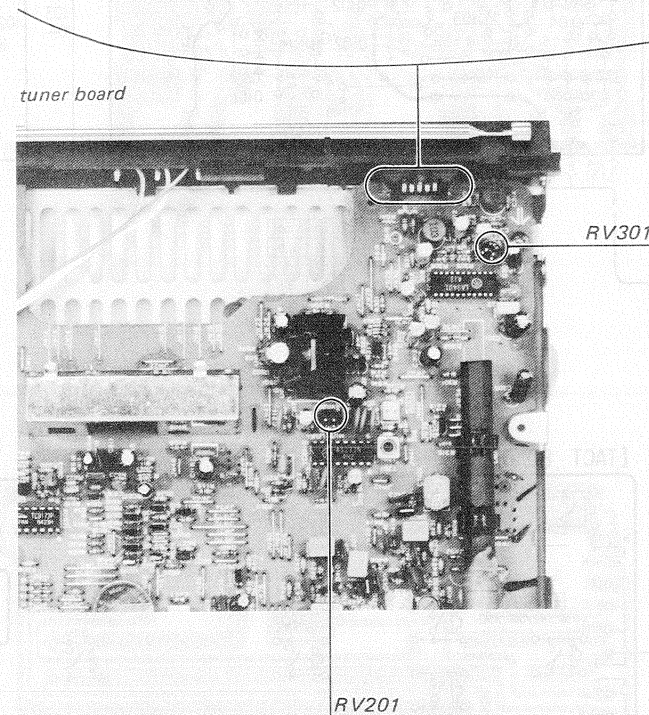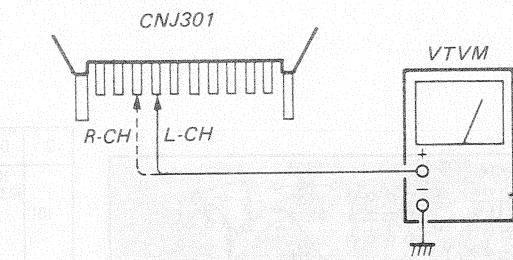FM SECTION 2**FM Muting Level Adjustment**

Setting:
STEREO MUTING switch ON

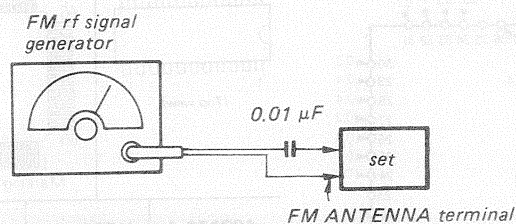
Procedure:

Carrier frequency: 98 MHz
Modulation: 1 kHz, 75 kHz deviation
Output level: 17.9 µV (25 dB)

1. Push the TUNING (+, -) button for 98 MHz.
2. Adjust RV201 for a point the VTVM reading just drops to 0 V.

FM Stereo Separation Adjustment

Setting:
STEREO MUTING switch ON

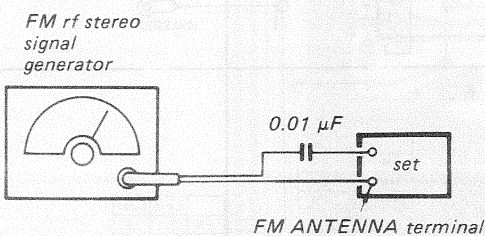Procedure:

Carrier frequency: 98 MHz
Modulation: audio (1 kHz): 33.75 kHz deviation
pilot (19 kHz): 7.5 kHz deviation
sub-channel (38 kHz): 33.75 kHz deviation
Output level: 1 mV (60 dB)
Mode: stereo

FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	(A)
R-CH	L-CH	(B) Adjust RV301 for minimum reading.
R-CH	R-CH	(C)
L-CH	R-CH	(D) Adjust RV301 for minimum reading.


L-CH Stereo separation: (A) - (B)
R-CH Stereo separation: (C) - (D)

The separations of both channels should be equal.

AM SECTION**Setting:**


BAND selector switch: MW, SW1 or SW2

- MW -

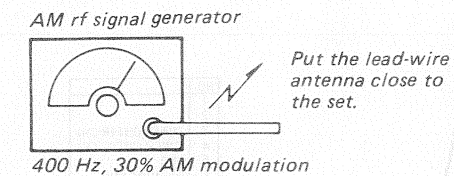


400 Hz, 30% AM modulation

- SW -

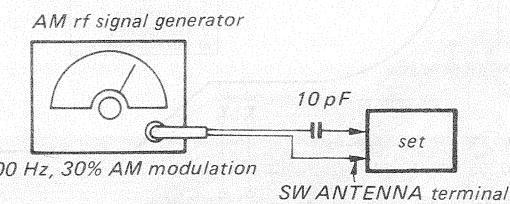

400 Hz, 30% AM modulation

- Repeat the procedures in each adjustment several times, and the OSC voltage and tracking adjustments should be finally done by the trimmer capacitors.

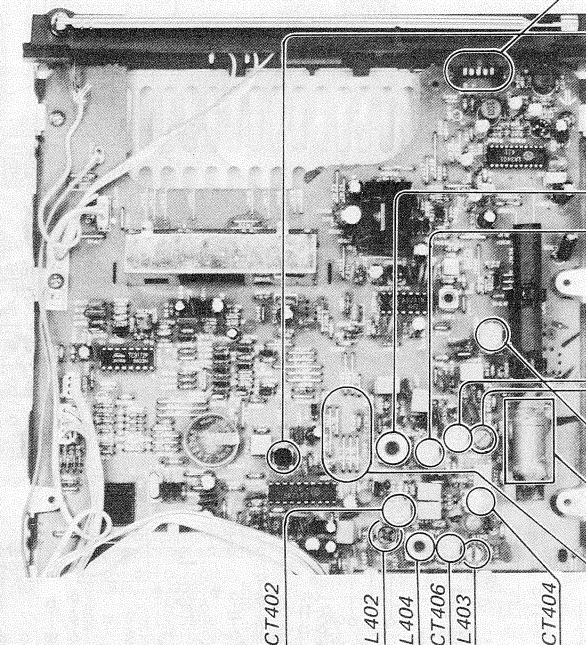**AM IF ALIGNMENT**

Adjust for a maximum reading on VTVM.

T401 450 kHz

SW2 TRACKING ADJUSTMENT

Adjust for a maximum reading on VTVM.

L406 10 MHz

CT405 20 MHz

SW1 TRACKING ADJUSTMENT

Adjust for a maximum reading on VTVM.

CT403 6.5 MHz

L405 3.5 MHz

MW TRACKING ADJUSTMENT


Adjust for a maximum reading on VTVM.

CT401 1,400 kHz

L401 600 kHz

MW/SW1/SW2 OSC Voltage Adjustment**Procedure:**

1. Set BAND selector switch to MW.
2. Push TUNING (+, -) button for 530 kHz. Adjust L402 for 0.95 - 1.05 V VOM (2) reading.
3. Push the button for 1,610 kHz. Adjust CT402 for 8.9 - 9.0 V VOM (2) reading.
4. Set BAND selector switch to SW1.
5. Push TUNING (+, -) button for 3.2 MHz. Adjust L403 for 0.95 - 1.05 V VOM (1) reading.
6. Push the button for 7.3 MHz. Adjust CT404 for 8.9 - 9.0 V VOM (1) reading.
7. Set BAND selector switch to SW2.

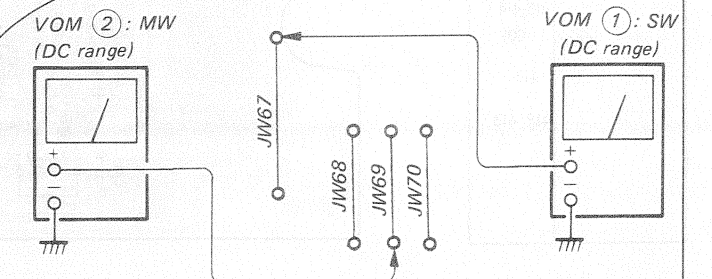


8. Push TUNING (+, -) button for 9.5 MHz. Adjust L404 for 0.95 - 1.05 V VOM (1) reading.
9. Push the button for 21.75 MHz. Adjust CT406 for 8.9 - 9.0 V VOM (1) reading.

- See page ST-11 for notes.

(E model)

FH-150R
ST-177R

(E model)

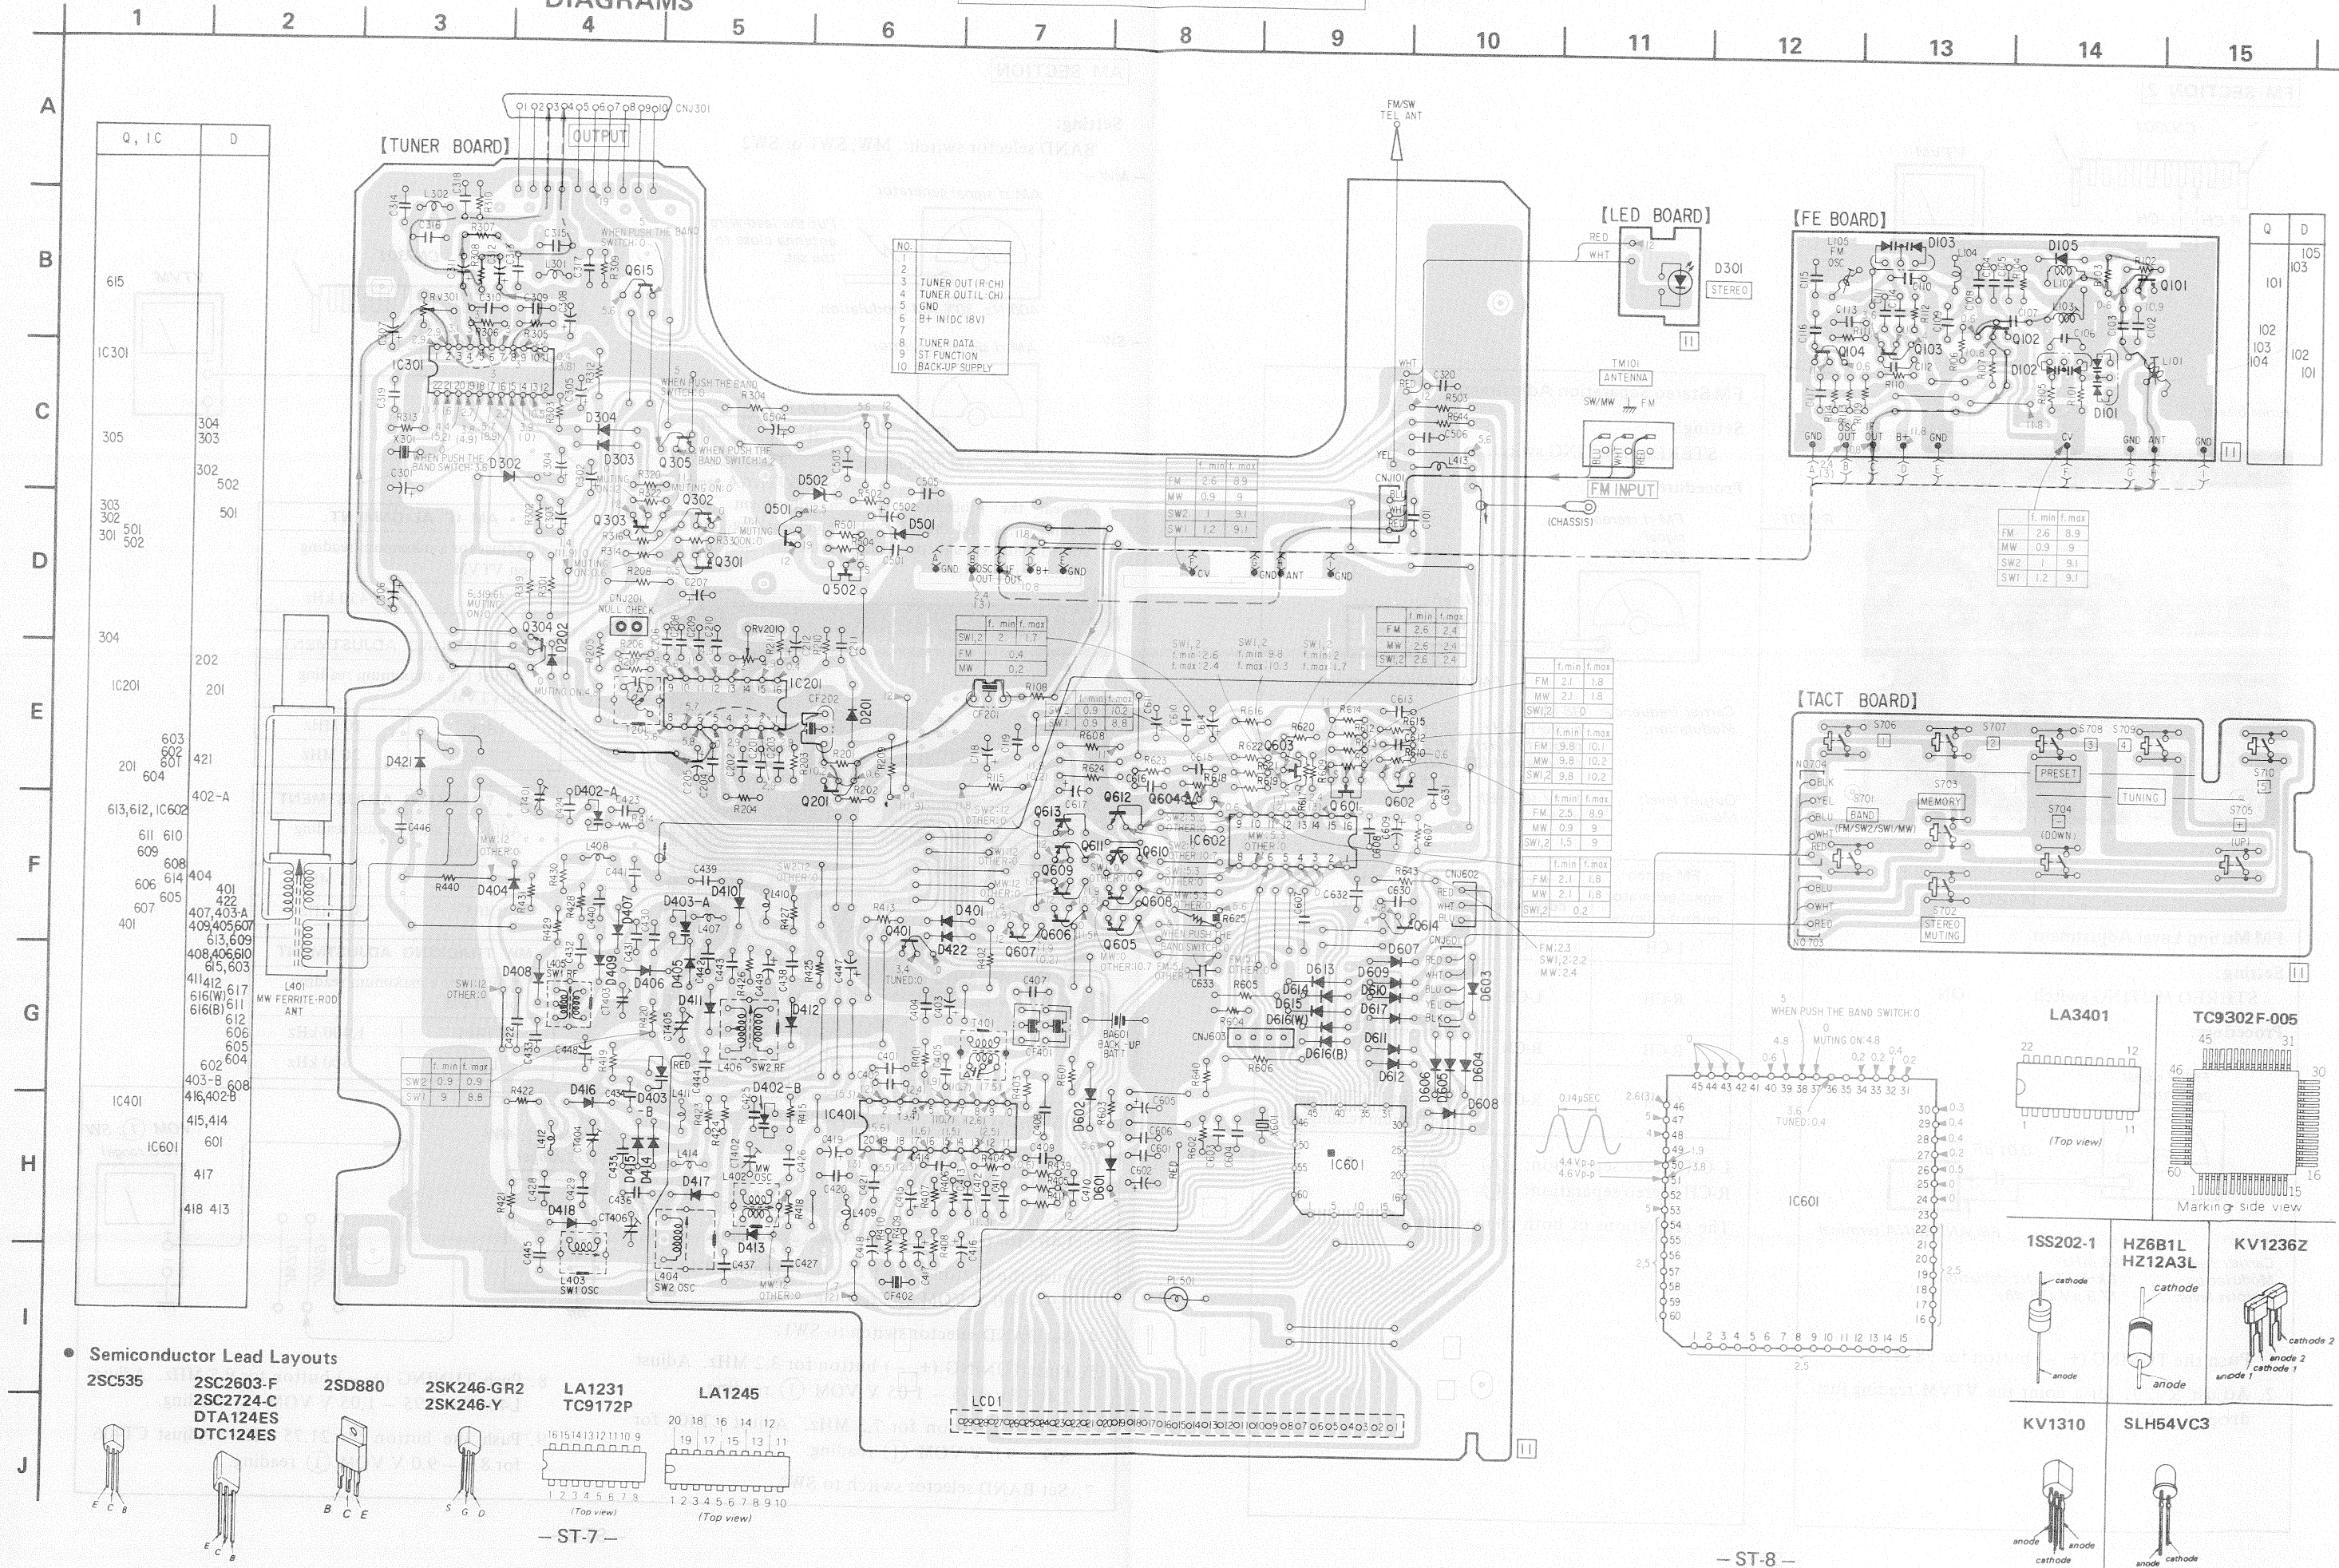


- See page ST-11 for notes.

(E model)

FH-150R
ST-177R

FH-150R
ST-177R

(E model)

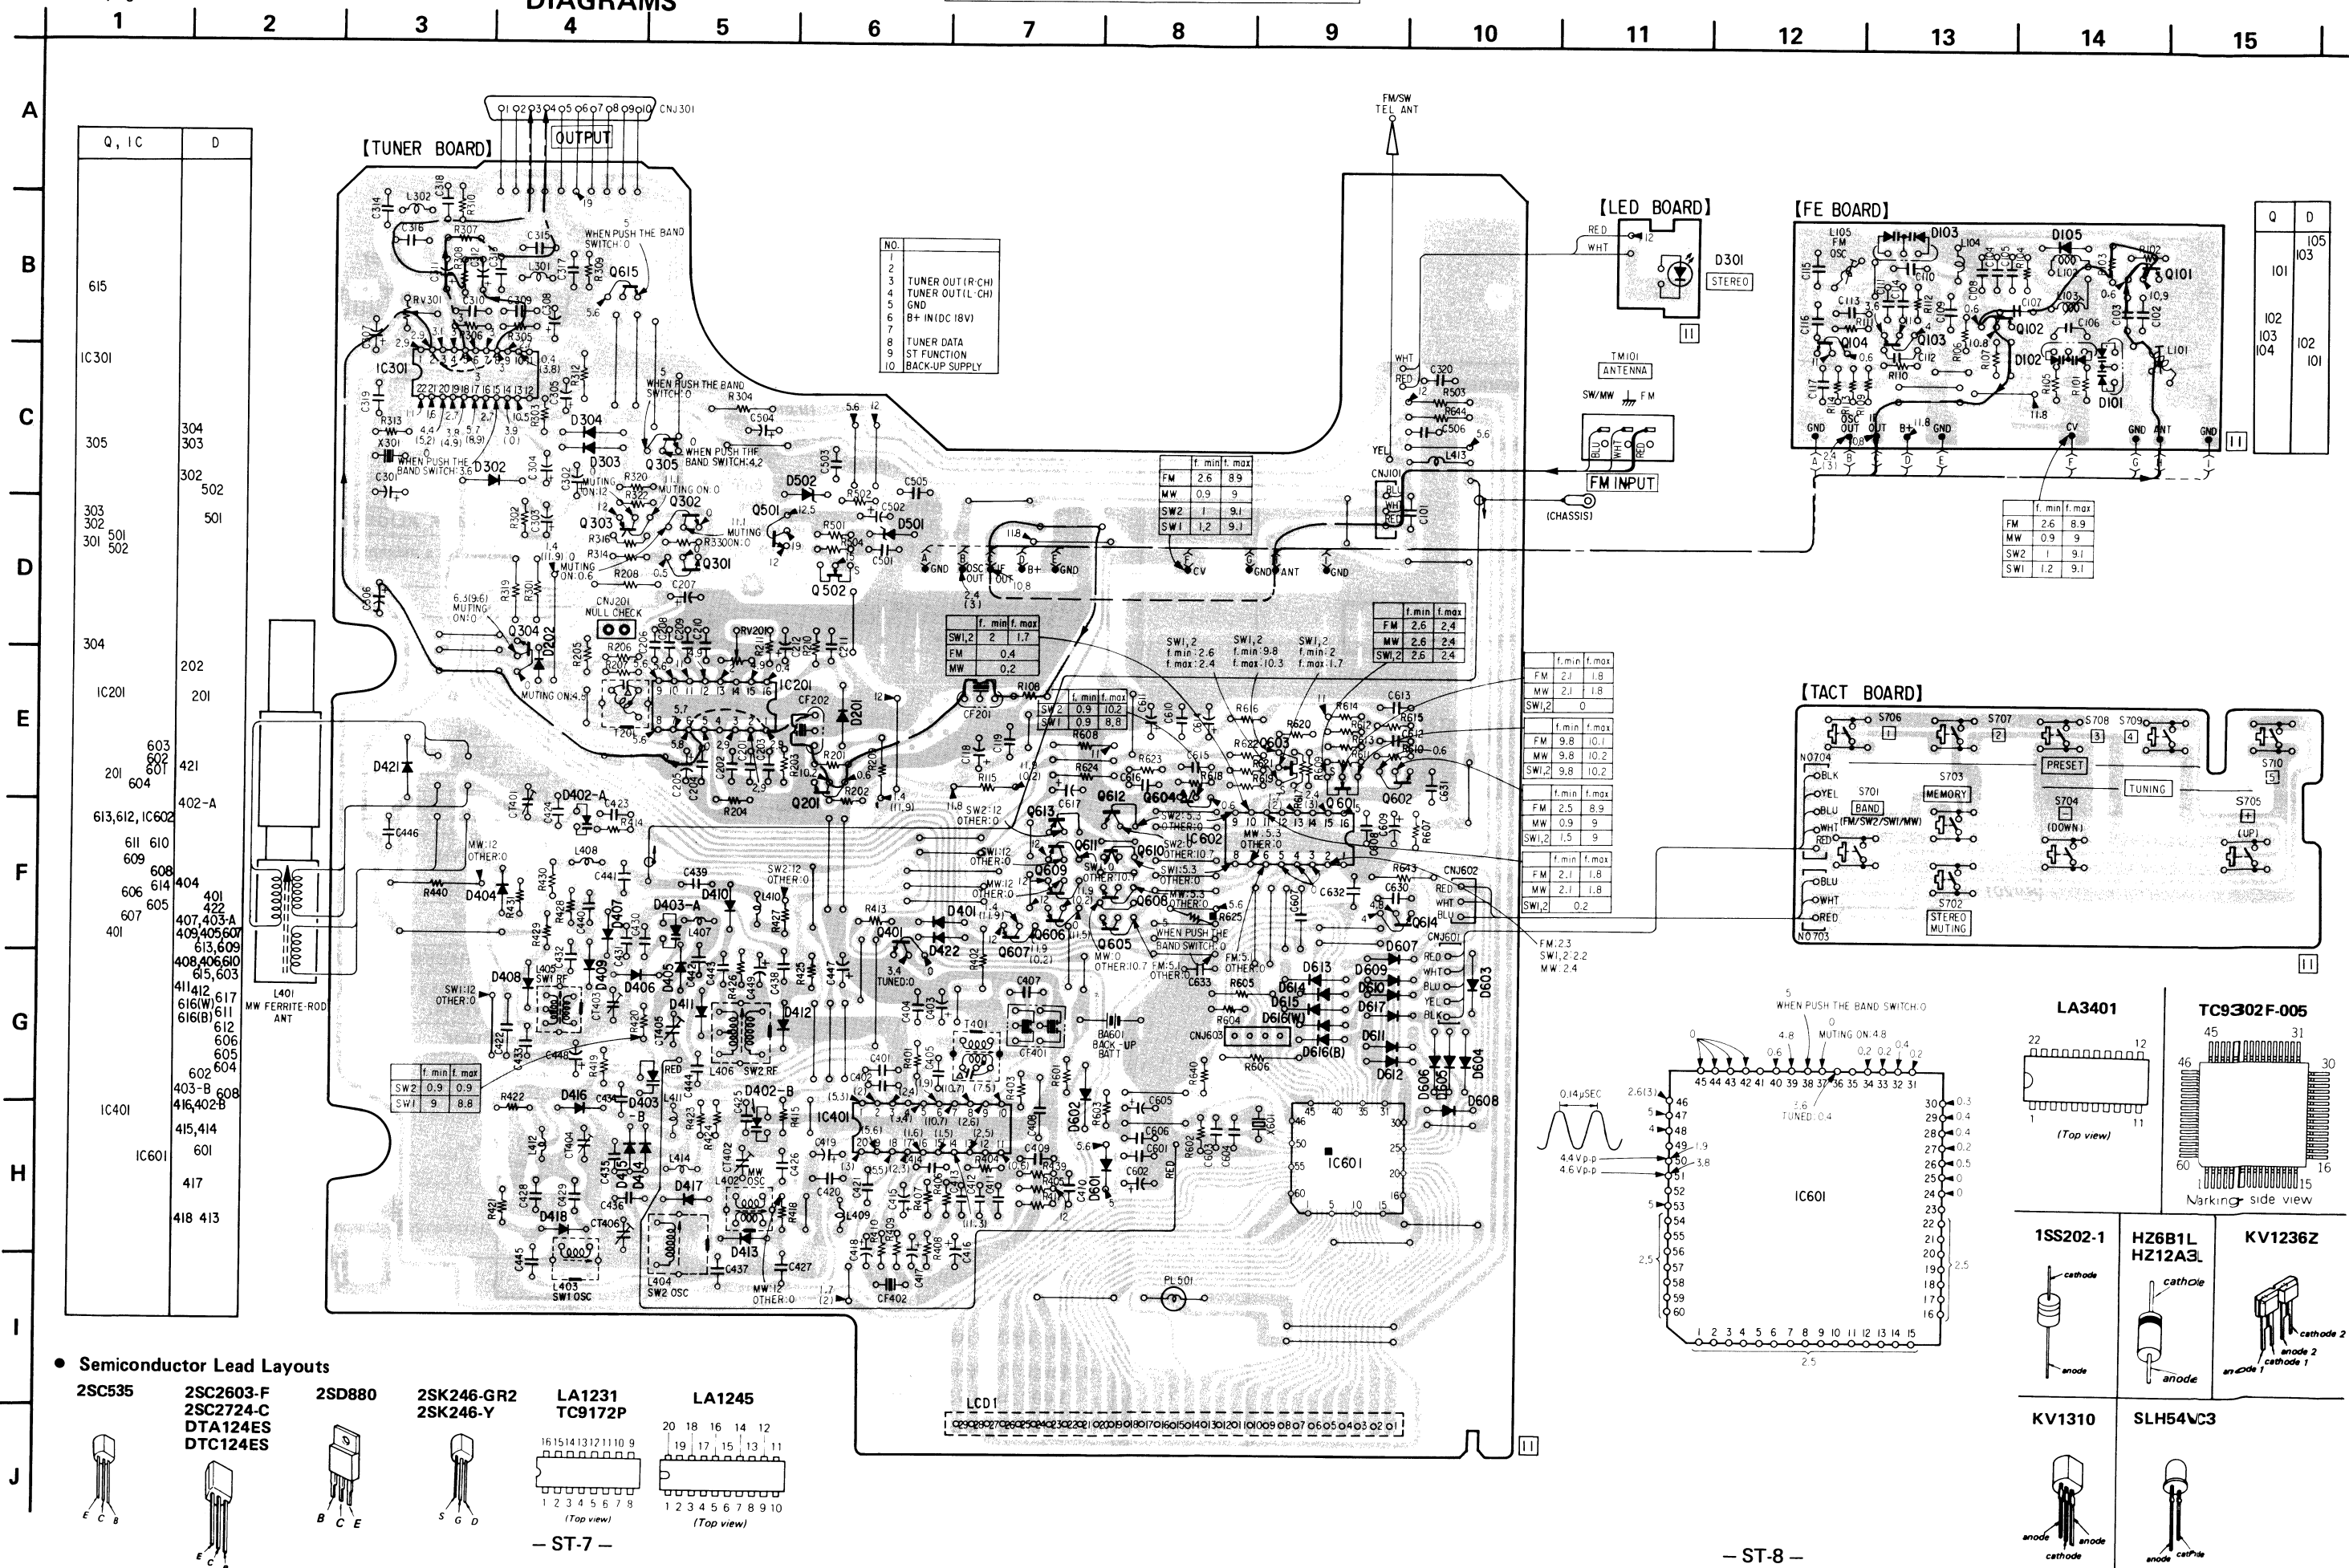



3-2. SCHEMATIC DIAGRAM

(E model)

FH-150R
ST-177RFH-150R
ST-177R

(E model)

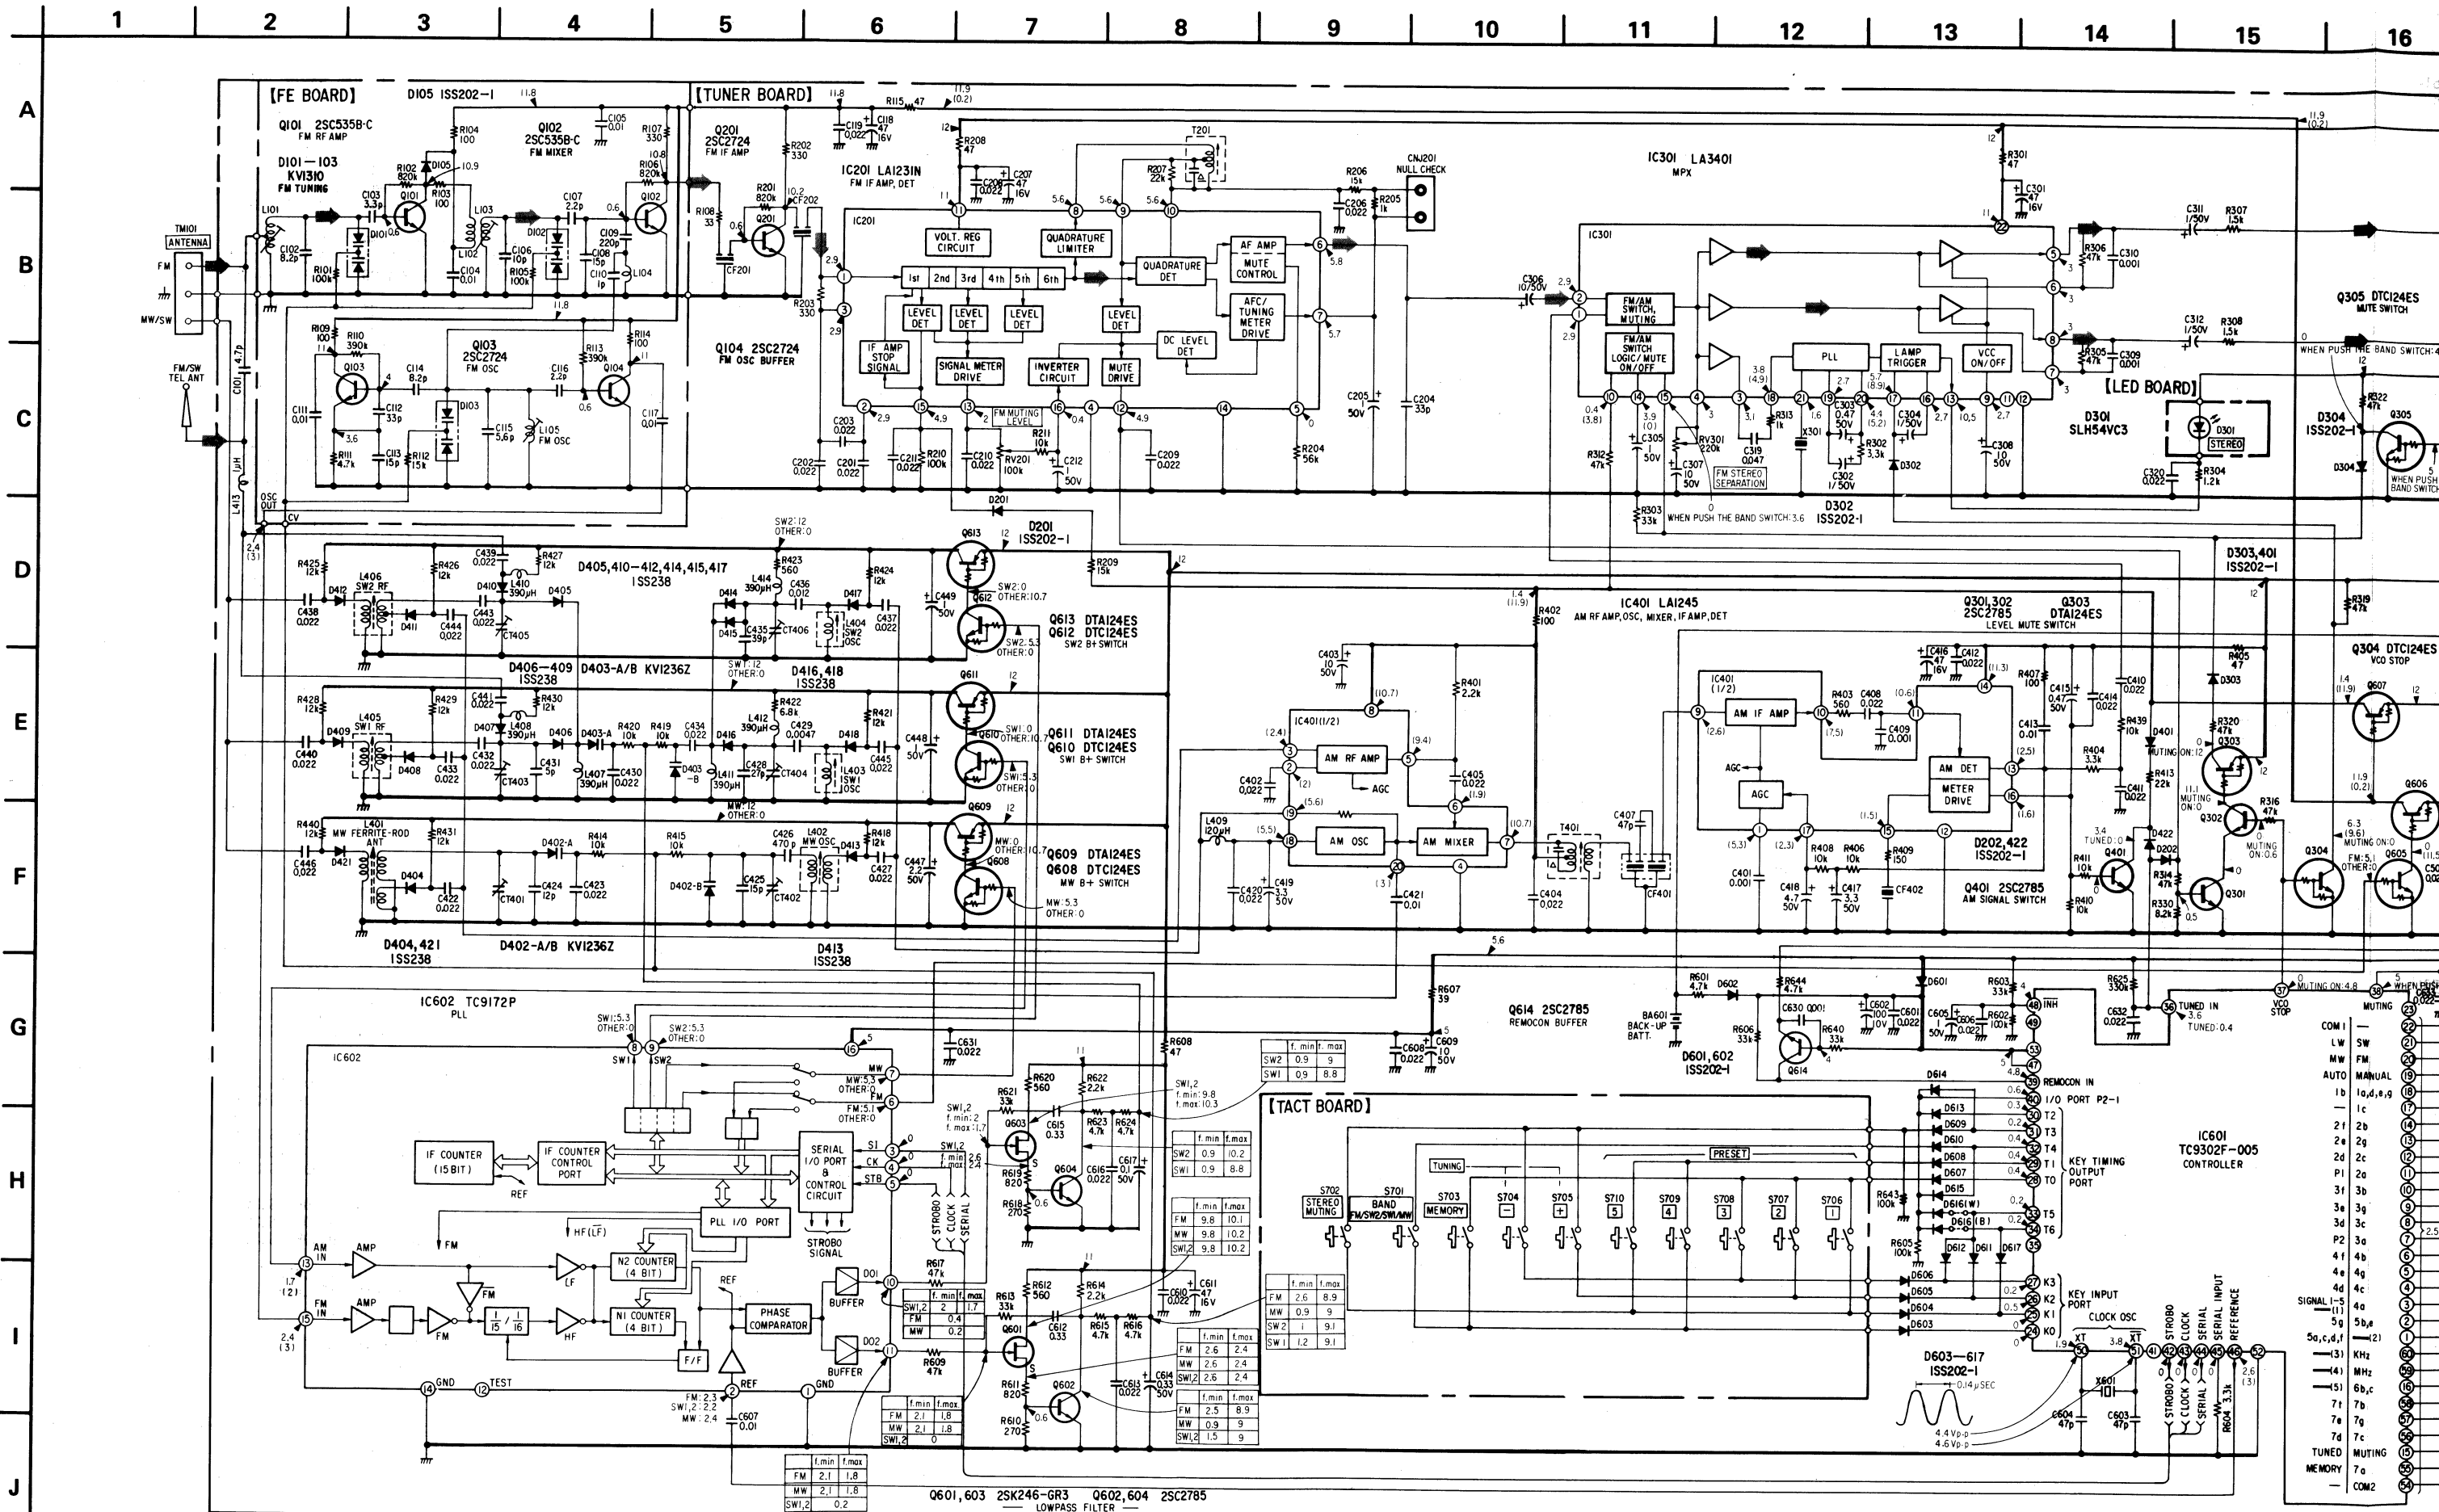

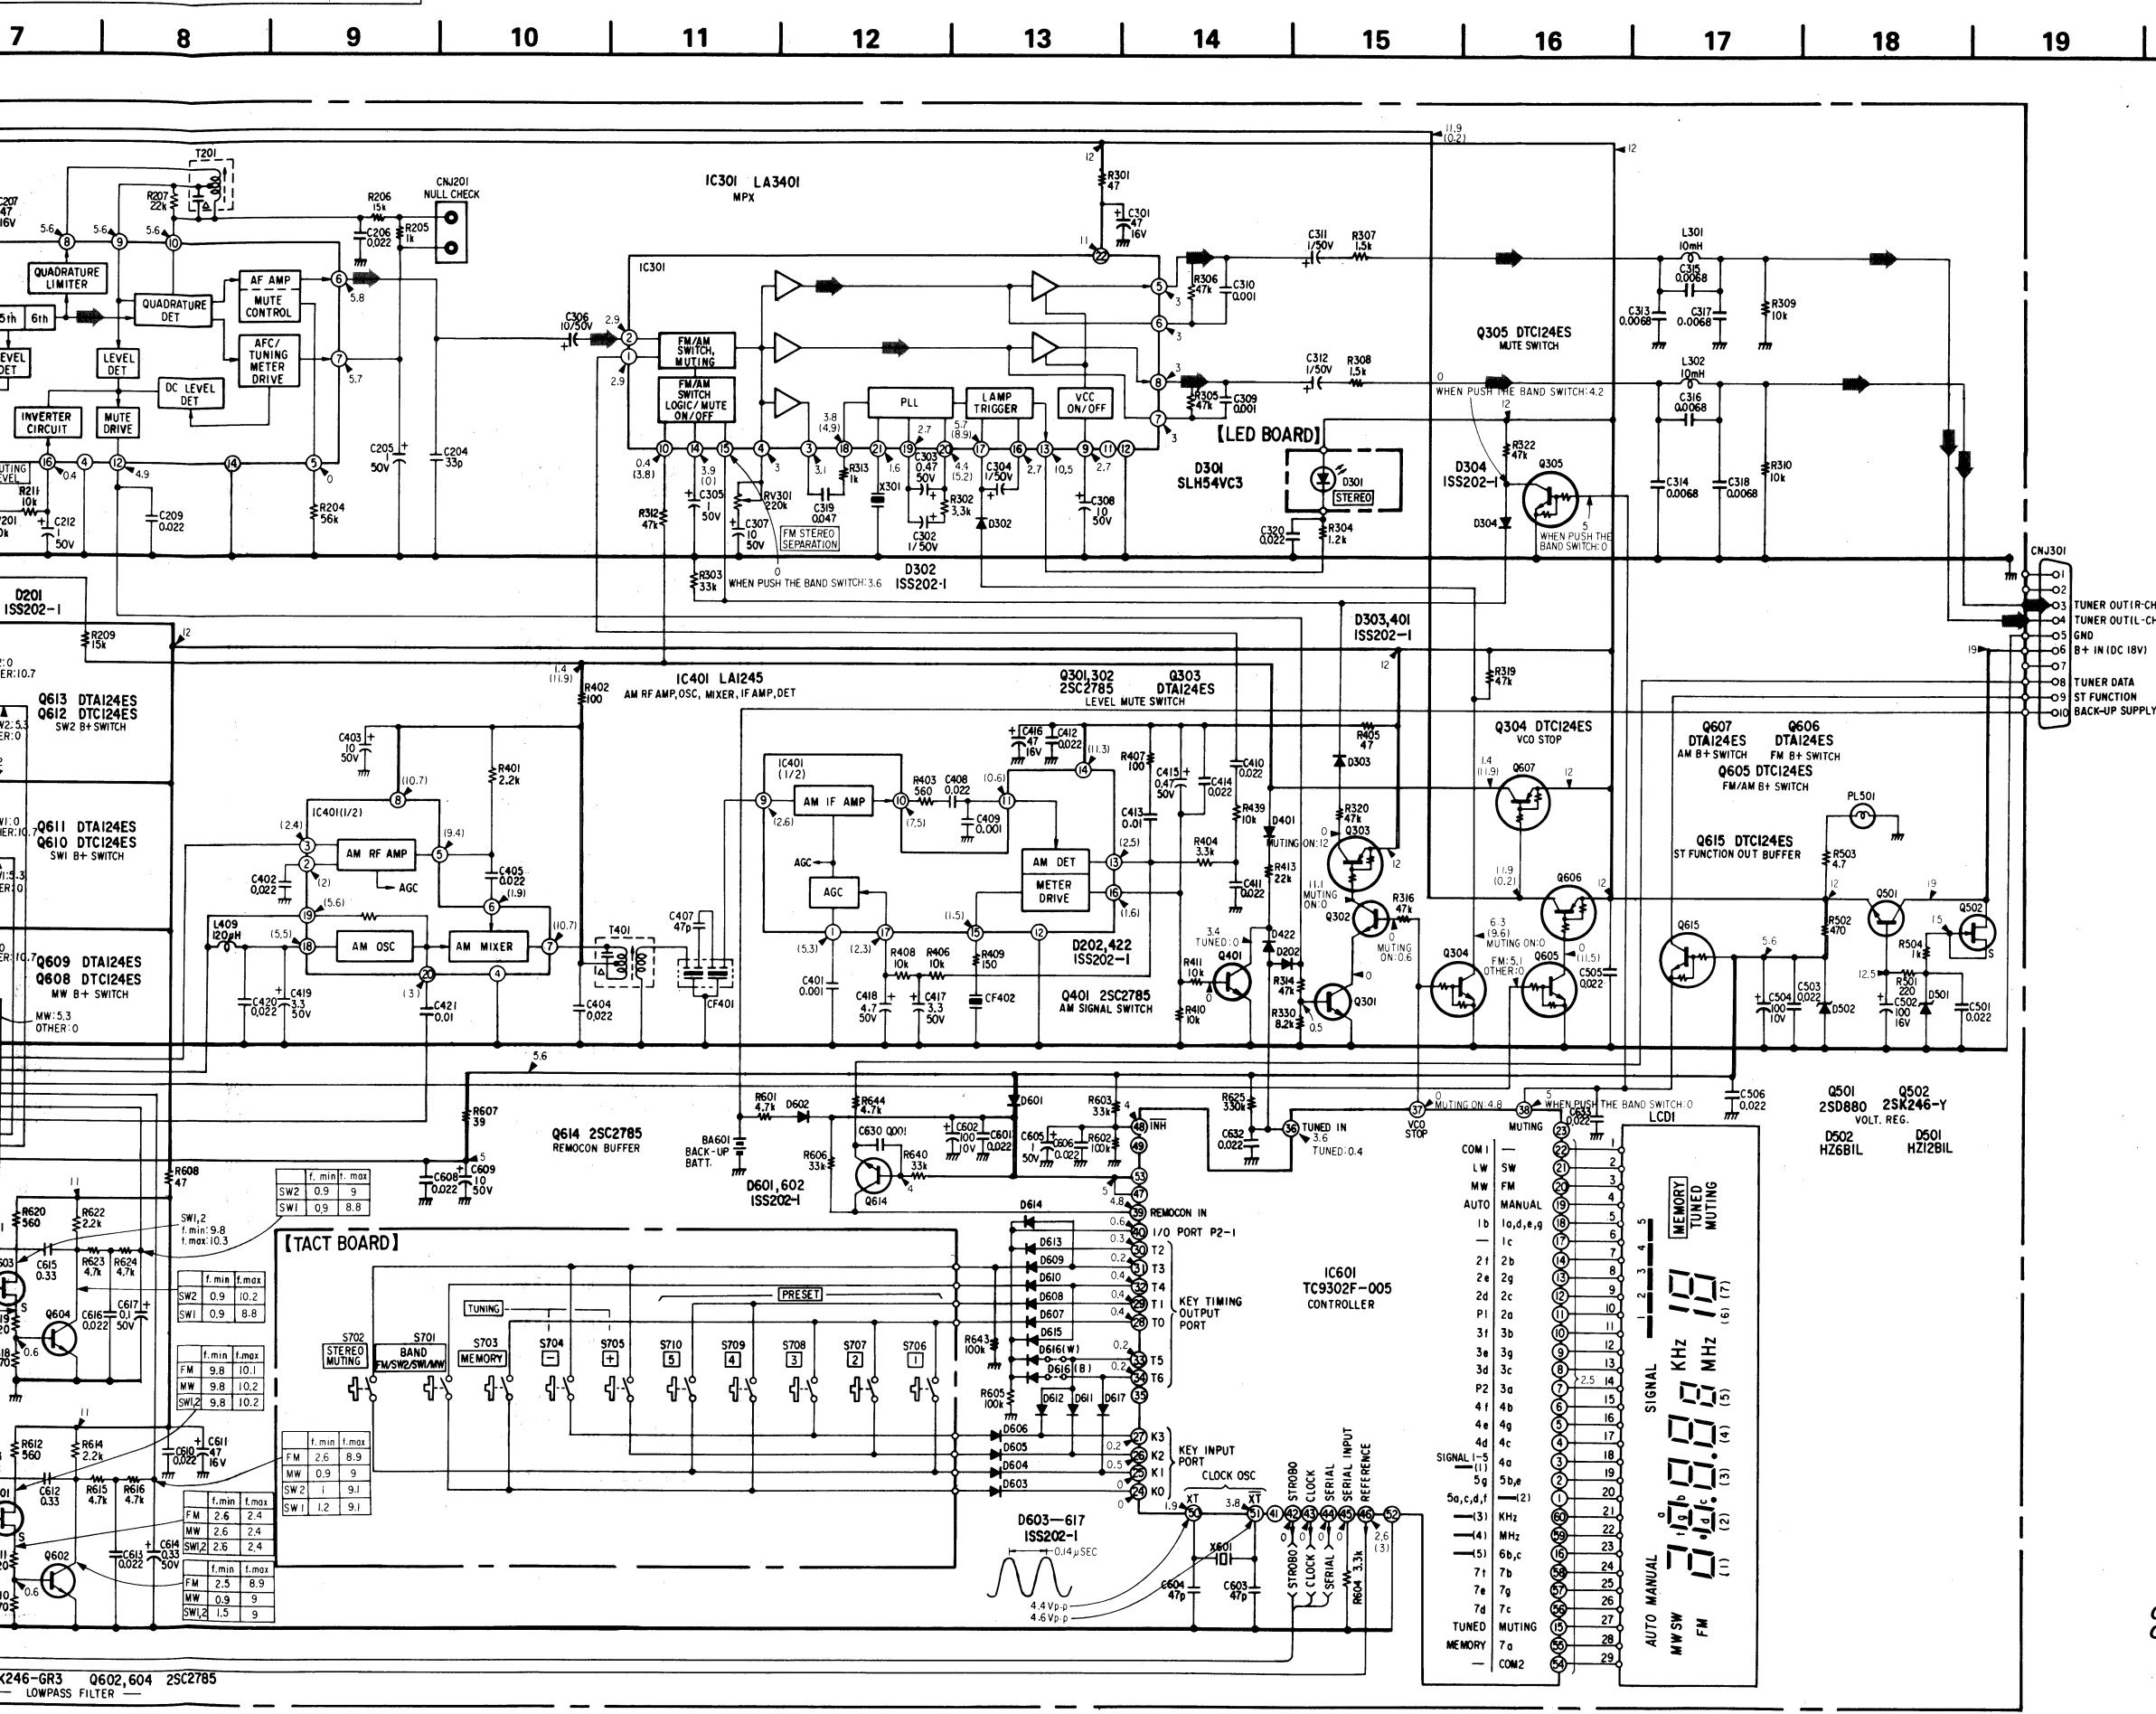

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- : signal path.
- : internal component.
- : B+ bus.
- : adjustment for repair.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under detuned conditions with a VOM (50 $\text{k}\Omega/\text{V}$).
no mark: FM
(): AM
- Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken to ground in detuned mode by using oscilloscope. Voltage variations may be noted due to normal production tolerances.

Note on Mounting Diagram:

- Color code of sleeving over the end of the jacket.

- : indicates side identified with part number.
- : signal path
- : L-CH signal path
- : R-CH signal path
- : B+ pattern

* : When replacing ceramic filters CF201 and CF202, color marking on their bodies should be the same. Connect or remove D616 according to color marking of ceramic filters.

CF201, 202 color marking	D616
black	D616 (B), connected
red	not connected
white	D616 (W), connected

SECTION 4


EXPLODED VIEW AND PARTS LIST

NOTE:

The mechanical parts with no reference number in the exploded views are not supplied.

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The construction parts of an assembled part are indicated with a collation number in the remark column.

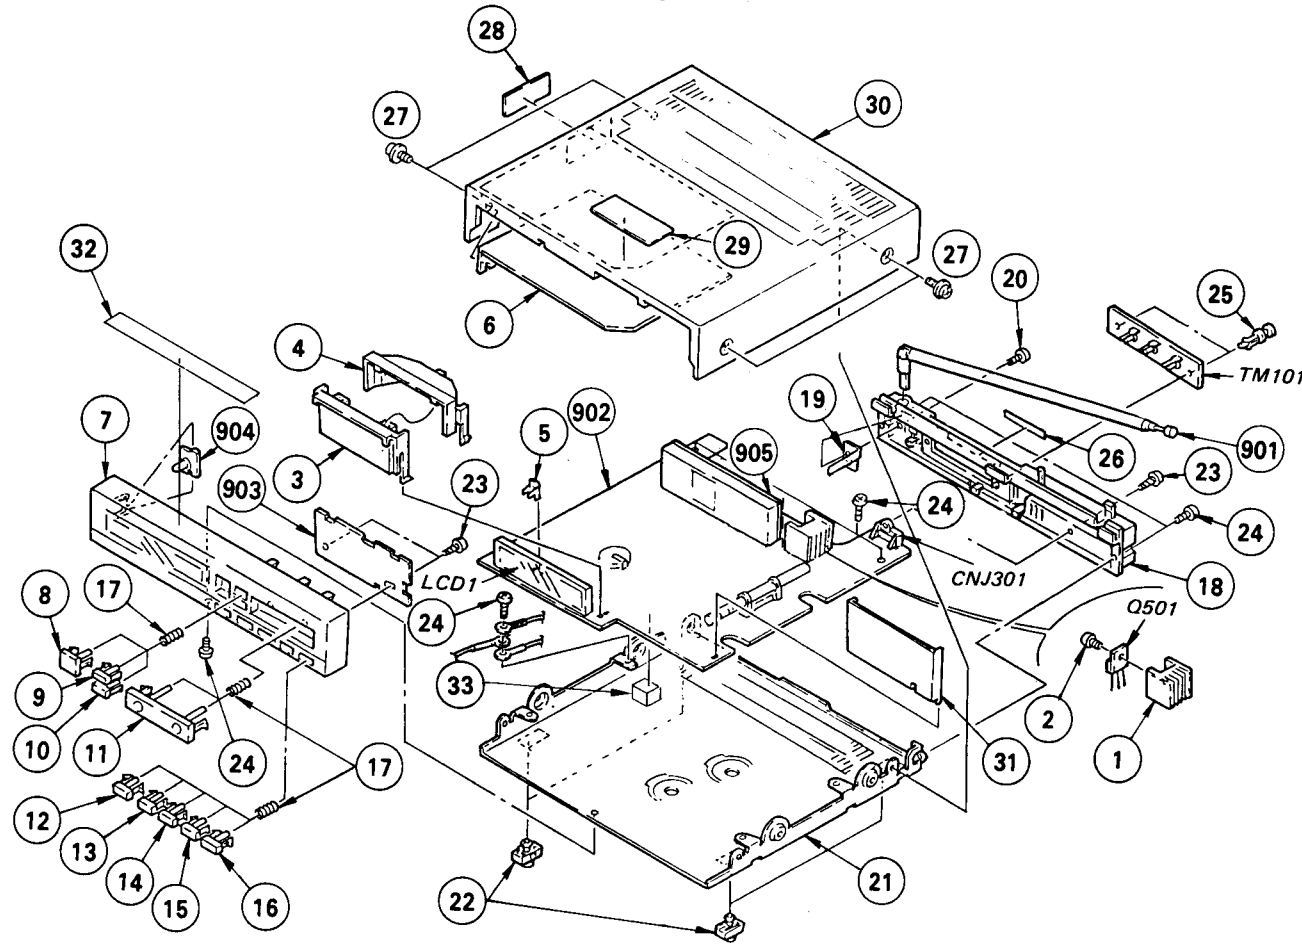

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	*4-363-146-21	HEAT SINK, V.OUT		22	X-4902-937-1	FOOT ASSY, RUBBER	
2	7-685-646-81	SCREW +BV 3X8 (S)		23	7-685-646-71	SCREW +BVTP 3X8 TYPE2 N-S	
3	*4-909-633-01	ILLUMINATOR		24	7-685-871-01	SCREW +BVTT 3X6 (S)	
4	*4-904-515-01	HOUSE, LAMP		25	4-829-039-00	RIVET, NYLON	
5	*4-904-507-01	BLIND, LAMP		26	*4-910-083-01	LABEL, ANTENNA	
6	*4-910-337-01	PLATE, SHIELD		27	4-886-821-21	SCREW, M3 CASE STOPPER	
7	X-4910-083-1	PANEL ASSY, FRONT		28	*4-914-317-01	LABEL, MODEL NUMBER	
8	4-910-093-11	BUTTON, SQUARE (BAND)		29	4-884-927-00	LABEL (SYSTEM), CAUTION	
9	4-910-087-01	BUTTON (B), SQUARE (STEREO MUTING)		30	X-4902-904-1	CASE ASSY (BLACK)	
10	4-910-087-71	BUTTON (B), SQUARE (MOMERY)		31	*4-910-090-01	PLATE, SHIELD	
11	4-910-094-11	BUTTON, SQUARE (TUNING)		32	4-884-873-00	SEAL, INDICATION, METER BAND	
12	4-914-314-01	BUTTON, SQUARE (PRESET 1)		33	9-911-842-XX	CUSHION	
13	4-914-314-11	BUTTON, SQUARE (PRESET 2)		901	1-501-321-11	ANTENNA, TELESCOPIC	
14	4-914-314-21	BUTTON, SQUARE (PRESET 3)		902	*A-4351-441-A	MOUNTED PCB, TUNER	
15	4-914-314-31	BUTTON, SQUARE (PRESET 4)		903	*1-615-520-11	PC BOARD, TACT	
16	4-914-314-41	BUTTON, SQUARE (PRESET 5)		904	*1-615-521-11	PC BOARD, LED	
17	4-886-032-00	SPRING, COMPRESSION		905	*1-615-522-11	PC BOARD, F.E	
18	4-910-098-01	PLATE, JACK		CNJ301	1-562-479-12	SOCKET, CONNECTOR 10P	
19	*4-910-081-01	TERMINAL BOARD, ROD ANTENNA		LCD1	1-806-874-11	INDICATOR, L-CRYSTAL LT5056	
20	7-682-548-09	SCREW +B 3X8		Q501	8-729-288-02	TRANSISTOR 2SD880	
21	*4-902-941-21	CHASSIS		TM101	1-536-901-11	TERMINAL BOARD 3P (ANTENNA)	

SECTION 5

ELECTRICAL PARTS LIST

NOTE:

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: μ F.

RESISTORS

All resistors are in ohms.

F : nonflammable

COILS

MMH : mH, UH : μ H

SEMICONDUCTORS

In each case, U : μ , for example:

UA...: μ A..., UPA...: μ PA..., UPC...: μ PC,

UPD...: μ PD...

ELECTRICAL PARTS				
Ref.No.	Part No.	Description		

901	1-501-321-11	ANTENNA, TELESCOPIC		
902	*A-4351-441-A	MOUNTED PCB, TUNER		
903	*1-615-520-11	PC BOARD, TACT		
904	*1-615-521-11	PC BOARD, LED		
905	*1-615-522-11	PC BOARD, F.E		
BA601	1-528-120-00	BATTERY, LITHIUM (CR-2025)		
C101	1-162-195-31	CERAMIC	4.7PF	10% 50V
C102	1-162-198-31	CERAMIC	8.2PF	10% 50V
C103	1-162-193-31	CERAMIC	3.3PF	10% 50V
C104	1-162-306-31	CERAMIC	0.01MF	20% 16V
C105	1-162-306-31	CERAMIC	0.01MF	20% 16V
C106	1-162-199-31	CERAMIC	10PF	5% 50V
C107	1-162-191-31	CERAMIC	2.2PF	10% 50V
C108	1-162-203-31	CERAMIC	15PF	5% 50V
C109	1-162-286-31	CERAMIC	220PF	10% 50V
C110	1-162-187-31	CERAMIC	1PF	20% 50V
C111	1-162-306-31	CERAMIC	0.01MF	20% 16V
C112	1-162-211-31	CERAMIC	33PF	5% 50V
C113	1-162-203-31	CERAMIC	15PF	5% 50V
C114	1-162-198-31	CERAMIC	8.2PF	10% 50V
C115	1-162-196-31	CERAMIC	5.6PF	10% 50V
C116	1-162-191-31	CERAMIC	2.2PF	20% 50V
C117	1-162-306-31	CERAMIC	0.01MF	20% 16V
C118	1-123-332-00	ELECT	47MF	20% 16V
C119	1-101-005-00	CERAMIC	0.022MF	50V
C201	1-101-005-00	CERAMIC	0.022MF	50V
C202	1-101-005-00	CERAMIC	0.022MF	50V
C203	1-101-005-00	CERAMIC	0.022MF	50V
C204	1-162-211-31	CERAMIC	33PF	5% 50V
C205	1-123-380-00	ELECT	1MF	20% 50V
C206	1-101-005-00	CERAMIC	0.022MF	50V
C207	1-123-332-00	ELECT	47MF	20% 16V
C208	1-101-005-00	CERAMIC	0.022MF	50V
C209	1-101-005-00	CERAMIC	0.022MF	50V
C210	1-101-005-00	CERAMIC	0.022MF	50V
C211	1-101-005-00	CERAMIC	0.022MF	50V
C212	1-123-380-00	ELECT	1MF	20% 50V
C301	1-123-332-00	ELECT	47MF	20% 16V
C302	1-123-380-00	ELECT	1MF	20% 50V
C303	1-123-379-00	ELECT	0.47MF	20% 50V
C304	1-123-380-00	ELECT	1MF	20% 50V
C305	1-123-380-00	ELECT	1MF	20% 50V
C306	1-123-356-00	ELECT	10MF	20% 50V
C307	1-123-356-00	ELECT	10MF	20% 50V
C308	1-123-356-00	ELECT	10MF	20% 50V

ELECTRICAL PARTS				
Ref.No.	Part No.	Description		

C309	1-162-294-31	CERAMIC	0.001MF	10% 50V
C310	1-162-294-31	CERAMIC	0.001MF	10% 50V
C311	1-123-380-00	ELECT	1MF	20% 50V
C312	1-123-380-00	ELECT	1MF	20% 50V
C313	1-162-305-31	CERAMIC	0.0068MF	20% 16V
C314	1-162-305-31	CERAMIC	0.0068MF	20% 16V
C315	1-162-305-31	CERAMIC	0.0068MF	20% 16V
C316	1-162-305-31	CERAMIC	0.0068MF	20% 16V
C317	1-162-305-31	CERAMIC	0.0068MF	20% 16V
C318	1-162-305-31	CERAMIC	0.0068MF	20% 16V
C319	1-130-491-00	MYLAR	0.047MF	5% 50V
C320	1-101-005-00	CERAMIC	0.022MF	50V
C401	1-162-294-31	CERAMIC	0.001MF	10% 50V
C402	1-101-005-00	CERAMIC	0.022MF	50V
C403	1-123-356-00	ELECT	10MF	20% 50V
C404	1-101-005-00	CERAMIC	0.022MF	50V
C405	1-101-005-00	CERAMIC	0.022MF	50V
C407	1-162-215-31	CERAMIC	47PF	5% 50V
C408	1-161-494-00	CERAMIC	0.022MF	30% 25V
C409	1-162-294-31	CERAMIC	0.001MF	10% 50V
C410	1-130-487-00	MYLAR	0.022MF	5% 50V
C411	1-101-005-00	CERAMIC	0.022MF	50V
C412	1-101-005-00	CERAMIC	0.022MF	50V
C413	1-162-306-31	CERAMIC	0.01MF	20% 16V
C414	1-101-005-00	CERAMIC	0.022MF	50V
C415	1-123-379-00	ELECT	0.47MF	20% 50V
C416	1-123-332-00	ELECT	47MF	20% 16V
C417	1-123-382-00	ELECT	3.3MF	20% 50V
C418	1-123-369-00	ELECT	4.7MF	20% 50V
C419	1-123-382-00	ELECT	3.3MF	20% 50V
C420	1-101-005-00	CERAMIC	0.022MF	50V
C421	1-162-306-31	CERAMIC	0.01MF	20% 16V
C422	1-161-494-00	CERAMIC	0.022MF	30% 25V
C423	1-101-005-00	CERAMIC	0.022MF	50V
C424	1-102-949-00	CERAMIC	12PF	5% 50V
C425	1-102-880-00	CERAMIC	15PF	5% 50V
C426	1-104-069-00	POLYSTYRENE	470PF	5% 50V
C427	1-101-005-00	CERAMIC	0.022MF	50V
C428	1-102-803-00	CERAMIC	27PF	5% 50V
C429	1-103-741-00	STYROL	0.0047MF	5% 50V
C430	1-101-005-00	CERAMIC	0.022MF	50V
C431	1-102-942-00	CERAMIC	5PF	5% 50V
C432	1-101-005-00	CERAMIC	0.022MF	50V
C433	1-101-005-00	CERAMIC	0.022MF	50V
C434	1-101-005-00	CERAMIC	0.022MF	50V

SECTION 5 ELECTRICAL PARTS LIST

(E model)

FH-150R
ST-177R

FH-150R
ST-177R

(E model)

NOTE:

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF:μF, PF:μμF.

RESISTORS

All resistors are in ohms.
F : nonflammable

COILS

MMH : mH, UH : μH

SEMICONDUCTORS

In each case, U : μ, for example:

UA....: μA..., UPA....: μPA..., UPC....: μPC,

UPD....: μPD...

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
901	1-501-321-11	ANTENNA, TELESCOPIC			
902	*A-4351-441-A	MOUNTED PCB, TUNER			
903	*1-615-520-11	PC BOARD, TACT			
904	*1-615-521-11	PC BOARD, LED			
905	*1-615-522-11	PC BOARD, F.E			
BA601	1-528-120-00	BATTERY, LITHIUM (CR-2025)			
C101	1-162-195-31	CERAMIC	4.7PF	10%	50V
C102	1-162-198-31	CERAMIC	8.2PF	10%	50V
C103	1-162-193-31	CERAMIC	3.3PF	10%	50V
C104	1-162-306-31	CERAMIC	0.01MF	20%	16V
C105	1-162-306-31	CERAMIC	0.01MF	20%	16V
C106	1-162-199-31	CERAMIC	10PF	5%	50V
C107	1-162-191-31	CERAMIC	2.2PF	10%	50V
C108	1-162-203-31	CERAMIC	15PF	5%	50V
C109	1-162-286-31	CERAMIC	220PF	10%	50V
C110	1-162-187-31	CERAMIC	1PF	20%	50V
C111	1-162-306-31	CERAMIC	0.01MF	20%	16V
C112	1-162-211-31	CERAMIC	33PF	5%	50V
C113	1-162-203-31	CERAMIC	15PF	5%	50V
C114	1-162-198-31	CERAMIC	8.2PF	10%	50V
C115	1-162-196-31	CERAMIC	5.6PF	10%	50V
C116	1-162-191-31	CERAMIC	2.2PF	20%	50V
C117	1-162-306-31	CERAMIC	0.01MF	20%	16V
C118	1-123-332-00	ELECT	47MF	20%	16V
C119	1-101-005-00	CERAMIC	0.022MF		50V
C201	1-101-005-00	CERAMIC	0.022MF		50V
C202	1-101-005-00	CERAMIC	0.022MF		50V
C203	1-101-005-00	CERAMIC	0.022MF		50V
C204	1-162-211-31	CERAMIC	33PF	5%	50V
C205	1-123-380-00	ELECT	1MF	20%	50V
C206	1-101-005-00	CERAMIC	0.022MF		50V
C207	1-123-332-00	ELECT	47MF	20%	16V
C208	1-101-005-00	CERAMIC	0.022MF		50V
C209	1-101-005-00	CERAMIC	0.022MF		50V
C210	1-101-005-00	CERAMIC	0.022MF		50V
C211	1-101-005-00	CERAMIC	0.022MF		50V
C212	1-123-380-00	ELECT	1MF	20%	50V
C301	1-123-332-00	ELECT	47MF	20%	16V
C302	1-123-380-00	ELECT	1MF	20%	50V
C303	1-123-379-00	ELECT	0.47MF	20%	50V
C304	1-123-380-00	ELECT	1MF	20%	50V
C305	1-123-380-00	ELECT	1MF	20%	50V
C306	1-123-356-00	ELECT	10MF	20%	50V
C307	1-123-356-00	ELECT	10MF	20%	50V
C308	1-123-356-00	ELECT	10MF	20%	50V

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C309	1-162-294-31	CERAMIC	0.001MF	10%	50V
C310	1-162-294-31	CERAMIC	0.001MF	10%	50V
C311	1-123-380-00	ELECT	1MF	20%	50V
C312	1-123-380-00	ELECT	1MF	20%	50V
C313	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C314	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C315	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C316	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C317	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C318	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C319	1-130-491-00	MYLAR	0.047MF	5%	50V
C320	1-101-005-00	CERAMIC	0.022MF		50V
C401	1-162-294-31	CERAMIC	0.001MF	10%	50V
C402	1-101-005-00	CERAMIC	0.022MF		50V
C403	1-123-356-00	ELECT	10MF	20%	50V
C404	1-101-005-00	CERAMIC	0.022MF		50V
C405	1-101-005-00	CERAMIC	0.022MF		50V
C407	1-162-215-31	CERAMIC	47PF	5%	50V
C408	1-161-494-00	CERAMIC	0.022MF	30%	25V
C409	1-162-294-31	CERAMIC	0.001MF	10%	50V
C410	1-130-487-00	MYLAR	0.022MF	5%	50V
C411	1-101-005-00	CERAMIC	0.022MF		50V
C412	1-101-005-00	CERAMIC	0.022MF		50V
C413	1-162-306-31	CERAMIC	0.01MF	20%	16V
C414	1-101-005-00	CERAMIC	0.022MF		50V
C415	1-123-379-00	ELECT	0.47MF	20%	50V
C416	1-123-332-00	ELECT	47MF	20%	16V
C417	1-123-382-00	ELECT	3.3MF	20%	50V
C418	1-123-369-00	ELECT	4.7MF	20%	50V
C419	1-123-382-00	ELECT	3.3MF	20%	50V
C420	1-101-005-00	CERAMIC	0.022MF		50V
C421	1-162-306-31	CERAMIC	0.01MF	20%	16V
C422	1-161-494-00	CERAMIC	0.022MF	30%	25V
C423	1-101-005-00	CERAMIC	0.022MF		50V
C424	1-102-949-00	CERAMIC	12PF	5%	50V
C425	1-102-880-00	CERAMIC	15PF	5%	50V
C426	1-104-069-00	POLYSTYRENE	470PF	5%	50V
C427	1-101-005-00	CERAMIC	0.022MF		50V
C428	1-102-803-00	CERAMIC	27PF	5%	50V
C429	1-103-741-00	STYROL	0.0047MF	5%	50V
C430	1-101-005-00	CERAMIC	0.022MF		50V
C431	1-102-942-00	CERAMIC	5PF	5%	50V
C432	1-101-005-00	CERAMIC	0.022MF		50V
C433	1-101-005-00	CERAMIC	0.022MF		50V
C434	1-101-005-00	CERAMIC	0.022MF		50V

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C435	1-102-754-00	CERAMIC	39PF	5%	50V
C436	1-130-484-00	MYLAR	0.012MF	5%	50V
C437	1-101-005-00	CERAMIC	0.022MF		50V
C438	1-101-005-00	CERAMIC	0.022MF		50V
C439	1-101-005-00	CERAMIC	0.022MF		50V
C440	1-101-005-00	CERAMIC	0.022MF		50V
C441	1-101-005-00	CERAMIC	0.022MF		50V
C443	1-101-005-00	CERAMIC	0.022MF		50V
C444	1-101-005-00	CERAMIC	0.022MF		50V
C445	1-101-005-00	CERAMIC	0.022MF		50V
C446	1-101-005-00	CERAMIC	0.022MF		50V
C447	1-123-381-00	ELECT	2.2MF	20%	50V
C448	1-123-380-00	ELECT	1MF	20%	50V
C449	1-123-380-00	ELECT	1MF	20%	50V
C501	1-101-005-00	CERAMIC	0.022MF		50V
C502	1-123-333-00	ELECT	100MF	20%	16V
C503	1-101-005-00	CERAMIC	0.022MF		50V
C504	1-123-307-00	ELECT	100MF	20%	10V
C505	1-101-005-00	CERAMIC	0.022MF		50V
C506	1-101-005-00	CERAMIC	0.022MF		50V
C601	1-101-005-00	CERAMIC	0.022MF		50V
C602	1-123-307-00	ELECT	100MF	20%	10V
C603	1-102-852-00	CERAMIC	47PF	5%	50V
C604	1-102-852-00	CERAMIC	47PF	5%	50V
C605	1-123-380-00	ELECT	1MF	20%	50V
C606	1-101-005-00	CERAMIC	0.022MF		50V
C607	1-162-306-31	CERAMIC	0.01MF	20%	16V
C608	1-101-005-00	CERAMIC	0.022MF		50V
C609	1-123-356-00	ELECT	10MF	20%	50V
C610	1-101-005-00	CERAMIC	0.022MF		50V
C611	1-123-332-00	ELECT	47MF	20%	16V
C612	1-136-171-00	FILM	0.33MF	5%	50V
C613	1-130-487-00	MYLAR	0.022MF	5%	50V
C614	1-123-609-00	ELECT	0.33MF	20%	50V
C615	1-136-171-00	FILM	0.33MF	5%	50V
C616	1-130-487-00	MYLAR	0.022MF	5%	50V
C617	1-123-607-00	ELECT	0.1MF	20%	50V
C630	1-162-294-31	CERAMIC	0.001MF	10%	50V
C631	1-101-005-00	CERAMIC	0.022MF		50V
C632	1-101-005-00	CERAMIC	0.022MF		50V
C633	1-101-005-00	CERAMIC	0.022MF		50V
C634	1-161-494-00	CERAMIC	0.022MF	30%	25V
C635	1-101-006-00	CERAMIC	0.047MF		50V
CF201	1-527-968-00	FILTER, CERAMIC			
CF202	1-527-968-00	FILTER, CERAMIC			
CF401	1-527-937-00	FILTER, CERAMIC			
CF402	1-527-981-00	FILTER, CERAMIC			
CNJ101	*1-562-327-00	SOCKET, CONNECTOR 3P			
CNJ201	*1-560-060-00	PIN, CONNECTOR 2P (NULL CHECK POINT)			
CNJ301	1-562-479-12	SOCKET, CONNECTOR 10P			
CNJ601	*1-560-604-00	PIN, CONNECTOR 5P			
CNJ602	*1-560-602-00	PIN, CONNECTOR 3P			
CNJ603	*1-560-603-00	PIN, CONNECTOR 4P			
CT401	1-141-227-00	CAP, CERAMIC TRIMMER			
CT402	1-141-227-00	CAP, CERAMIC TRIMMER			
CT403	1-141-227-00	CAP, CERAMIC TRIMMER			
CT404	1-141-227-00	CAP, CERAMIC TRIMMER			
CT405	1-141-227-00	CAP, CERAMIC TRIMMER			
CT406	1-141-227-00	CAP, CERAMIC TRIMMER			

ELECTRICAL PARTS

Ref.No.	Part No.	Description
D101	8-719-918-45	DIODE KV1310
D102	8-719-918-45	DIODE KV1310
D103	8-719-918-45	DIODE KV1310
D105	8-719-107-94	DIODE 1SS202-1
D201	8-719-107-94	DIODE 1SS202-1
D202	8-719-107-94	DIODE 1SS202-1
D301	8-719-904-08	DIODE SLH54VC3
D302	8-719-107-94	DIODE 1SS202-1
D303	8-719-107-94	DIODE 1SS202-1
D304	8-719-107-94	DIODE 1SS202-1
D401	8-719-107-94	DIODE 1SS202-1
D402	8-719-902-79	DIODE KV1236Z
D403	8-719-902-79	DIODE KV1236Z
D404	8-719-903-27	DIODE 1SS168
D405	8-719-903-27	DIODE 1SS168
D406	8-719-903-27	DIODE 1SS168
D407	8-719-903-27	DIODE 1SS168
D408	8-719-903-27	DIODE 1SS168
D409	8-719-903-27	DIODE 1SS168
D410	8-719-903-27	DIODE 1SS168
D411	8-719-903-27	DIODE 1SS168
D412	8-719-903-27	DIODE 1SS168
D413	8-719-903-27	DIODE 1SS168
D414	8-719-903-27	DIODE 1SS168
D415	8-719-903-27	DIODE 1SS168
D416	8-719-903-27	DIODE 1SS168
D417	8-719-903-27	DIODE 1SS168
D418	8-719-903-27	DIODE 1SS168
D421	8-719-903-27	DIODE 1SS168
D422	8-719-107-94	DIODE 1SS202-1
D501	8-719-910-23	DIODE HZ12A3L
D502	8-719-910-64	DIODE HZ6B1L
D601	8-719-107-94	DIODE 1SS202-1
D602	8-719-107-94	DIODE 1SS202-1
D603	8-719-107-94	DIODE 1SS202-1
D604	8-719-107-94	DIODE 1SS202-1
D605	8-719-107-94	DIODE 1SS202-1
D606	8-719-107-94	DIODE 1SS202-1
D607	8-719-107-94	DIODE 1SS202-1
D608	8-719-107-94	DIODE 1SS202-1
D609	8-719-107-94	DIODE 1SS202-1
D610	8-719-107-94	DIODE 1SS202-1
D611	8-719-107-94	DIODE 1SS202-1
D612	8-719-107-94	DIODE 1SS202-1
D613	8-719-107-94	DIODE 1SS202-1
D614	8-719-107-94	DIODE 1SS202-1
D615	8-719-107-94	DIODE 1SS202-1
D616	8-719-107-94	DIODE 1SS202-1
D617	8-719-107-94	DIODE 1SS202-1
IC201	8-759-812-31	IC LA1231
IC301	8-759-801-80	IC LA3401
IC401	8-759-812-45	IC LA1245
IC601	8-759-204-24	IC TC9302F-005
IC602	8-759-202-63	IC TC9172P
L101	*1-422-214-11	COIL, AIR-CORE
L102	*1-422-040-00	COIL, AIR-CORE
L103	*1-422-081-00	COIL (WITH CORE)
L104	*1-422-039-00	COIL, AIR-CORE

ELECTRICAL PARTS

Ref.No.	Part No.	Description
L105	*1-459-396-00	COIL (WITH CORE)
L301	1-408-924-00	MICRO INDUCTOR 10MMH
L302	1-408-924-00	MICRO INDUCTOR 10MMH
L401	1-402-152-11	ANTENNA, FERRITE-ROD (MW)
L402	1-406-089-11	COIL (OSC)
L403	1-405-955-00	COIL (OSC)
L404	1-406-106-11	COIL (OSC) SW2
L405	1-401-910-00	COIL (ANT)
L406	1-401-985-00	COIL (ANT)
L407	1-408-202-00	MICRO INDUCTOR 390UH
L408	1-408-202-00	MICRO INDUCTOR 390UH
L409	1-408-196-00	MICRO INDUCTOR 120UH
L410	1-408-202-00	MICRO INDUCTOR 390UH
L411	1-408-202-00	MICRO INDUCTOR 390UH
L412	1-408-202-00	MICRO INDUCTOR 390UH
L413	1-408-551-00	MICRO INDUCTOR 1UH
L414	1-408-202-00	MICRO INDUCTOR 390UH
LCD1	1-806-874-11	INDICATOR, L-CRYSTAL LT5056
PL501	1-518-511-21	LAMP, PILOT, YELLOW
Q101	8-729-353-52	TRANSISTOR 2SC535
Q102	8-729-353-52	TRANSISTOR 2SC535
Q103	8-729-672-42	TRANSISTOR 2SC2724-C
Q104	8-729-672-42	TRANSISTOR 2SC2724-C
Q201	8-729-672-42	TRANSISTOR 2SC2724-C
Q301	8-729-606-33	TRANSISTOR 2SC2603-F
Q302	8-729-606-33	TRANSISTOR 2SC2603-F
Q303	8-729-900-63	TRANSISTOR DTA124ES
Q304	8-729-900-36	TRANSISTOR DTC124ES
Q305	8-729-900-36	TRANSISTOR DTC124ES
Q401	8-729-606-33	TRANSISTOR 2SC2603-F
Q501	8-729-288-02	TRANSISTOR 2SD880
Q502	8-729-224-61	TRANSISTOR 2SK246-Y
Q601	8-729-201-56	TRANSISTOR 2SK246-GR2
Q602	8-729-606-33	TRANSISTOR 2SC2603-F
Q603	8-729-201-56	TRANSISTOR 2SK246-GR2
Q604	8-729-606-33	TRANSISTOR 2SC2603-F
Q605	8-729-900-36	TRANSISTOR DTC124ES
Q606	8-729-900-63	TRANSISTOR DTA124ES
Q607	8-729-900-63	TRANSISTOR DTA124ES
Q608	8-729-900-36	TRANSISTOR DTC124ES
Q609	8-729-900-63	TRANSISTOR DTA124ES
Q610	8-729-900-36	TRANSISTOR DTC124ES
Q611	8-729-900-63	TRANSISTOR DTA124ES
Q612	8-729-900-36	TRANSISTOR DTC124ES
Q613	8-729-900-63	TRANSISTOR DTA124ES
Q614	8-729-606-33	TRANSISTOR 2SC2603-F
Q615	8-729-900-36	TRANSISTOR DTC124ES
R101	1-249-441-11	CARBON 100K 5% 1/6W
R102	1-247-901-00	CARBON 820K 5% 1/6W
R103	1-249-405-11	CARBON 100 5% 1/6W
R104	1-249-405-11	CARBON 100 5% 1/6W
R105	1-249-441-11	CARBON 100K 5% 1/6W
R106	1-247-901-00	CARBON 820K 5% 1/6W
R107	1-247-819-00	CARBON 330 5% 1/6W
R108	1-247-795-00	CARBON 33 5% 1/6W
R109	1-249-405-11	CARBON 100 5% 1/6W
R110	1-247-893-00	CARBON 390K 5% 1/6W
R111	1-249-425-11	CARBON 4.7K 5% 1/6W
R112	1-247-859-00	CARBON 15K 5% 1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R113	1-247-893-00	CARBON	390K	5%	1/6W
R114	1-249-405-11	CARBON	100	5%	1/6W
R115	1-247-799-00	CARBON	47	5%	1/4W F
R201	1-247-901-00	CARBON	820K	5%	1/6W
R202	1-247-819-00	CARBON	330	5%	1/6W
R203	1-247-819-00	CARBON	330	5%	1/6W
R204	1-247-873-00	CARBON	56K	5%	1/6W
R205	1-247-831-00	CARBON	1K	5%	1/6W
R206	1-247-859-00	CARBON	15K	5%	1/6W
R207	1-249-433-11	CARBON	22K	5%	1/6W
R208	1-247-799-00	CARBON	47	5%	1/4W
R209	1-247-859-00	CARBON	15K	5%	1/6W
R210	1-249-441-11	CARBON	100K	5%	1/6W
R211	1-249-429-11	CARBON	10K	5%	1/6W
R301	1-247-799-00	CARBON	47	5%	1/6W
R302	1-249-423-00	CARBON	3.3K	5%	1/6W
R303	1-249-435-11	CARBON	33K	5%	1/6W
R304	1-247-833-00	CARBON	1.2K	5%	1/6W
R305	1-249-437-11	CARBON	47K	5%	1/6W
R306	1-249-437-11	CARBON	47K	5%	1/6W
R307	1-249-419-11	CARBON	1.5K	5%	1/6W
R308	1-249-419-11	CARBON	1.5K	5%	1/6W
R309	1-249-429-11	CARBON	10K	5%	1/6W
R310	1-249-429-11	CARBON	10K	5%	1/6W
R312	1-249-437-11	CARBON	47K	5%	1/6W
R313	1-247-831-00	CARBON	1K	5%	1/6W
R314	1-249-437-11	CARBON	47K	5%	1/6W
R316	1-249-437-11	CARBON	47K	5%	1/6W
R319	1-249-437-11	CARBON	47K	5%	1/6W
R320	1-249-437-11	CARBON	47K	5%	1/6W
R322	1-249-437-11	CARBON	47K	5%	1/6W
R330	1-247-853-00	CARBON	8.2K	5%	1/6W
R401	1-249-421-11	CARBON	2.2K	5%	1/6W
R402	1-249-405-11	CARBON	100	5%	1/6W
R403	1-247-825-00	CARBON	560	5%	1/6W
R404	1-249-423-00	CARBON	3.3K	5%	1/6W
R405	1-247-799-00	CARBON	47	5%	1/6W
R406	1-249-429-11	CARBON	10K	5%	1/6W
R407	1-249-405-11	CARBON	100	5%	1/6W
R408	1-249-429-11	CARBON	10K	5%	1/6W
R409	1-247-811-00	CARBON	150	5%	1/6W
R410	1-249-429-11	CARBON	10K	5%	1/6W
R411	1-249-429-11	CARBON	10K	5%	1/6W
R412	1-247-859-00	CARBON	15K	5%	1/6W
R413	1-249-433-11	CARBON	22K	5%	1/6W
R414	1-249-429-11	CARBON	10K	5%	1/6W
R415	1-249-429-11	CARBON	10K	5%	1/6W
R418	1-247-857-00	CARBON	12K	5%	1/6W
R419	1-249-429-11	CARBON	10K	5%	1/6W
R420	1-249-429-11	CARBON	10K	5%	1/6W
R421	1-247-857-00	CARBON	12K	5%	1/6W
R422	1-247-851-00	CARBON	6.8K	5%	1/6W
R423	1-247-825-00	CARBON	560	5%	1/6W
R424	1-247-857-00	CARBON	12K	5%	1/6W
R425	1-247-857-00	CARBON	12K	5%	1/6W
R426	1-247-857-00	CARBON	12K	5%	1/6W
R427	1-247-857-00	CARBON	12K	5%	1/6W

ELECTRICAL PARTS

<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>			
R428	1-247-857-00	CARBON	12K	5%	1/6W
R429	1-247-857-00	CARBON	12K	5%	1/6W
R430	1-247-857-00	CARBON	12K	5%	1/6W
R431	1-247-857-00	CARBON	12K	5%	1/6W
R439	1-249-429-11	CARBON	10K	5%	1/6W
R440	1-247-857-00	CARBON	12K	5%	1/6W
R441	1-247-879-00	CARBON	100K	5%	1/6W
R501	1-247-815-00	CARBON	220	5%	1/6W
R502	1-247-823-00	CARBON	470	5%	1/6W
R503	1-247-775-00	CARBON	4.7	5%	1/6W
R504	1-247-831-00	CARBON	1K	5%	1/6W
R601	1-249-425-11	CARBON	4.7K	5%	1/6W
R602	1-249-441-11	CARBON	100K	5%	1/6W
R603	1-249-435-11	CARBON	33K	5%	1/6W
R604	1-249-423-11	CARBON	3.3K	5%	1/6W
R605	1-249-441-11	CARBON	100K	5%	1/6W
R606	1-249-435-11	CARBON	33K	5%	1/6W
R607	1-247-797-00	CARBON	39	5%	1/6W
R608	1-247-799-00	CARBON	47	5%	1/6W
R609	1-249-437-11	CARBON	47K	5%	1/6W
R610	1-247-817-00	CARBON	270	5%	1/6W
R611	1-247-829-00	CARBON	820	5%	1/6W
R612	1-247-825-00	CARBON	560	5%	1/6W
R613	1-249-435-11	CARBON	33K	5%	1/6W
R614	1-249-421-11	CARBON	2.2K	5%	1/6W
R615	1-249-425-11	CARBON	4.7K	5%	1/6W
R616	1-249-425-11	CARBON	4.7K	5%	1/6W
R617	1-249-437-11	CARBON	47K	5%	1/6W
R618	1-247-817-00	CARBON	270	5%	1/6W
R619	1-247-829-00	CARBON	820	5%	1/6W
R620	1-247-825-00	CARBON	560	5%	1/6W
R621	1-249-435-11	CARBON	33K	5%	1/6W
R622	1-249-421-11	CARBON	2.2K	5%	1/6W
R623	1-249-425-11	CARBON	4.7K	5%	1/6W
R624	1-249-425-11	CARBON	4.7K	5%	1/6W
R625	1-247-891-00	CARBON	330K	5%	1/6W
R640	1-249-435-11	CARBON	33K	5%	1/6W
R643	1-249-441-11	CARBON	100K	5%	1/6W
R644	1-249-425-11	CARBON	4.7K	5%	1/6W
RV201	1-228-997-00	RES, ADJ, CARBON 100K			
RV301	1-228-998-00	RES, ADJ, CARBON 220K			

ELECTRICAL PARTS

<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>
S701	1-554-303-21	SWITCH, KEY BOARD (BAND)
S702	1-554-303-21	SWITCH, KEY BOARD (STEREO MUTING)
S703	1-554-303-21	SWITCH, KEY BOARD (MEMORY)
S704	1-554-303-21	SWITCH, KEY BOARD (TUNING -)
S705	1-554-303-21	SWITCH, KEY BOARD (TUNING +)
S706	1-554-303-21	SWITCH, KEY BOARD (PRESET 1)
S707	1-554-303-21	SWITCH, KEY BOARD (PRESET 2)
S708	1-554-303-21	SWITCH, KEY BOARD (PRESET 3)
S709	1-554-303-21	SWITCH, KEY BOARD (PRESET 4)
S710	1-554-303-21	SWITCH, KEY BOARD (PRESET 5)
T201	1-404-419-00	COIL, DISCRIMINATOR
T401	1-404-535-11	COIL (WITH IFT)
TM101	1-536-901-11	TERMINAL BOARD 3P (ANTENNA)
X301	1-567-250-11	OSCILLATOR, CERAMIC
X601	1-567-125-00	VIBRATOR, CRYSTAL

INTEGRATED STEREO AMPLIFIER (TA-177R)


Note: TA-177R is an integrated stereo amplifier unit in FH-150R.

1. IC'S OPERATION

1-1. TC9176P (IC203)

TC9176P is an IC served as electronic volume.

This IC is capable of controlling the attenuation from 0 dB to -76 dB at intervals of 2 dB.

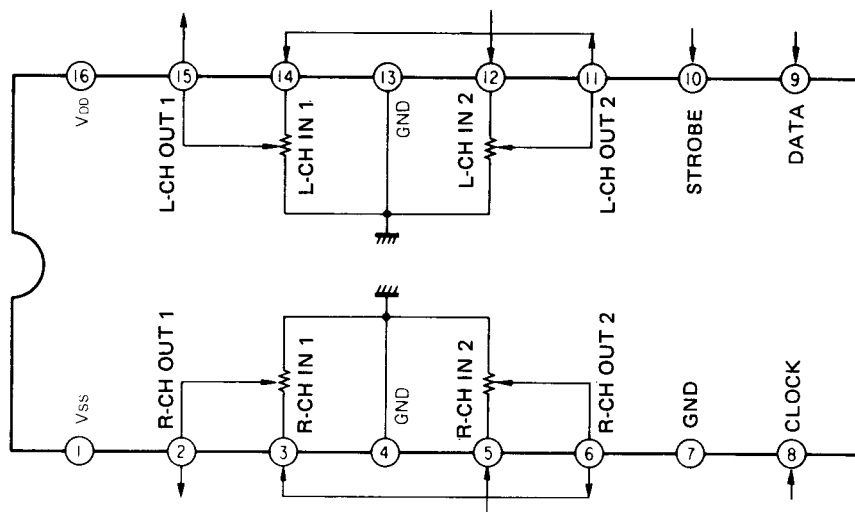


• Pin Functions

- ② R-CH OUT 1, ⑮ L-CH OUT 1
Output pin for 10 dB step attenuator.
The signal applied to L/R-CH IN 1 attenuates 8 steps from 0 to -70 dB at intervals of 10 dB.
- ③ R-CH IN 1, ⑭ L-CH IN 1
Input pin for 10 dB step attenuator.
- ⑥ R-CH OUT 2, ⑪ L-CH OUT 2
Output pin for 2 dB step attenuator.
The signal applied to L/R-CH IN 2 attenuates 5 steps from 0 to -8 dB at intervals of 2 dB.
- ⑤ R-CH IN 2, ⑫ L-CH IN 2
Input pin for 2 dB step attenuator.

The attenuator is composed of the resistors and the analog switches.

Attenuator 1 attenuates 10 dB steps from 0 to -70 dB and attenuator 2 attenuates 2 dB steps from 0 to 8 dB.


Total attenuation is 2 dB steps from 0 to -76 dB.

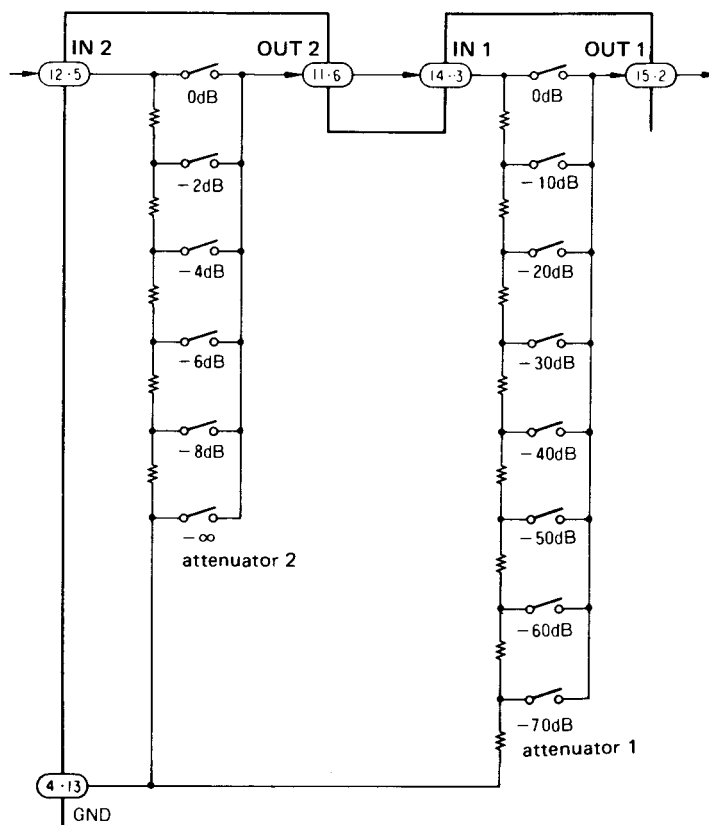

⑨ DATA

This pin is input the serial data from IC301.

Data contain attenuation value and selection of L-CH or R-CH, and these are composed of 20 bits.

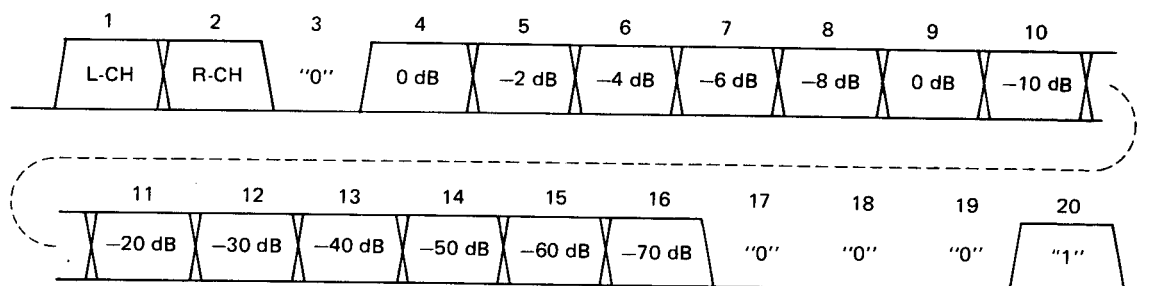

⑧ CLOCK


This pin is input the clock signal.

Data are input to the pin ⑨ that is synchronized by clock signal.

⑩ STROBE


This pin is input the strobe pulse.

Data are latched, when strobe pulse is input to pin ⑩.


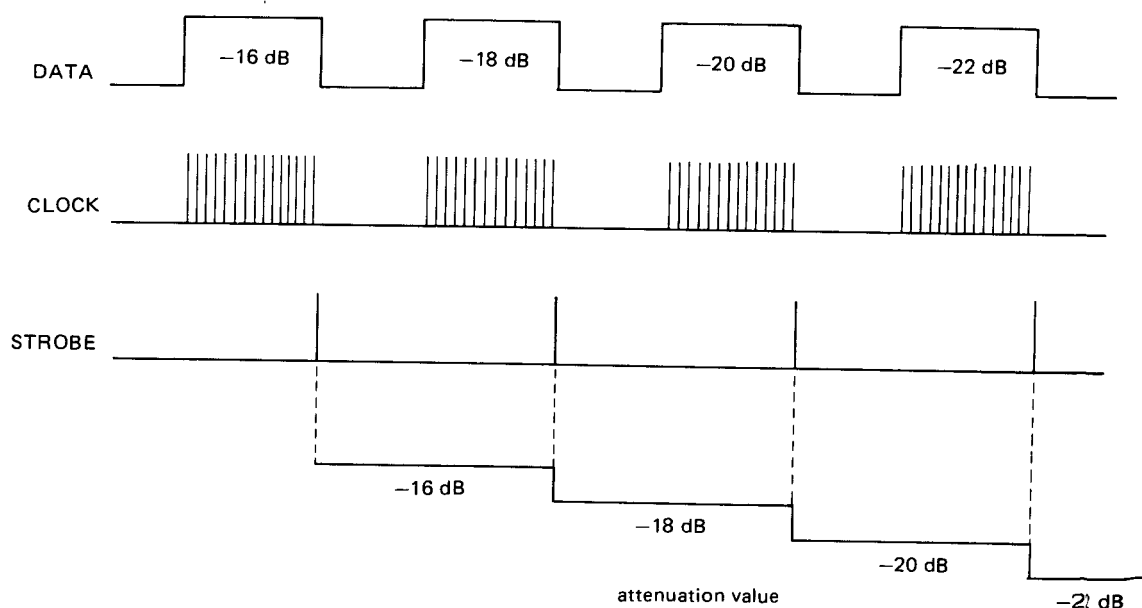


1-2. M50765-440SP (IC301)

M50765-440SP decodes the serial data of remote controller and feeds the volume control data to IC203.

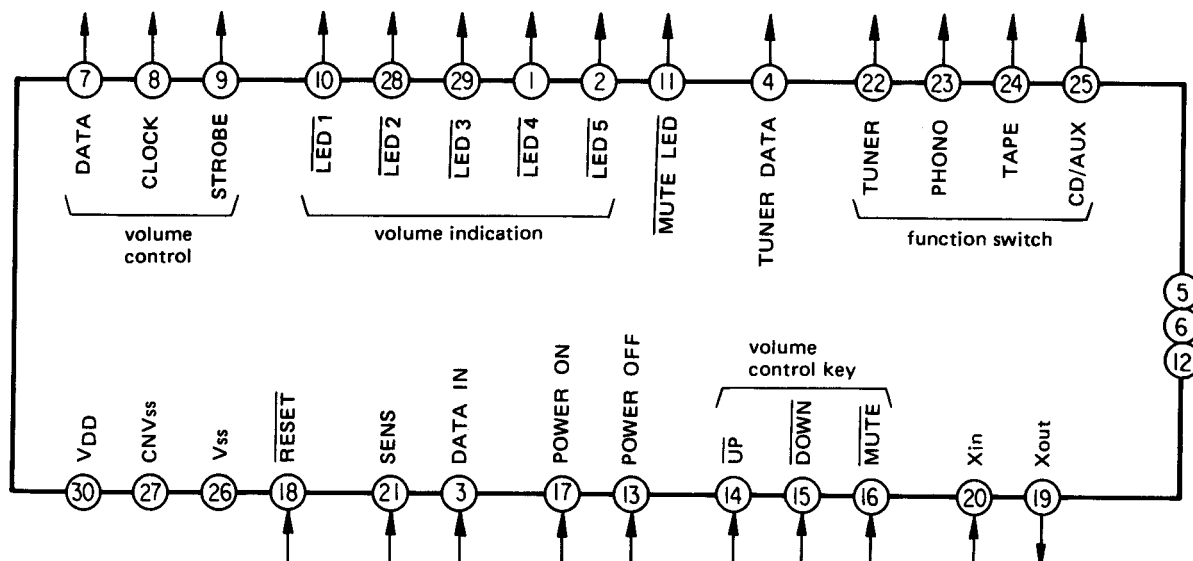

• Pin Functions

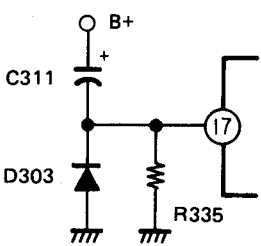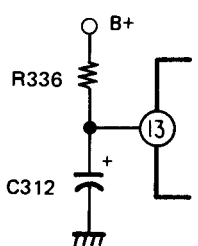Pin Number	Pin Name	I/O	Function
3	DATA IN	Input	This pin is input the serial data of remote controller.
21	SENS	Input	Input pin for starting transmission of the remote controller data. Input data ③ DATA is read at the beginning of the signal input to this pin.
17 13	POWER ON POWER OFF	Input Input	<p>When power is turned on, pin ①⑦ is input high level pulse from differential circuit and IC will be in standby mode.</p> <p>Second, pin ①③ goes high level by integrating circuit and IC will be started.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <p>After power is turned off, ①③ pin goes low level by integrating circuit and IC detects power off.</p> <p>IC's data (volume data) are kept by back-up battery.</p>
14 15	UP DOWN	Input Input	<p>Input pin for volume control.</p> <p>When the signal is applied to these pins, ⑦ DATA, ⑧ CLOCK and ⑨ STROBE output the volume control data to IC203.</p>
16	MUTE	Input	Input pin for switching MUTING -20 dB on/off.
22	TUNER	Output	<p>Output pin for switching the mode to TUNER.</p> <p>When ③ DATA IN inputs the data of TUNER, this pin goes high.</p>


Pin Number	Pin Name	I/O	Function																																															
23	PHONO	Output	Output pin for switching the mode to PHONO. When ③ DATA IN inputs the data of PHONO, this pin goes high.																																															
24	TAPE	Output	Output pin for switching the mode to TAPE. When ③ DATA IN inputs the data of TAPE, this goes high.																																															
25	CD/AUX	Output	Output pin for switching the mode to CD/AUX. When ③ DATA IN inputs the data of CD/AUX, this pin goes high.																																															
11	MUTE LED	Output	Output pin for switching the MUTING -20 dB LED on/off.																																															
10 28 29 1 2	LED 1 LED 2 LED 3 LED 4 LED 5	Output	Output pin for indicating the volume level. These pins output signal that cope with volume level. <div><table><tr><th rowspan="2">Volume level (dB)</th><th colspan="5">Pin</th></tr><tr><th>⑩</th><th>②⑧</th><th>②⑨</th><th>①</th><th>②</th></tr><tr><td>0 to -2</td><td>L</td><td>L</td><td>L</td><td>L</td><td>L</td></tr><tr><td>-4 to -6</td><td>L</td><td>L</td><td>L</td><td>L</td><td>H</td></tr><tr><td>-8 to -18</td><td>L</td><td>L</td><td>L</td><td>H</td><td>H</td></tr><tr><td>-20 to -34</td><td>L</td><td>L</td><td>H</td><td>H</td><td>H</td></tr><tr><td>-36 to -76</td><td>L</td><td>H</td><td>H</td><td>H</td><td>H</td></tr><tr><td>-78 to -∞</td><td>H</td><td>H</td><td>H</td><td>H</td><td>H</td></tr></table><div>H: high level L: low level</div></div>	Volume level (dB)	Pin					⑩	②⑧	②⑨	①	②	0 to -2	L	L	L	L	L	-4 to -6	L	L	L	L	H	-8 to -18	L	L	L	H	H	-20 to -34	L	L	H	H	H	-36 to -76	L	H	H	H	H	-78 to -∞	H	H	H	H	H
Volume level (dB)	Pin																																																	
	⑩	②⑧	②⑨	①	②																																													
0 to -2	L	L	L	L	L																																													
-4 to -6	L	L	L	L	H																																													
-8 to -18	L	L	L	H	H																																													
-20 to -34	L	L	H	H	H																																													
-36 to -76	L	H	H	H	H																																													
-78 to -∞	H	H	H	H	H																																													
4	TUNER DATA	Output	This pin outputs the receiving band/station switching signal. That signal feeds to tuner unit (ST-177R).																																															
7	DATA	Output	This pin outputs the volume control data to IC203.																																															
8	CLOCK	Output	This pin outputs the clock signal of volume control data.																																															
9	STROBE	Output	This pin outputs the strobe signal of volume control data.																																															

2. SERVICING NOTE (G-AEP model only)



- Caution on replacing screws fixing speaker terminal board.

Two types ①, ② of screw (BVTT3 x 20) is supplied as repair part for speaker terminal board fixing. If ① type screw is supplied, make a hole as shown in the figure.

① type screw

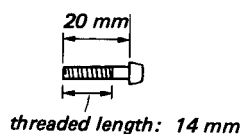


② type screw

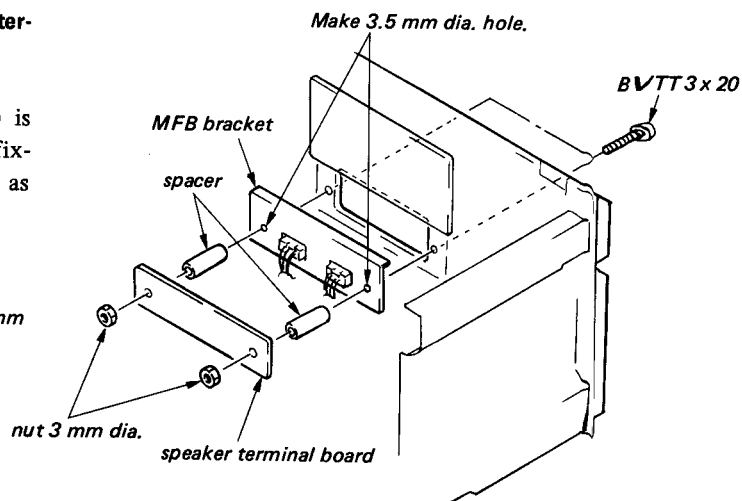 


3. DISASSEMBLY


Note: Follow the disassembly procedure in the numerical order given.

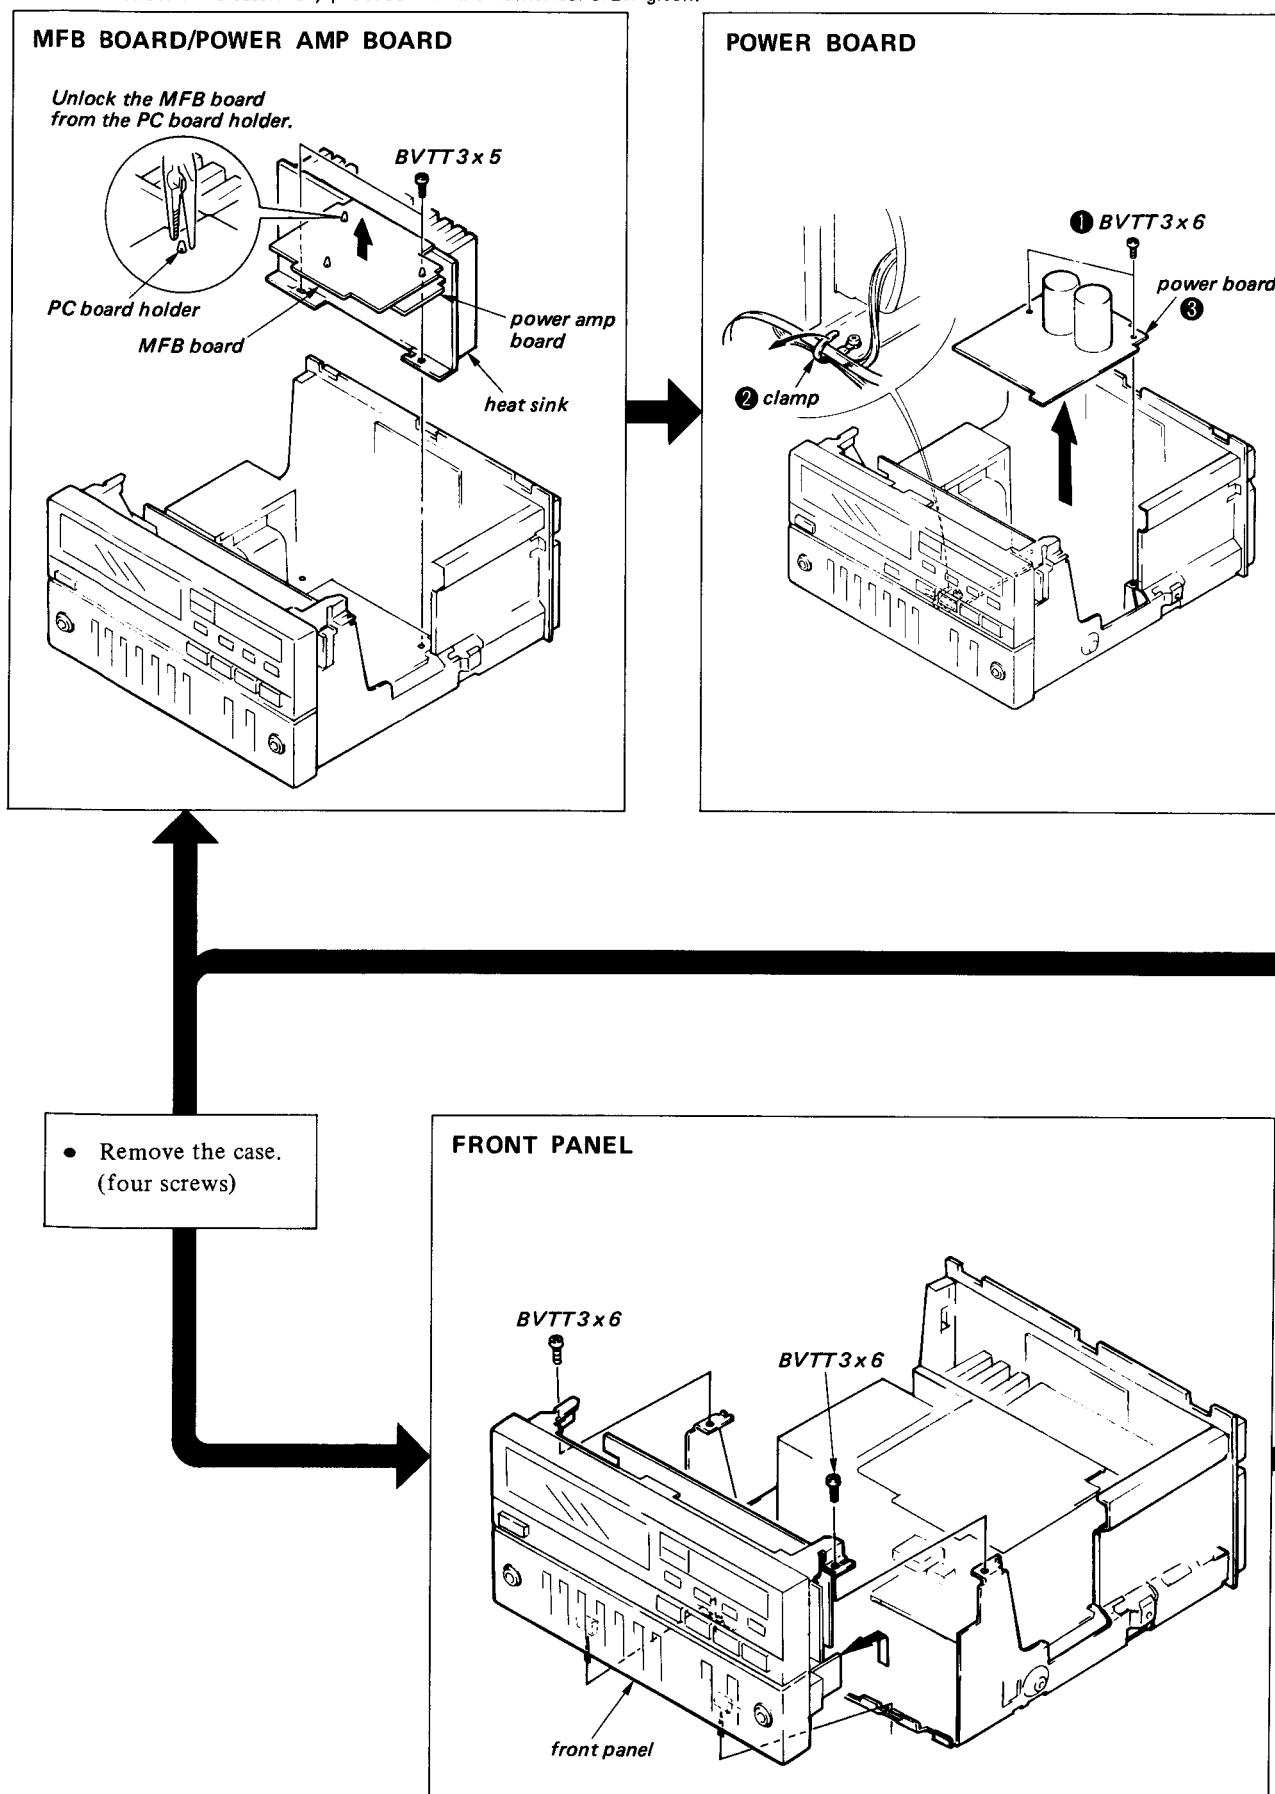


JACK PLATE

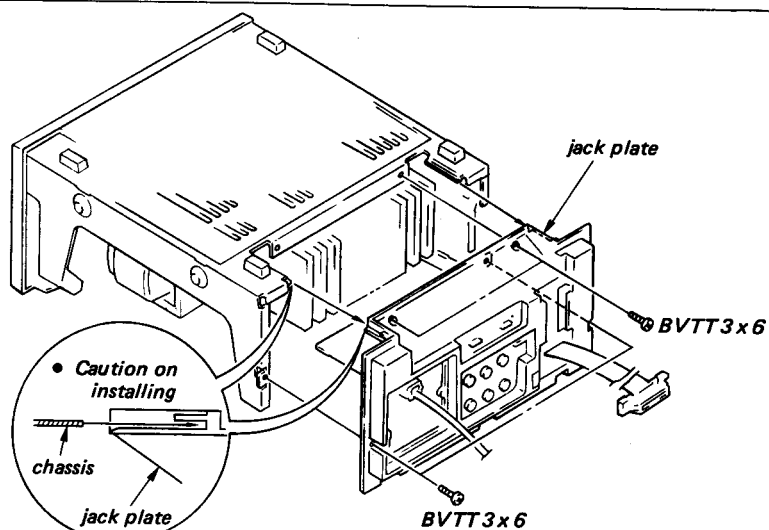


GRAPHIC EQUALIZER BOARD

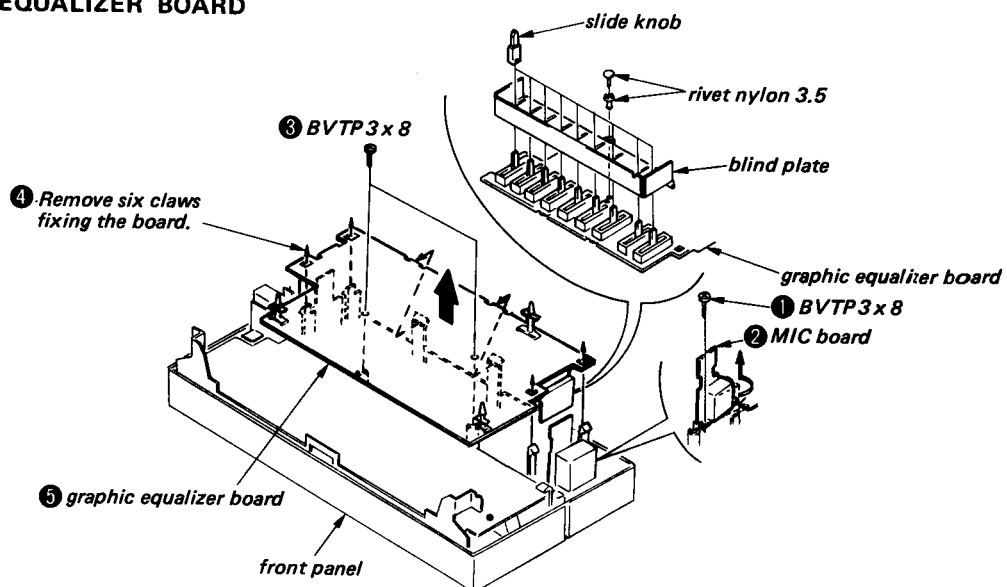

CONTROL BOARD

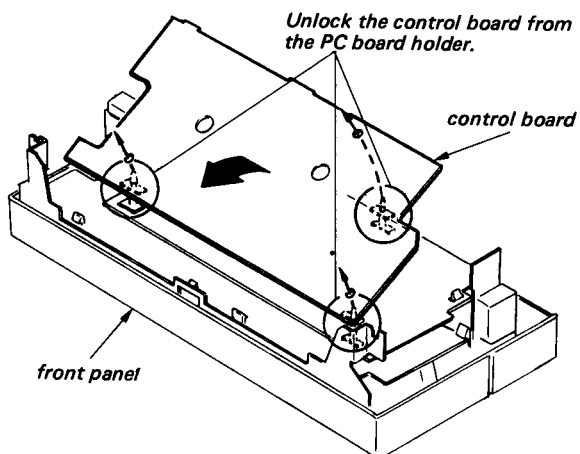


SPECTRUM ANALYZER BOARD

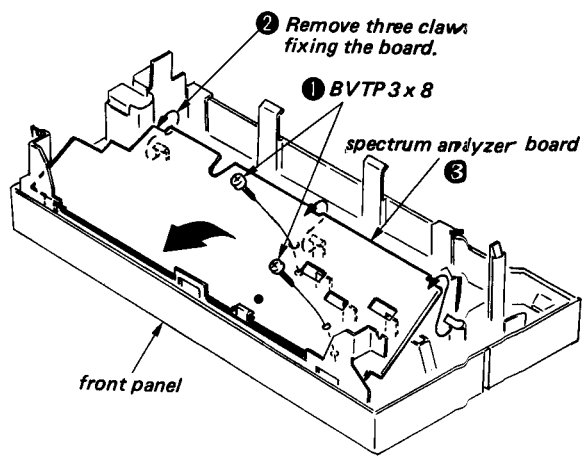


LEDs OF D401, 402, 411 - 417 REPLACEMENT


Though LEDs of D401, 402, 411 - 417 are built in each variable resistor RV401, 402, 411 - 417, only LEDs can be replaced.


1. Pull out the knobs, and pull out LED.
2. Cut the new LED leads as long as the LED leads mounted previously.

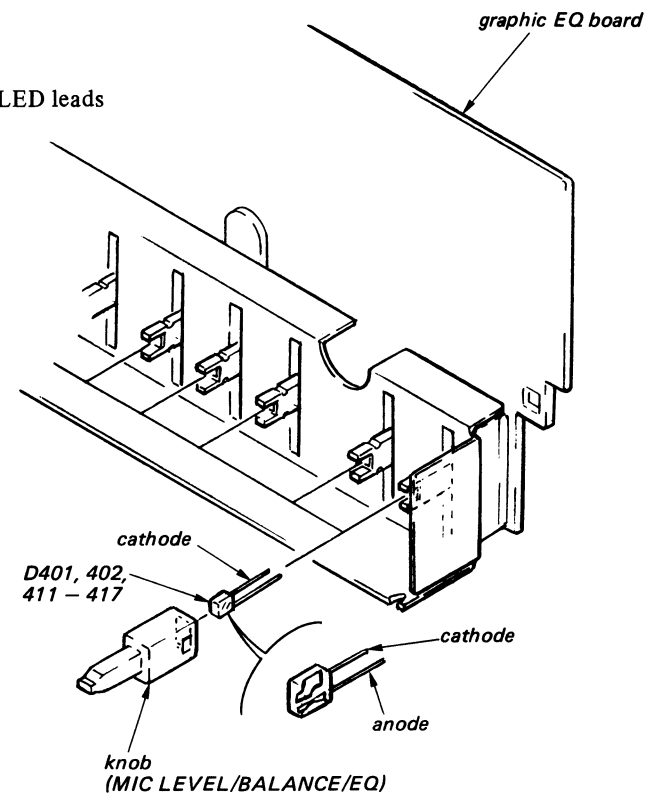

4. BLOCK DIAGRAM

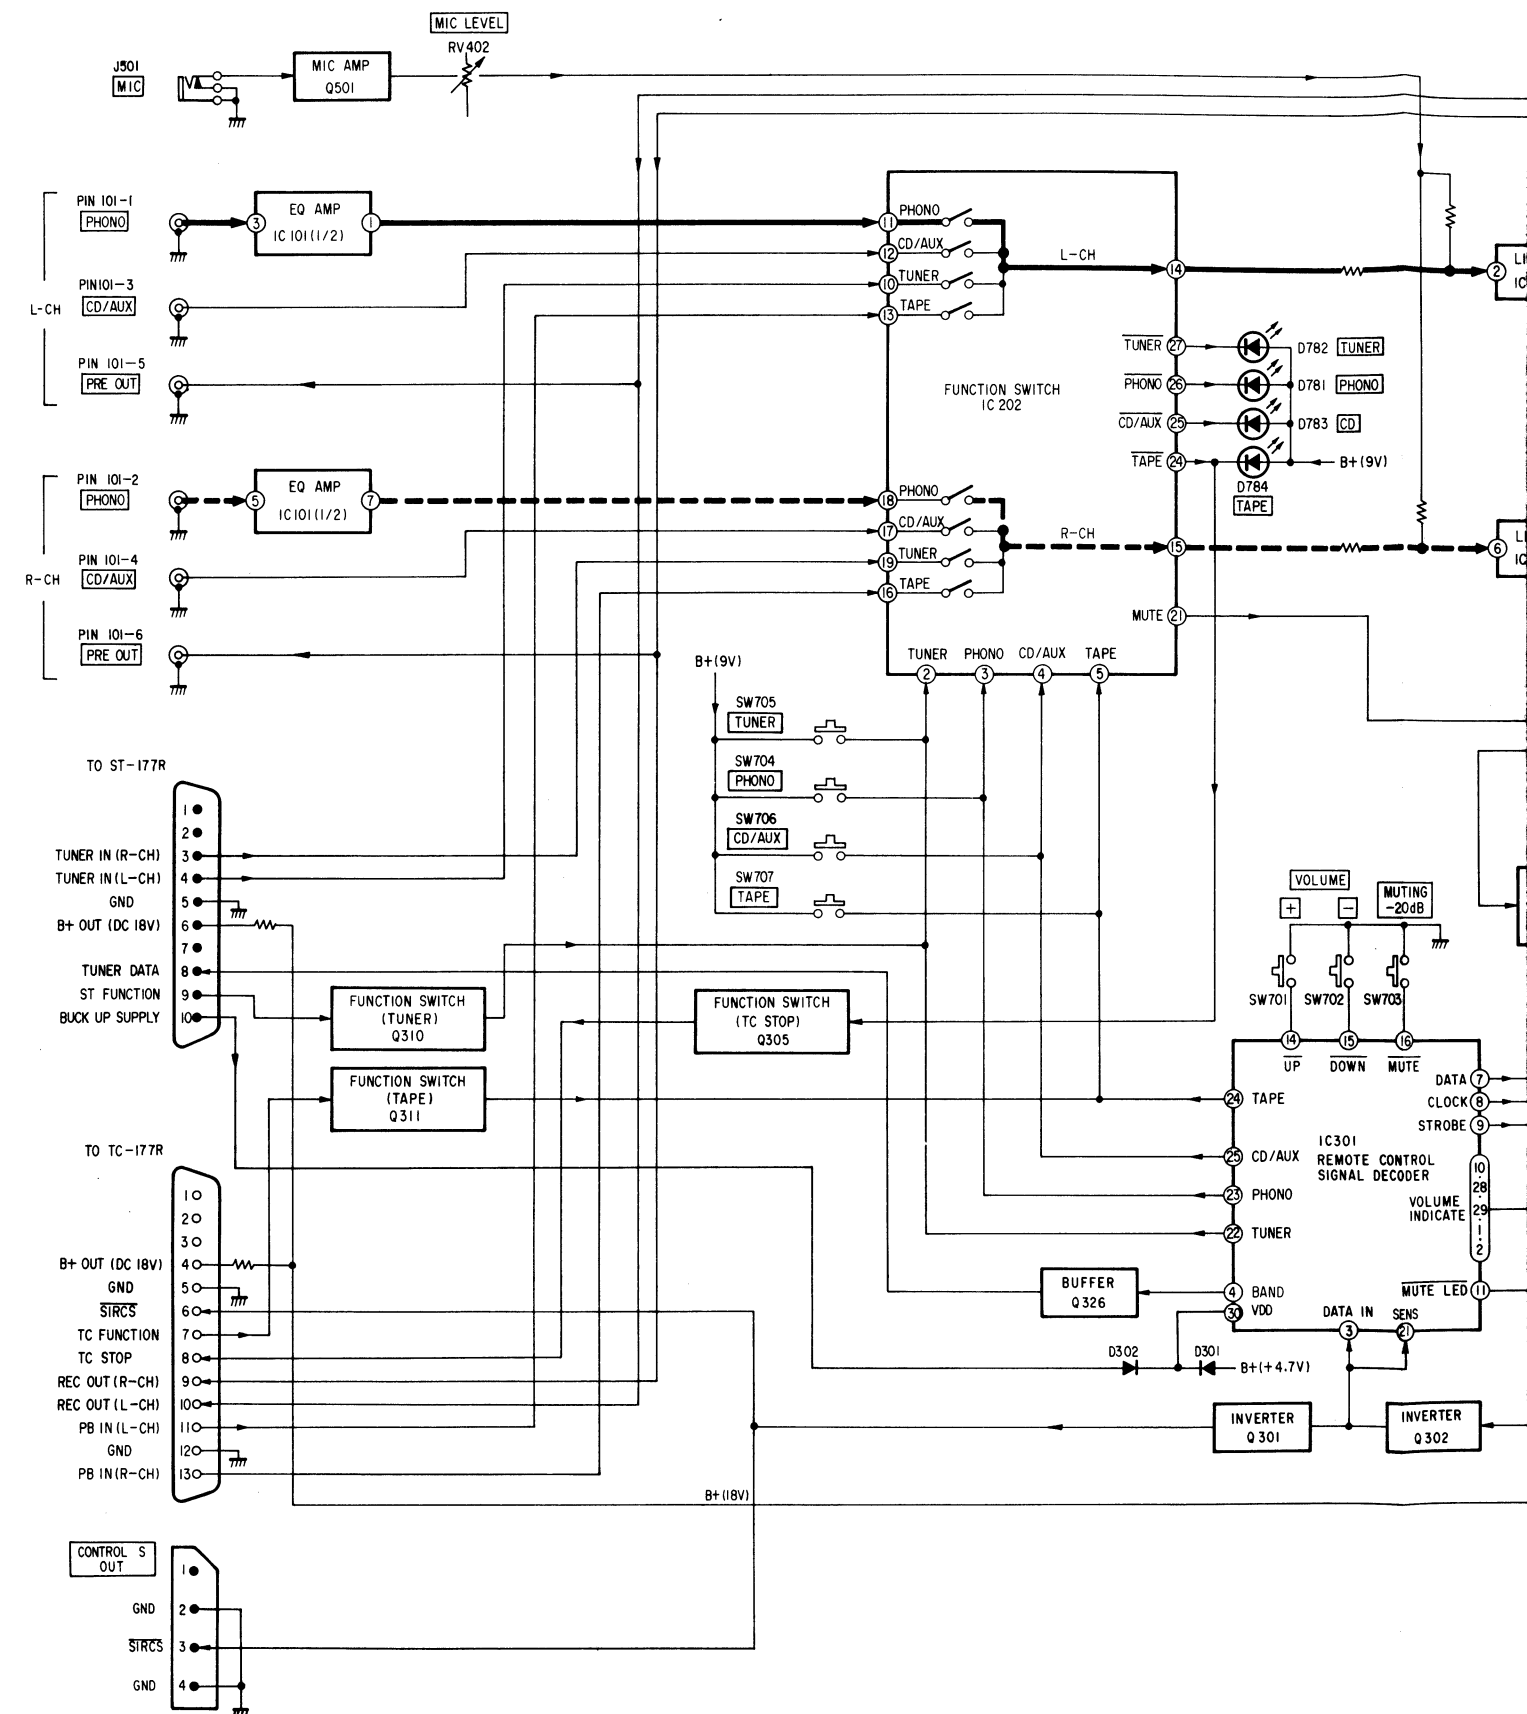

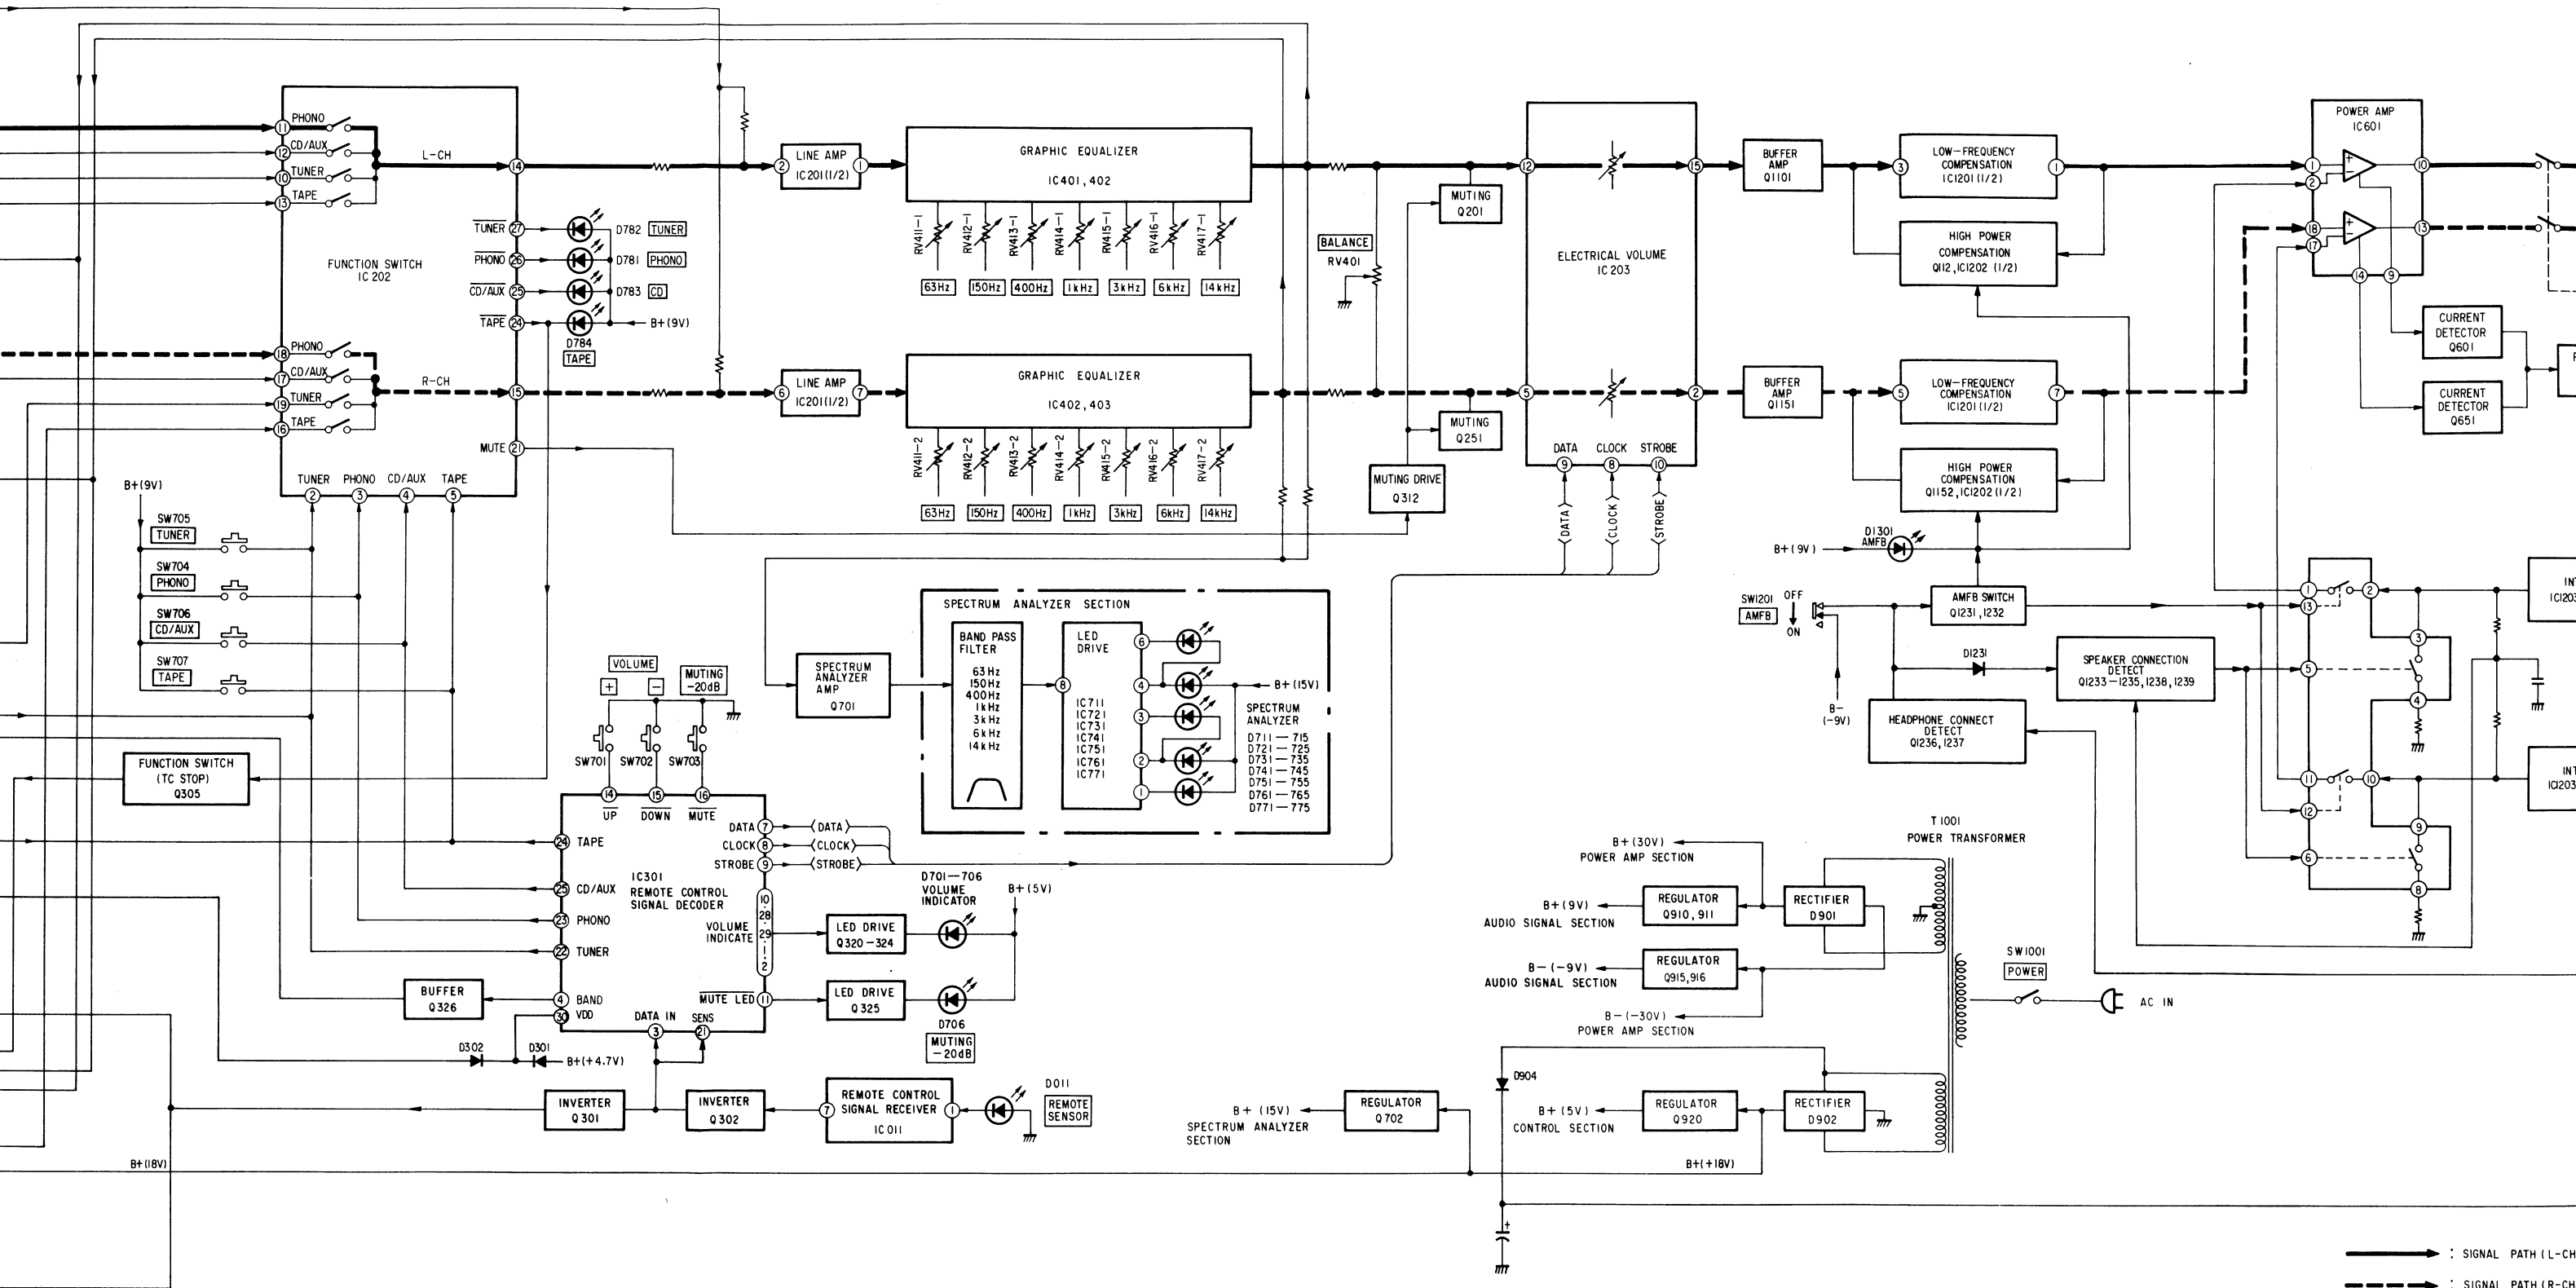

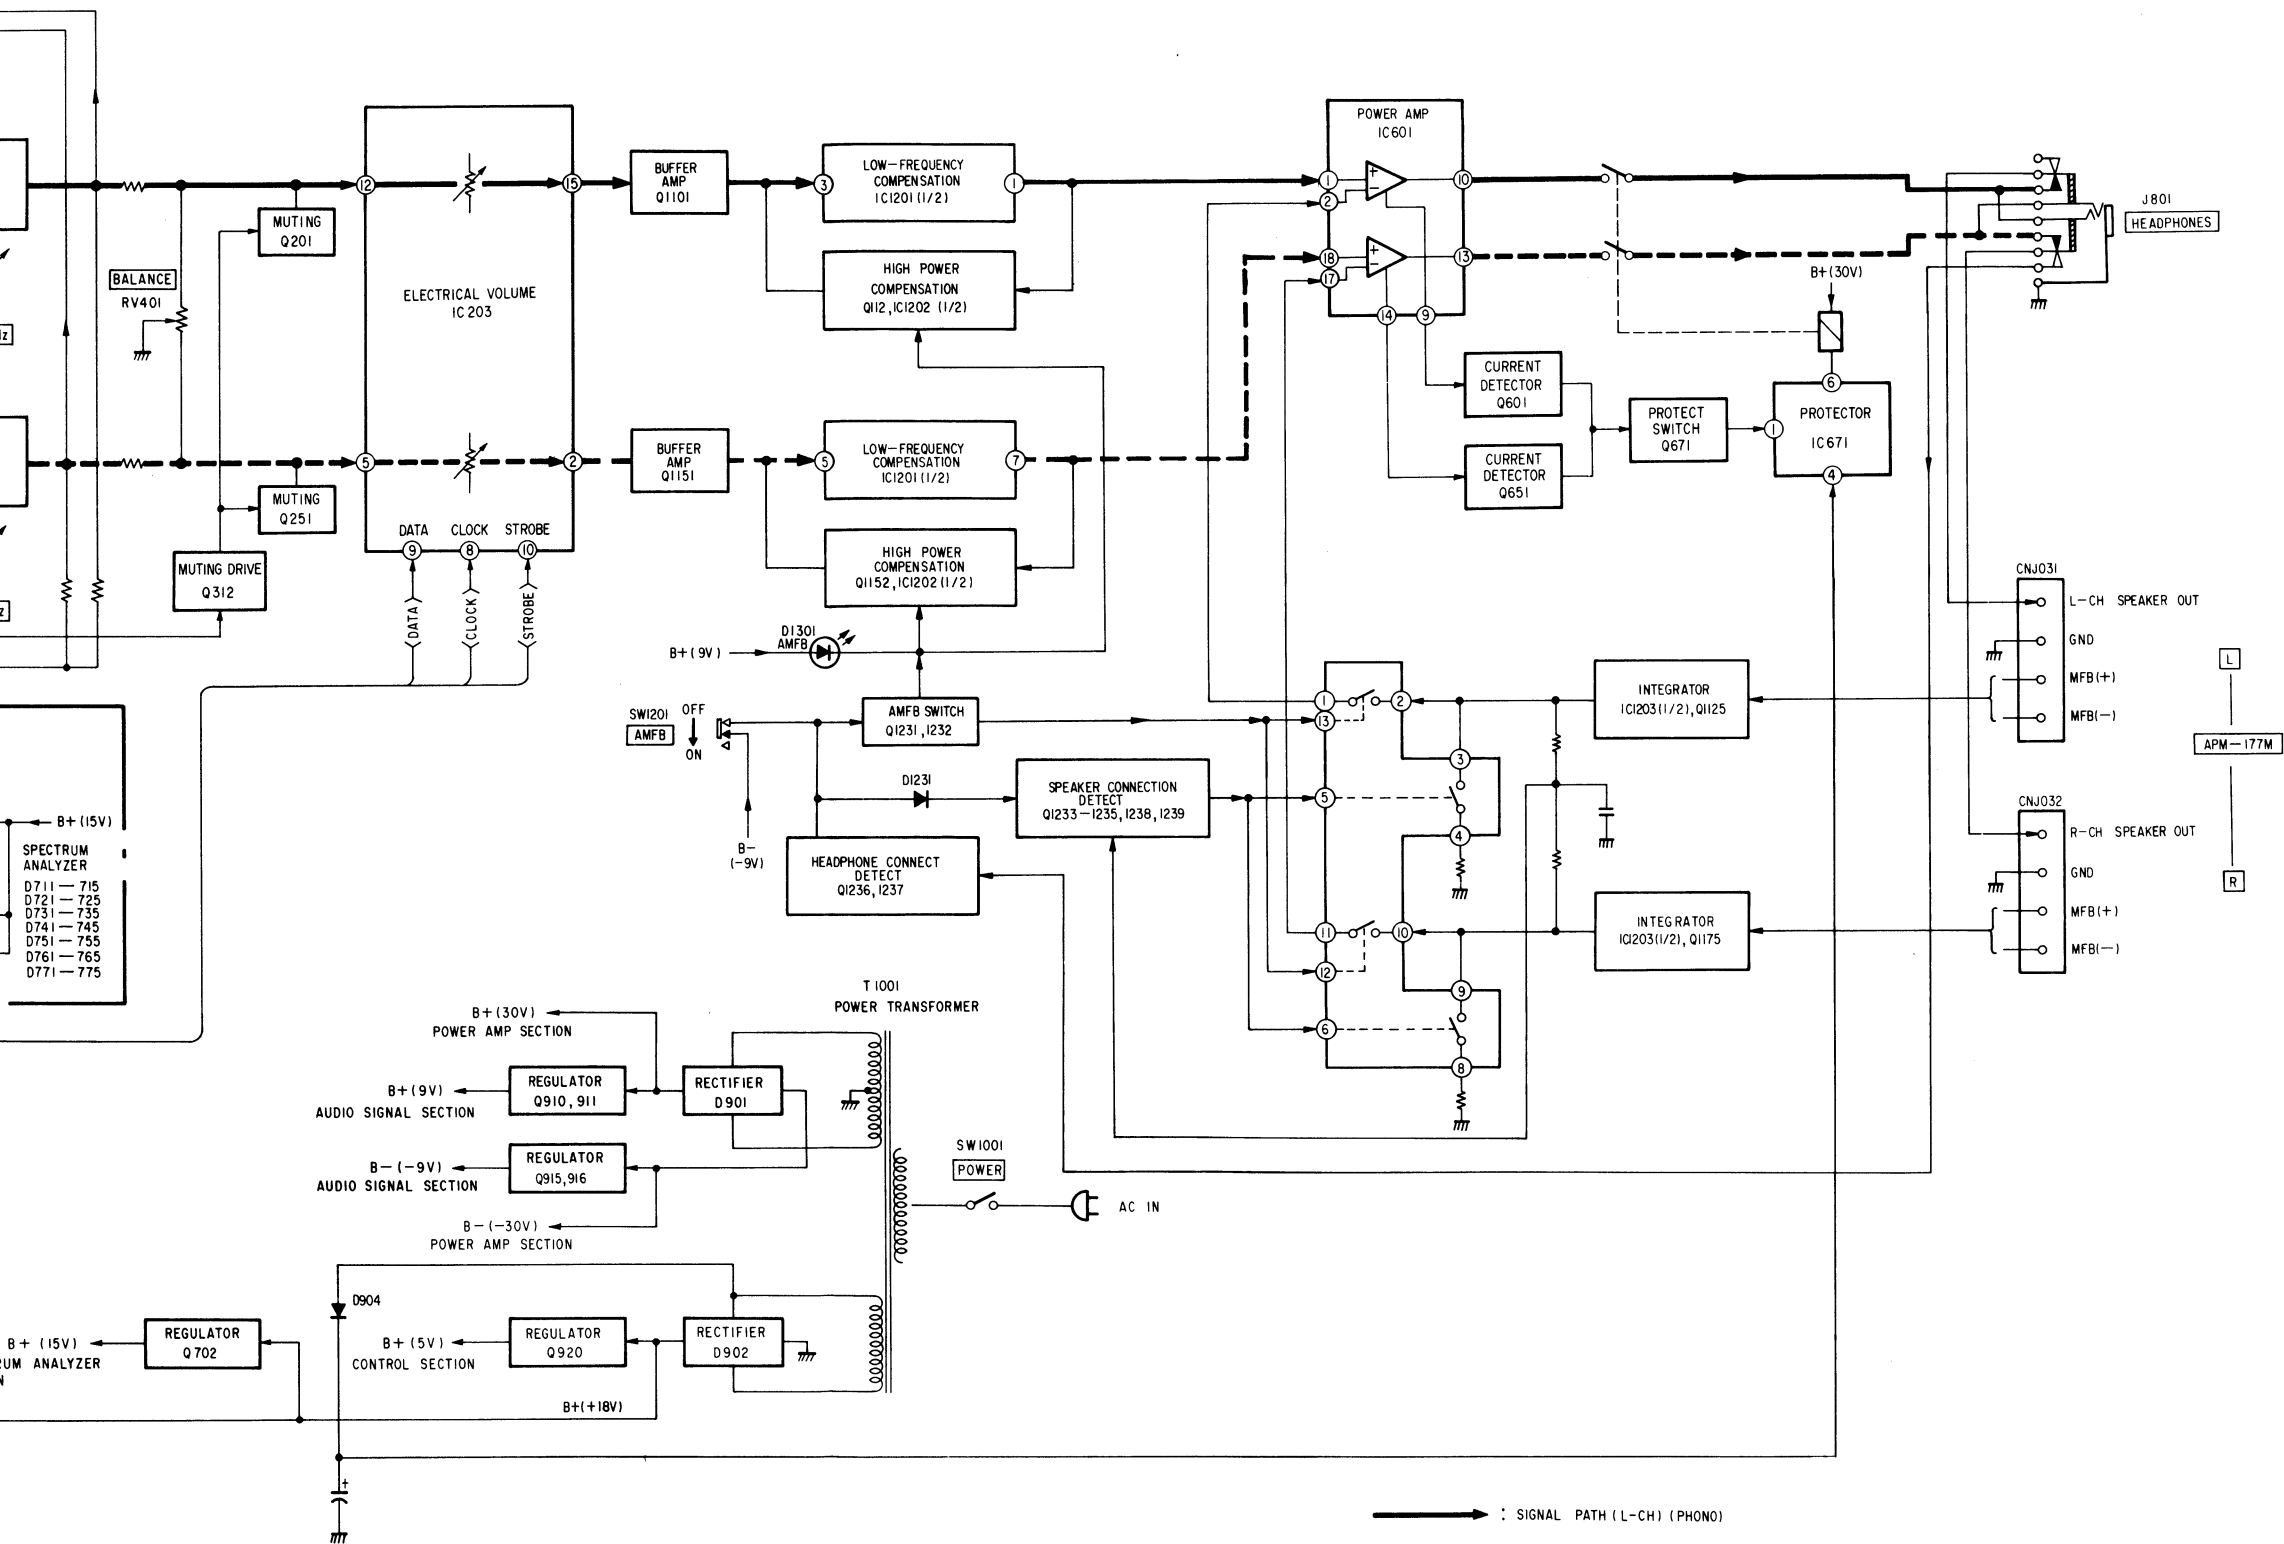

● Semiconductor Lead Layouts

LC4966 14 13 12 11 10 9 8 1 2 3 4 5 6 7 (Top view)	HZ6A1L HZ7A1L HZ12A1 HZ16-2L cathode anode	AA5535S long short cathode anode
M5226P TC9176P 16 15 14 13 12 11 10 9 1 2 3 4 5 6 7 8 (Top view)	PH302B anode cathode	2SC1841-PA E C B
LC7816H 28 14 (Top view)	RB402 Marking anode cathode	2SC634SP 2SC2603F DTA144WS DTC144WS E C B
M50765-440SP 30 16 15 (Top view)	RB602F anode cathode	2SK381-E S G D
CX20106A M5218L μPC1237H 1 2 3 4 5 6 7 8	LN450YP anode cathode	2SD809 letter side E C B
IR2E31 1 2 3 4 5 6 7 8 9	STK4152II 12 n	2SB965-Q B C E
1SS119 cathode anode	SEL2710K long short anode cathode	2SD1288-Q MARKING SIDE VIEW B C E
SEL2210S-C SEL2410E-C SEL2810A-C SEL2910A-C long short anode cathode	2SA1175 letter side E C B	

5. MOUNTING DIAGRAM

Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
IC011	J-4	Q325	H-13	D321	G-10	D745	H-8
IC101	D-17	Q326	H-12	D401	D-2	D751	G-7
IC201	H-11	Q601	B-3	D402	C-2	D752	G-7
IC202	G-10	Q601	C-22	D411	I-3	D753	G-7
IC203	I-11	Q651	D-21	D412	H-3	D754	G-7
IC301	I-13	Q671	D-22	D413	G-3	D755	G-8
IC401	G-4	Q701	I-6	D414	G-2	D761	G-6
IC402	F-4	Q702	E-6	D415	F-3	D762	G-7
IC403	E-4	Q910	I-24	D416	E-2	D763	G-7
IC601	B-22	Q911	I-23	D417	E-3	D764	G-7
IC671	C-23	Q915	H-22	D671	C-23	D765	G-8
IC711	I-8	Q916	H-22	D701	F-7	D771	F-7
IC721	H-8	Q920	H-21	D702	F-7	D772	F-7
IC731	H-8	Q1101	H-19	D703	F-7	D773	F-7
IC741	G-8	Q1102	I-18	D704	F-7	D774	F-7
IC751	G-8	Q1125	G-16	D705	E-8	D775	F-8
IC761	F-8	Q1151	H-20	D706	E-8	D781	C-6
IC771	F-8	Q1152	G-19	D711	I-7	D782	D-6
IC1201	G-18	Q1175	E-16	D712	I-7	D783	D-6
IC1202	F-18	Q1231	I-16	D713	I-7	D784	E-6
IC1203	F-18	Q1232	I-17	D714	I-7	D791	E-6
IC1204	G-15	Q1233	H-16	D715	I-8	D901	J-22
		Q1234	H-15	D721	I-7	D902	I-21
		Q1235	I-16	D722	I-7	D904	I-21
Q201	H-11	Q1236	I-15	D723	I-7	D910	J-23
Q251	I-12	Q1237	H-15	D724	I-7	D915	I-22
Q301	E-13	Q1238	I-16	D725	I-8	D920	H-21
Q302	J-12	Q1239	I-16	D731	H-7	D1101	I-18
Q305	F-12			D732	H-7	D1102	I-17
Q310	D-13	D011	J-5	D733	H-7	D1125	F-18
Q311	D-13	D301	E-12	D734	H-7	D1151	G-19
Q312	G-10	D302	D-13	D735	H-8	D1152	G-19
Q320	H-13	D303	J-13	D741	H-7	D1175	F-18
Q321	H-13	D304	F-10	D742	H-7	D1231	I-15
Q322	H-13	D311	F-13	D743	H-7	D1232	I-15
Q323	G-12	D312	H-10	D744	H-7	D1301	J-15
Q324	H-12						

Note:
EA3: Saudi Arabia model
AED: DENMARK model

Note: SCHEMATIC DIAGRAM

- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$ 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- : signal path.
- Components for right channel have same values as for left channel. Reference numbers are coded from 150, 250, 450, 650, 1150.
- : nonflammable resistor.
- : fusible resistor.
- : B+ bus.
- : B- bus.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under no-signal conditions with a VOM (50 k Ω /V).
- no mark: Not connecting speaker.
- < > : When inserting headphone plug into HEAD- PHONES JACK.
- () : When AMFB switch is off connecting APM-177M speaker or a load resistor (1k — 1.5k) with speaker terminal.
- (()) : When AMFB switch is ON connecting APM-177M speaker or a load resistor (1k — 1.5k) with speaker terminal.


- Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken to ground in no-signal mode by using oscilloscope.
- Voltage variations may be noted due to normal production tolerances.

Switches


Ref. No.	Switch	Position
SW701	VOLUME UP	OFF
SW702	VOLUME DOWN	OFF
SW703	MUTING -20 dB	OFF
SW704	PHONO	OFF
SW705	TUNER	OFF
SW706	CD/AUX	OFF
SW707	TAPE	OFF
SW1001	POWER	OFF
SW1002	VOLTAGE SELECTOR (E, EA3 model only)	240 V
SW1201	AMFB	OFF

Note: MOUNTING DIAGRAM

- Color code of sleeving over the end of the jacket.

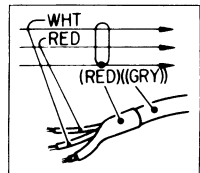

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : part mounted on the conductor side.

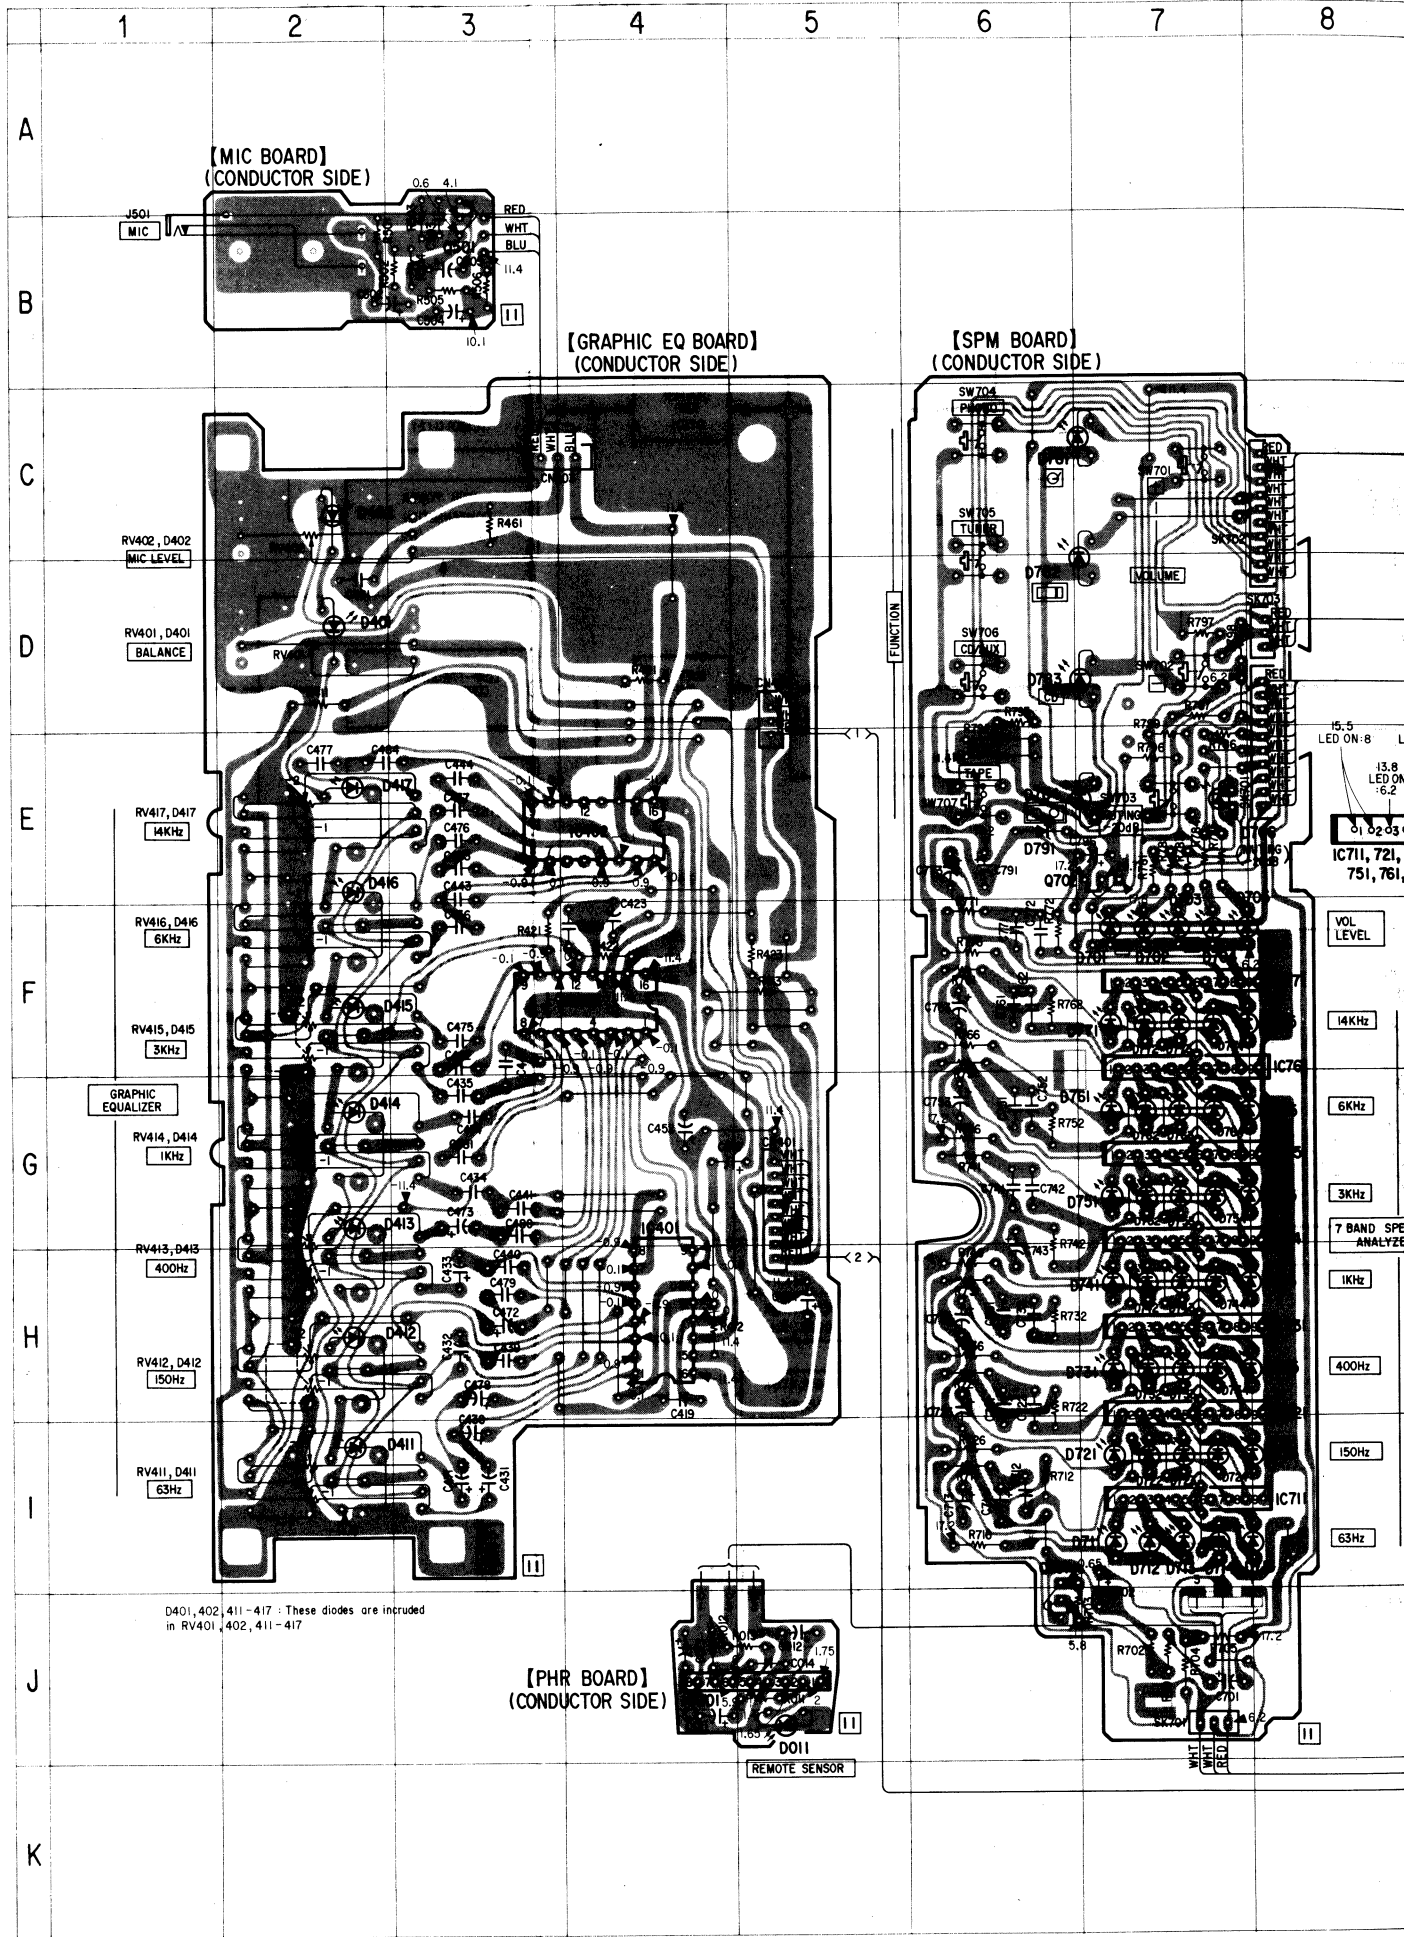

Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
IC011	J-4	Q325	H-13	D321	G-10	D745	H-8
IC101	D-17	Q326	H-12	D401	D-2	D751	G-7
IC201	H-11	Q501	B-3	D402	C-2	D752	G-7
IC202	G-10	Q601	C-22	D411	I-3	D753	G-7
IC203	I-11	Q651	D-21	D412	H-3	D754	G-7
IC301	I-13	Q671	D-22	D413	G-3	D755	G-8
IC401	G-4	Q701	I-6	D414	G-2	D761	G-6
IC402	F-4	Q702	E-6	D415	F-3	D762	G-7
IC403	E-4	Q910	I-24	D416	E-2	D763	G-7
IC601	B-22	Q911	I-23	D417	E-3	D764	G-7
IC671	C-23	Q915	H-22	D671	C-23	D765	G-8
IC711	I-8	Q916	H-22	D701	F-7	D771	F-7
IC721	H-8	Q920	H-21	D702	F-7	D772	F-7
IC731	H-8	Q1101	H-19	D703	F-7	D773	F-7
IC741	G-8	Q1102	I-18	D704	F-7	D774	F-7
IC751	G-8	Q1125	G-16	D705	E-8	D775	F-8
IC761	F-8	Q1151	H-20	D706	E-8	D781	C-6
IC771	F-8	Q1152	G-19	D711	I-7	D782	D-6
IC1201	G-18	Q1175	E-16	D712	I-7	D783	D-6
IC1202	F-18	Q1231	I-16	D713	I-7	D784	E-6
IC1203	F-18	Q1232	I-17	D714	I-7	D791	E-6
IC1204	G-15	Q1233	H-16	D715	I-8	D901	J-22
		Q1234	H-15	D721	I-7	D902	I-21
		Q1235	I-16	D722	I-7	D904	I-21
Q201	H-11	Q1236	I-15	D723	I-7	D910	J-23
Q251	I-12	Q1237	H-15	D724	I-7	D915	I-22
Q301	E-13	Q1238	I-16	D725	I-8	D920	H-21
Q302	J-12	Q1239	I-16	D731	H-7	D1101	I-18
Q305	F-12			D732	H-7	D1102	I-17
Q310	D-13			D733	H-7	D1125	F-18
Q311	D-13	D011	J-5	D734	H-7	D1151	G-19
Q312	G-10	D301	E-12	D735	H-8	D1152	G-19
Q320	H-13	D302	D-13	D741	H-7	D1175	F-18
Q321	H-13	D303	J-13	D742	H-7	D1231	I-15
Q322	H-13	D304	F-10	D743	H-7	D1232	I-15
Q323	G-12	D311	F-13	D744	H-7	D1301	J-15
Q324	H-12	D312	H-10				

Note:
EA3: Saudi Arabia model
AED: DENMARK model

Note: SCHEMATIC DIAGRAM

- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- \Rightarrow : signal path.
- Components for right channel have same values as for left channel. Reference numbers are coded from 150, 250, 450, 650, 1150.
- \square : nonflammable resistor.
- \square : fusible resistor.
- --- : B+ bus.
- --- : B- bus.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under no-signal conditions with a VOM (50 $\text{k}\Omega/\text{V}$).
no mark: Not connecting speaker.
< > : When inserting headphone plug into HEAD-
PHONES JACK.
() : When AMFB switch is off connecting APM-177M
speaker or a load resistor (1k - 1.5k) with
speaker terminal.
(()) : When AMFB switch is ON connecting APM-177M
speaker or a load resistor (1k - 1.5k) with
speaker terminal.


- Voltage variations may be noted due to normal produc-
tion tolerances.
- Waveforms are taken to ground in no-signal mode by
using oscilloscope.
Voltage variations may be noted due to normal produc-
tion tolerances.

Switches


Ref. No.	Switch	Position
SW701	VOLUME UP	OFF
SW702	VOLUME DOWN	OFF
SW703	MUTING -20dB	OFF
SW704	PHONO	OFF
SW705	TUNER	OFF
SW706	CD/AUX	OFF
SW707	TAPE	OFF
SW1001	POWER	OFF
SW1002	VOLTAGE SELECTOR (E, EA3 model only)	240 V
SW1201	AMFB	OFF

Note: MOUNTING DIAGRAM


- Color code of sleeving over the end of the jacket.

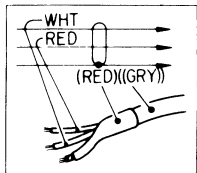


- \circ : parts extracted from the component side.
- \bullet : parts extracted from the conductor side.
- \blacksquare : part mounted on the conductor side.

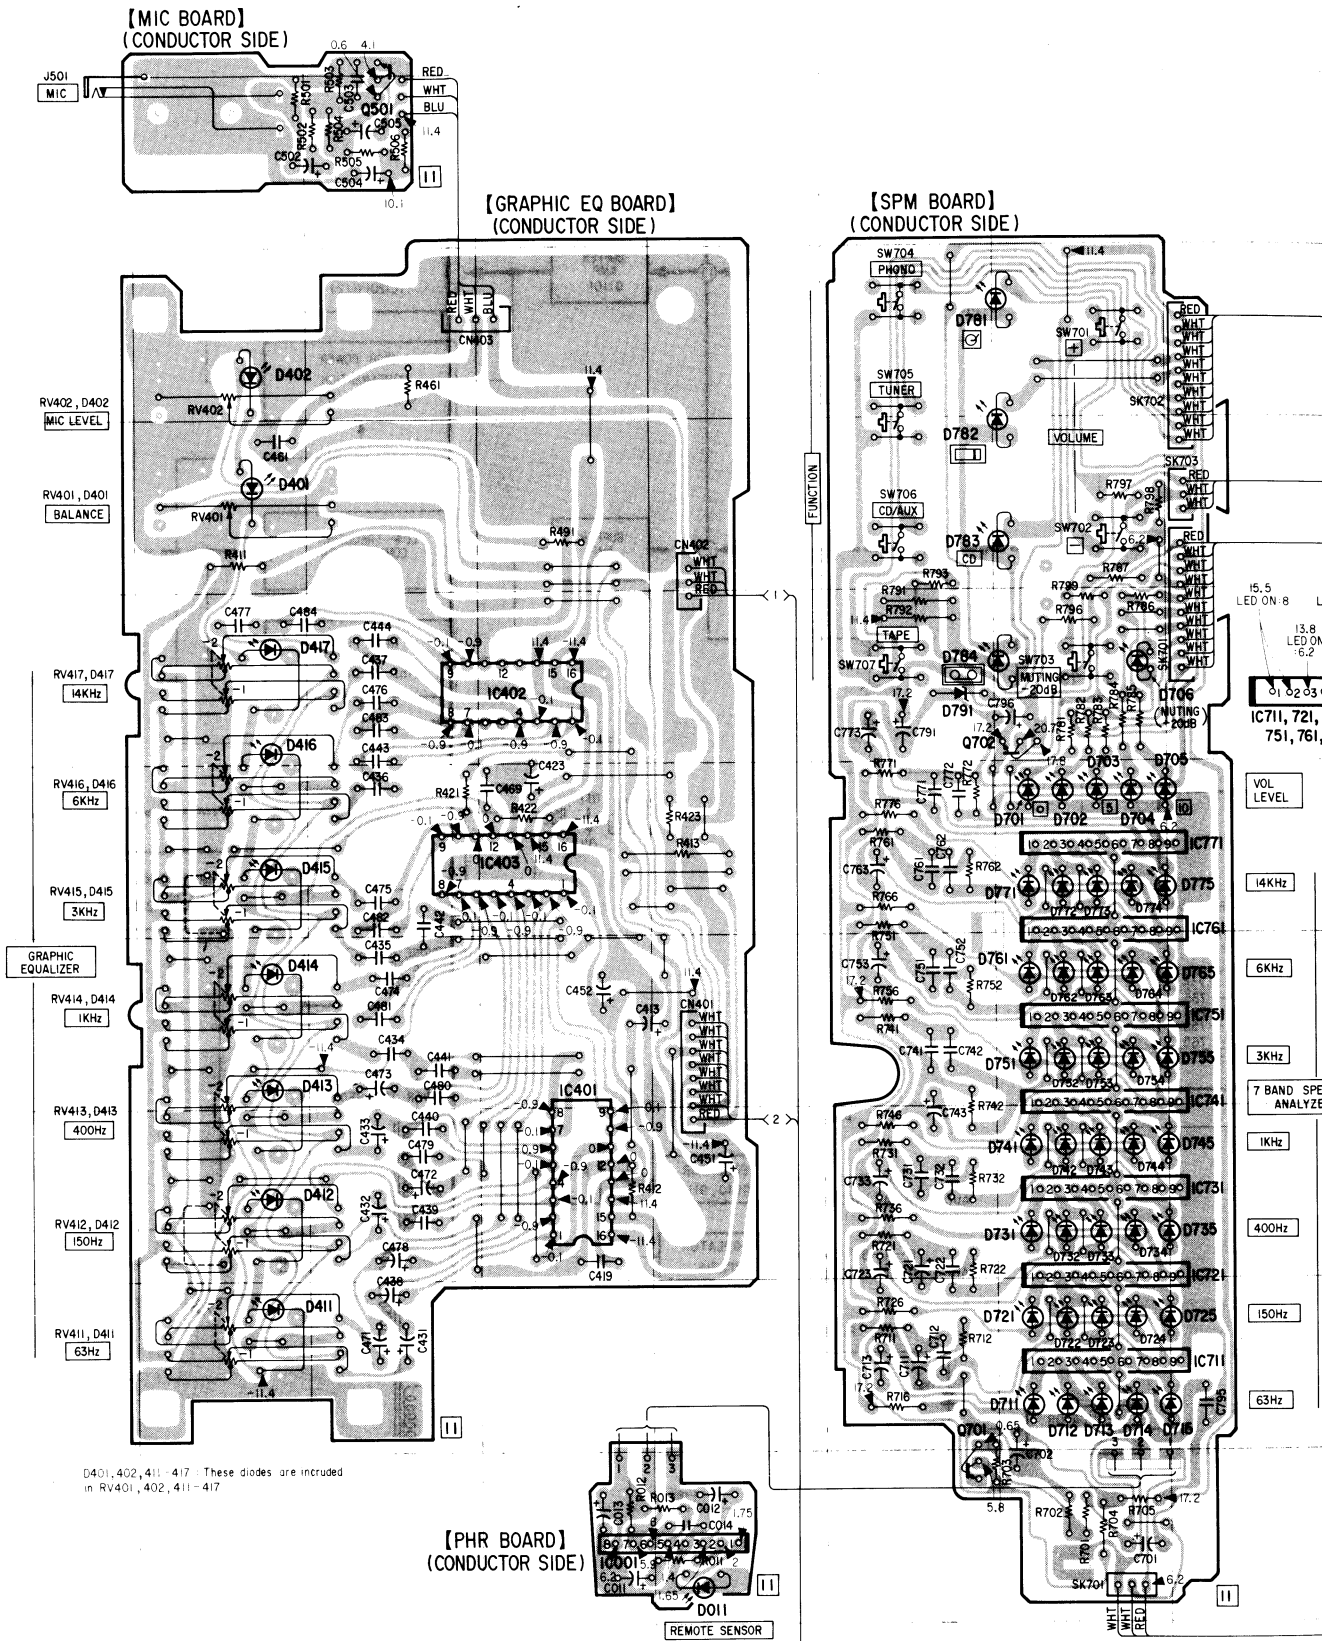


MIC BOARD]
(CONDUCTOR SIDE)

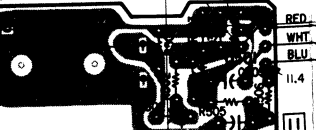


[GRAPHIC EQ BOARD]
(CONDUCTOR SIDE)

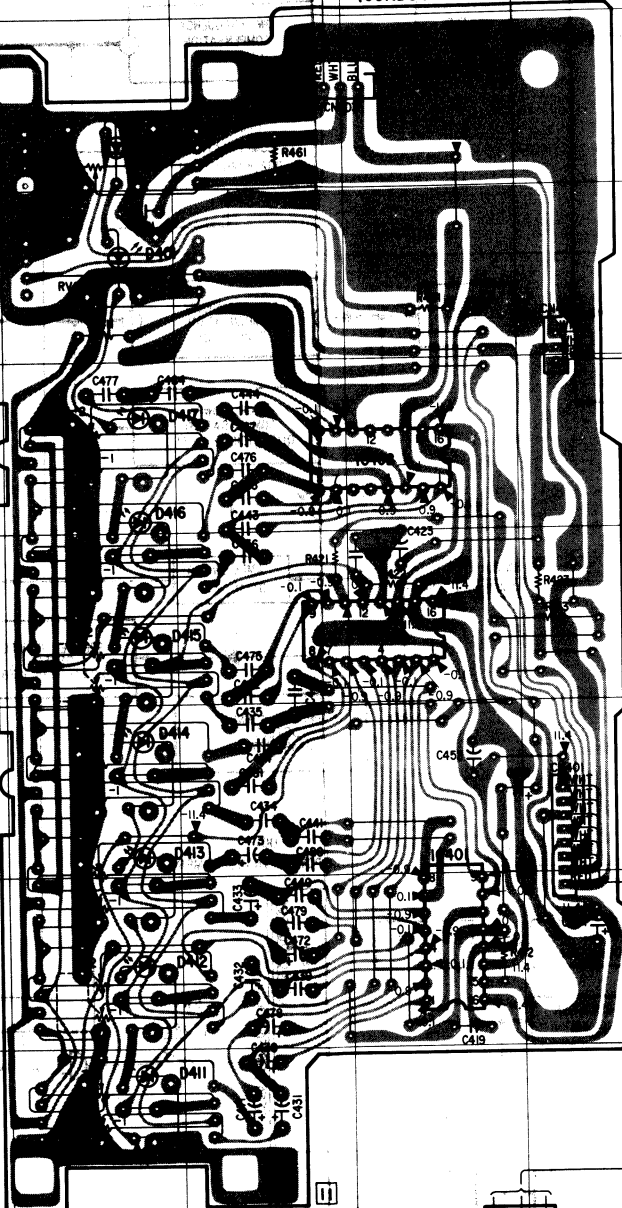


[PHR BOARD]
(CONDUCTOR SIDE)

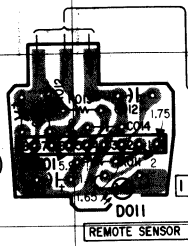


[SPM BOARD]
(CONDUCTOR SIDE)

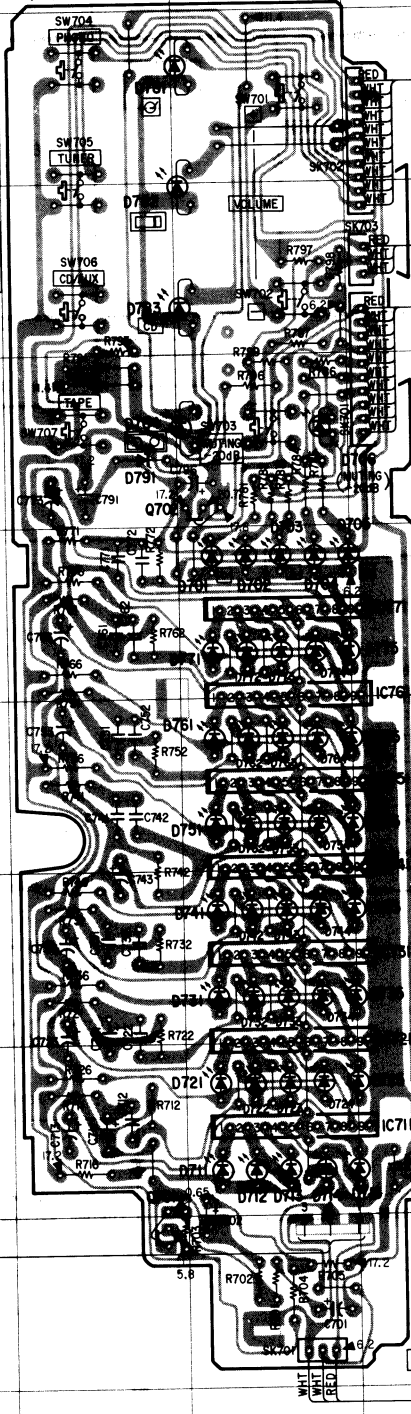


[CONTROL BOARD]
(CONDUCTOR SIDE)

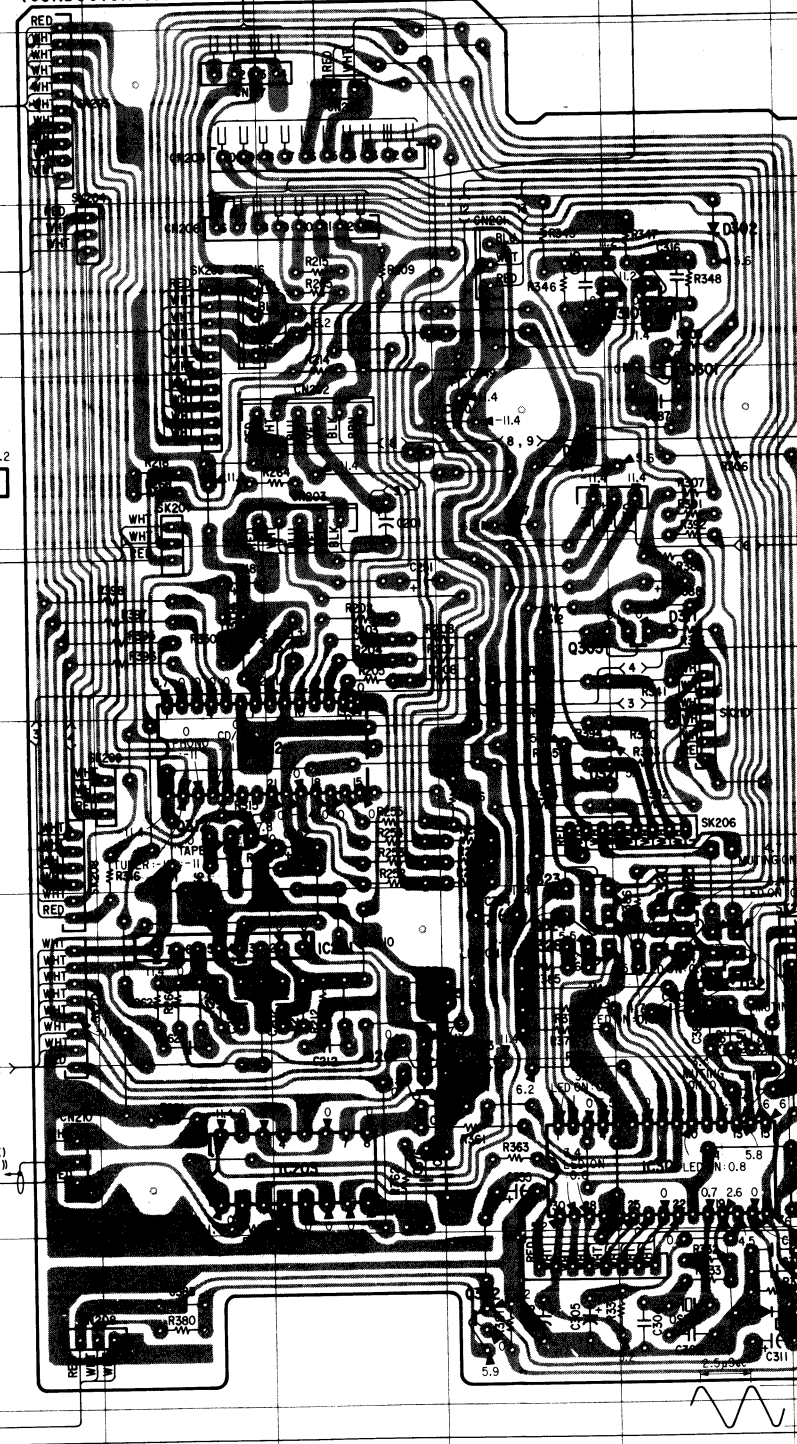


[PHONO BOARD]
(CONDUCTOR SIDE)

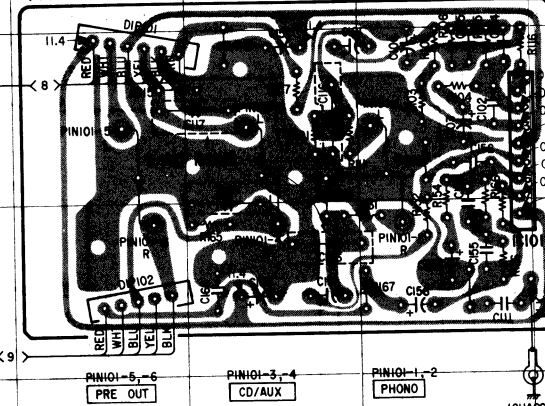


[MFB BOARD] (COMPONENT SIDE)






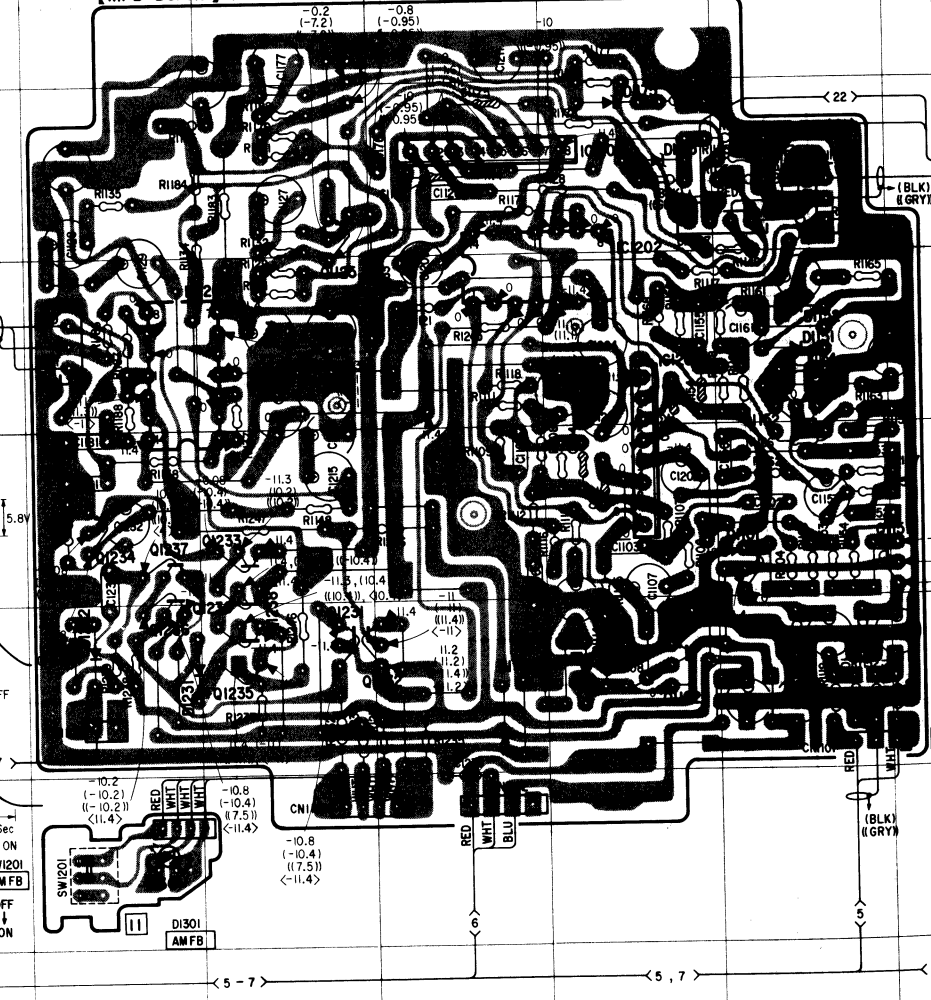



G-AEP MODEL

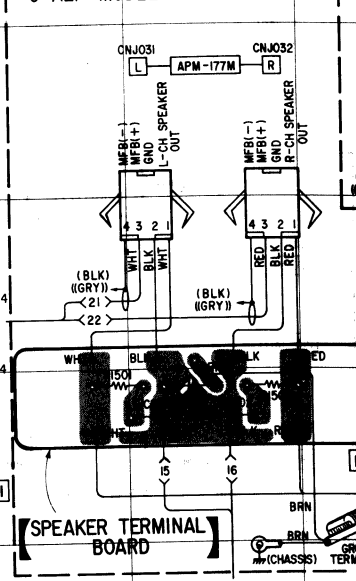

[SPEAKER TERMINAL]
BOARD

 


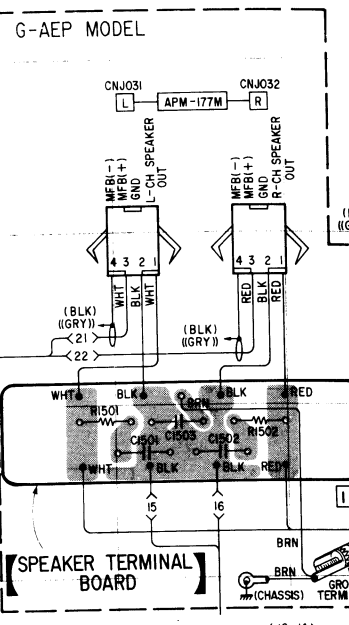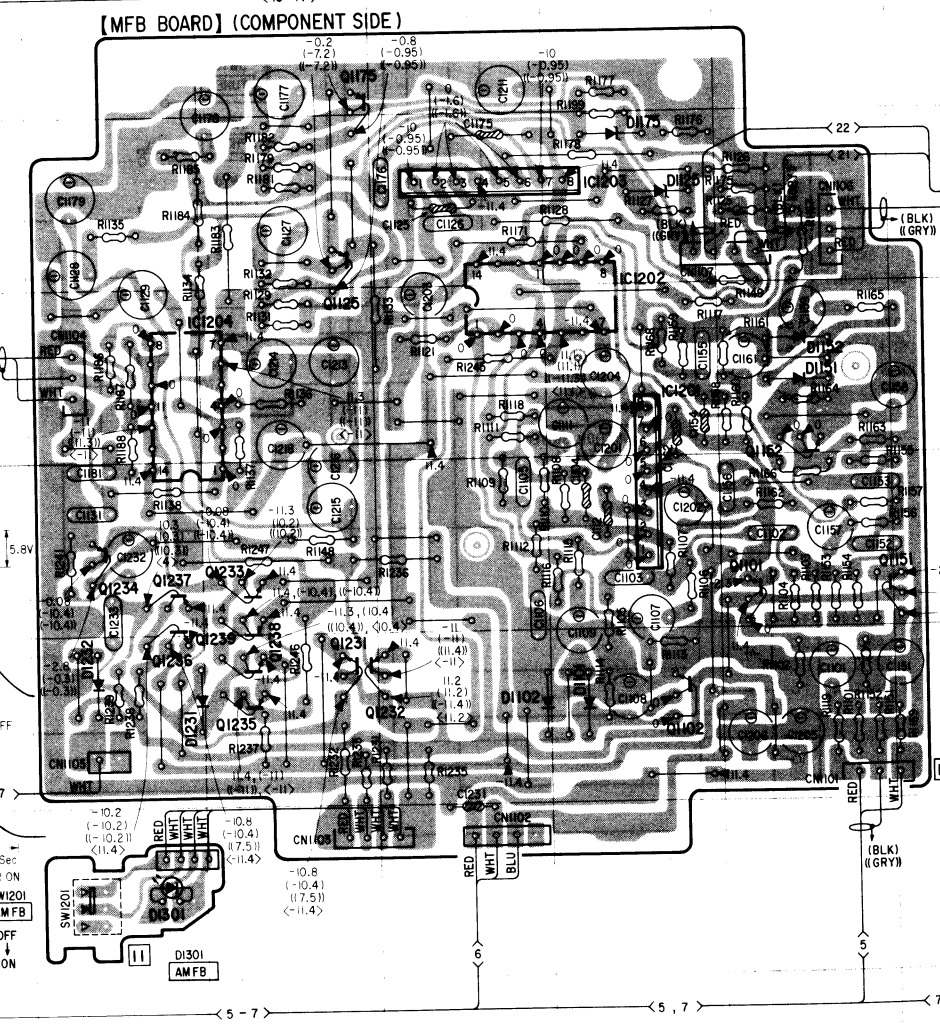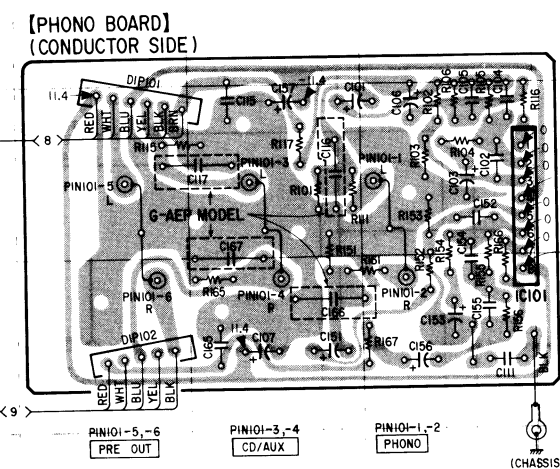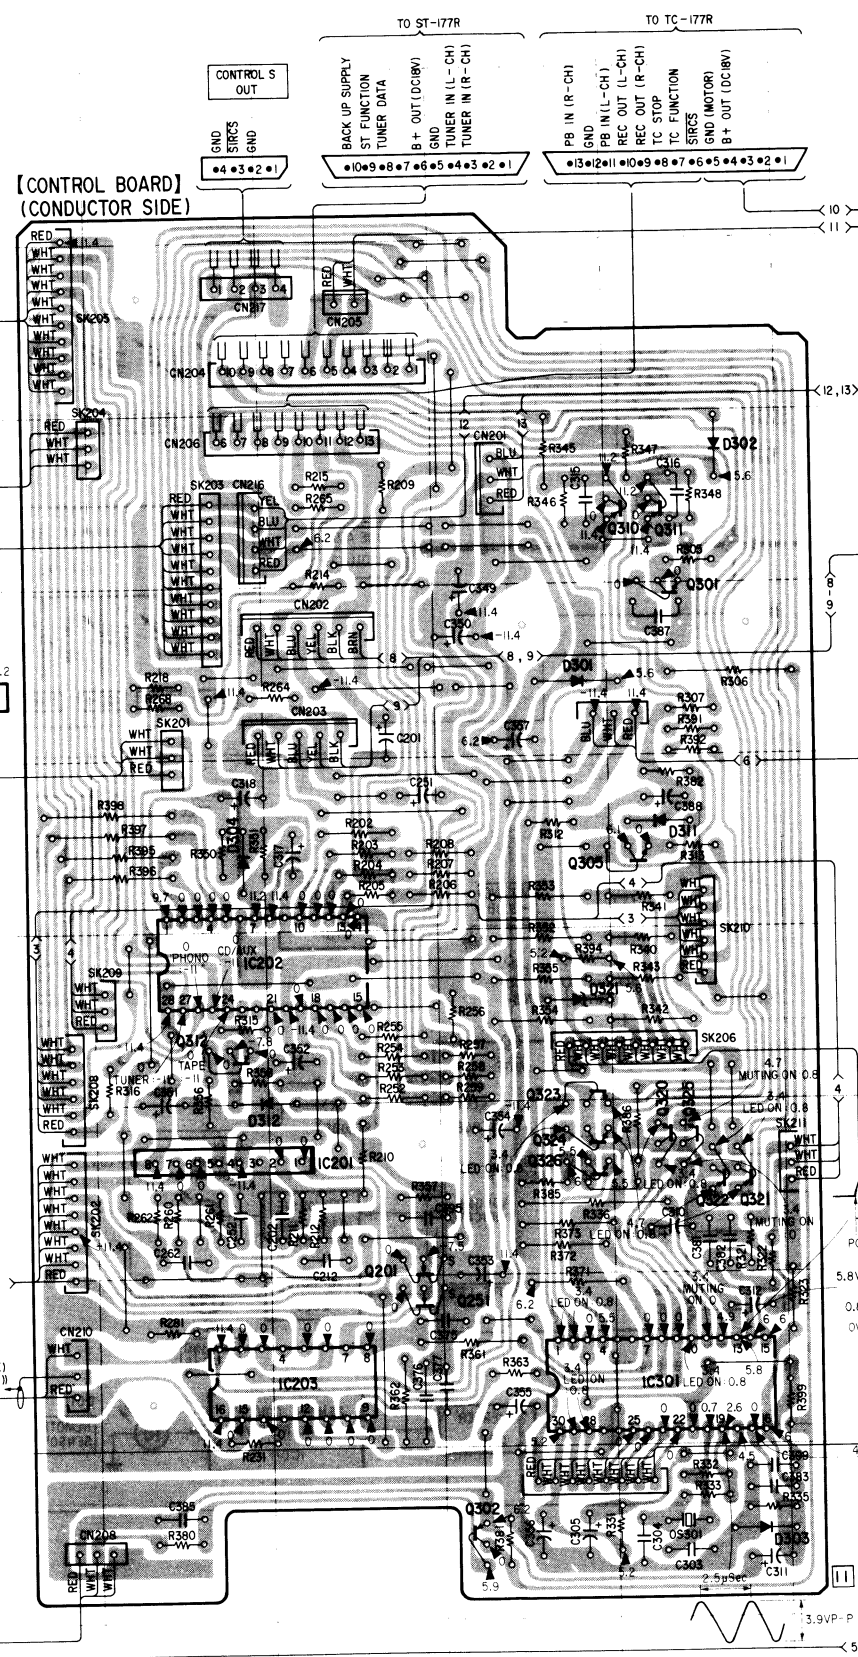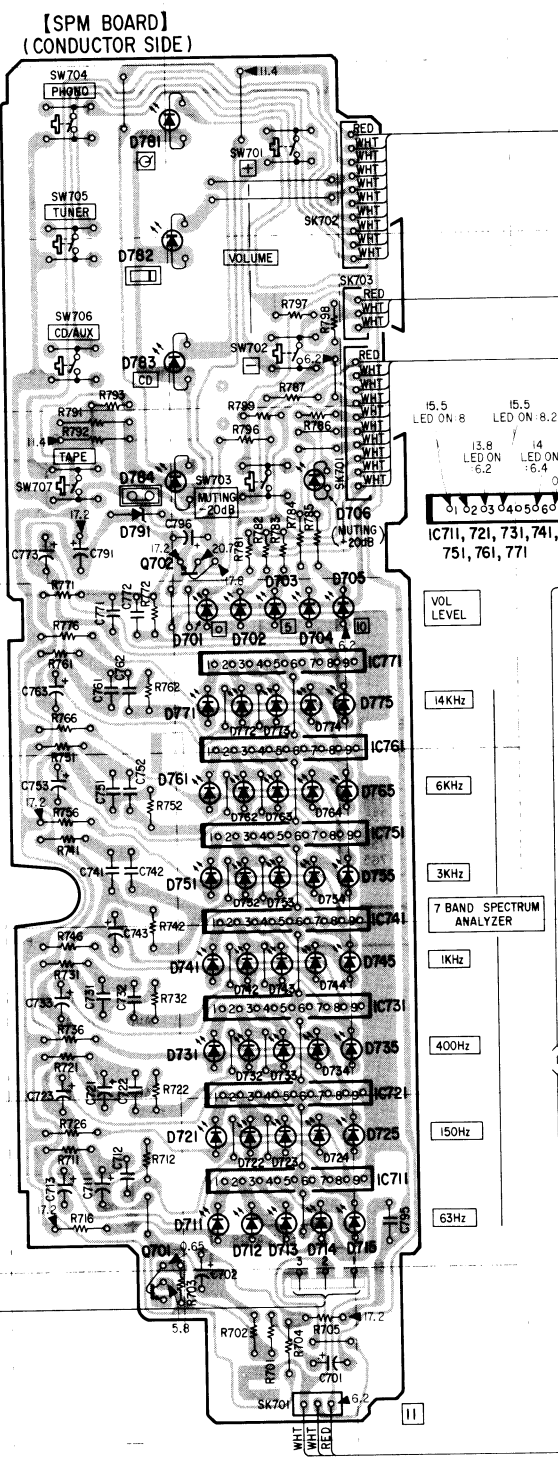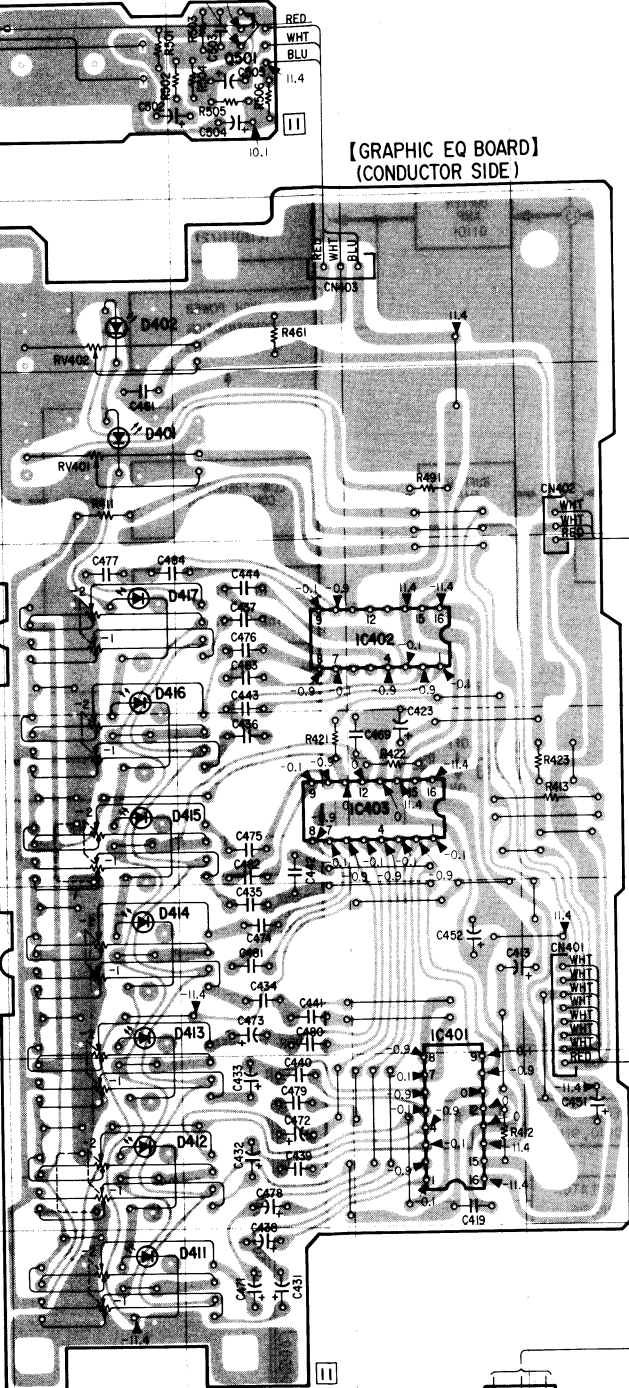


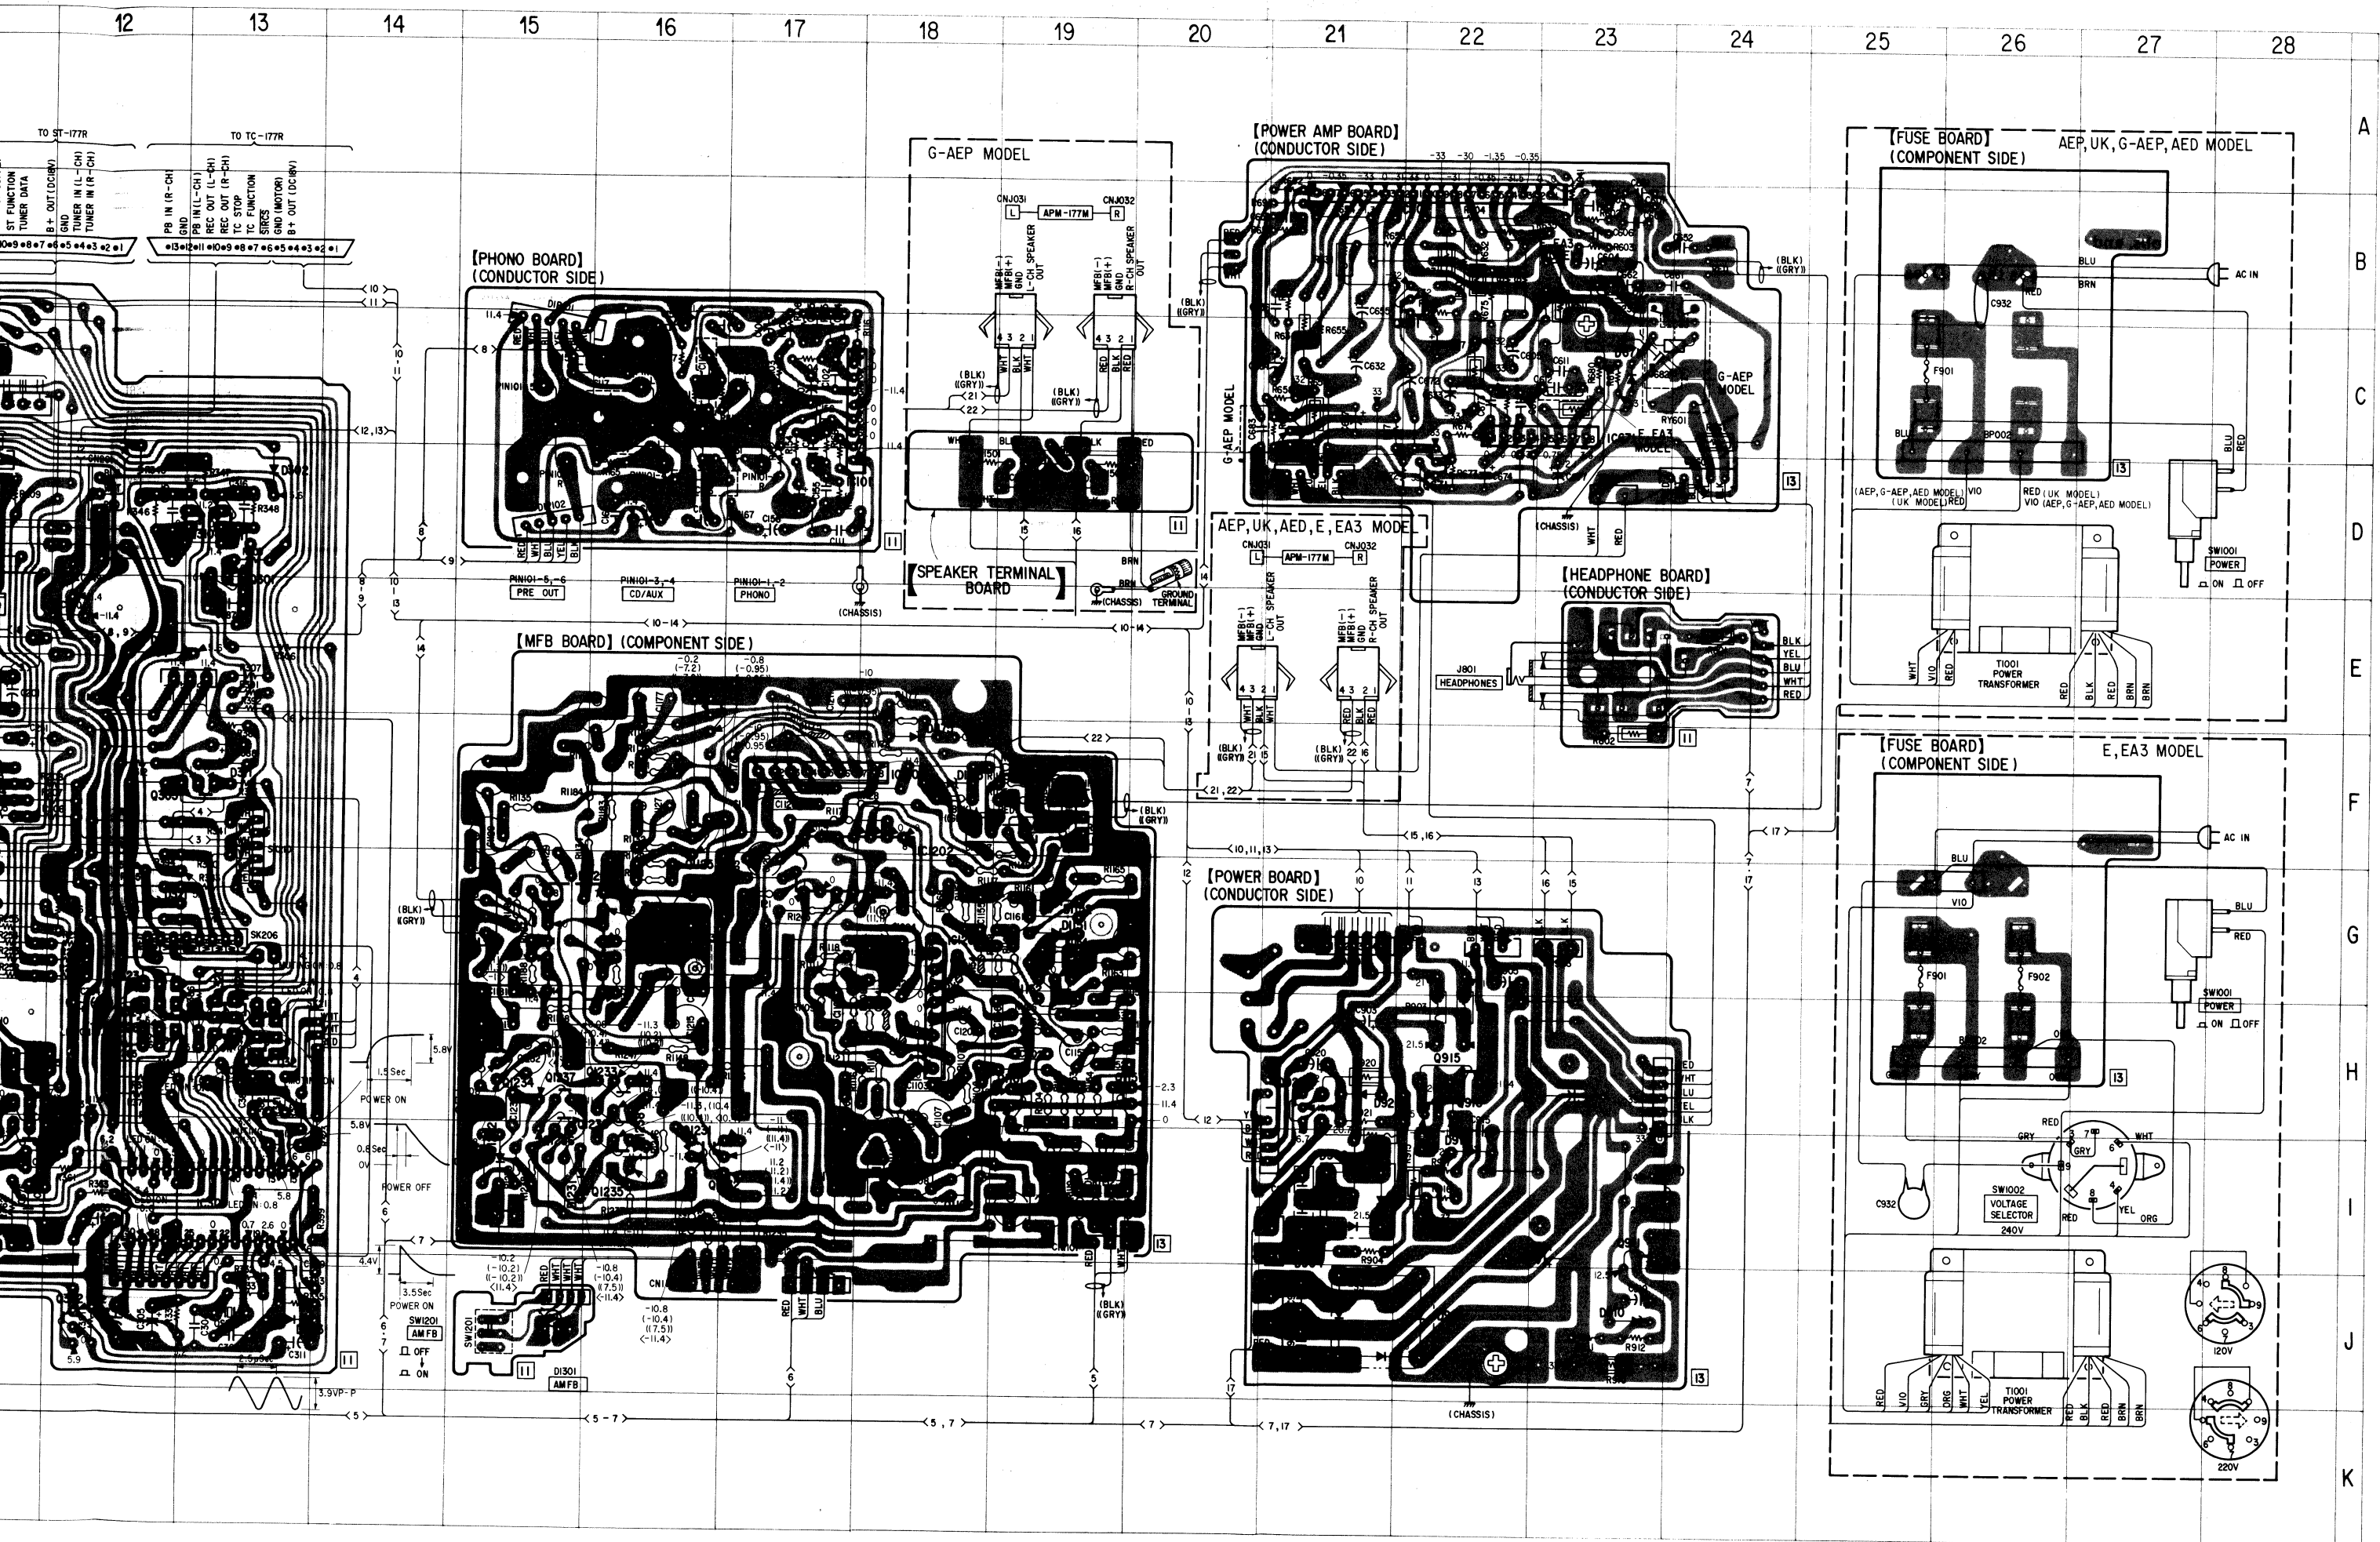

6. SCHEMATIC DIAGRAM


• See page TA-13 for notes.

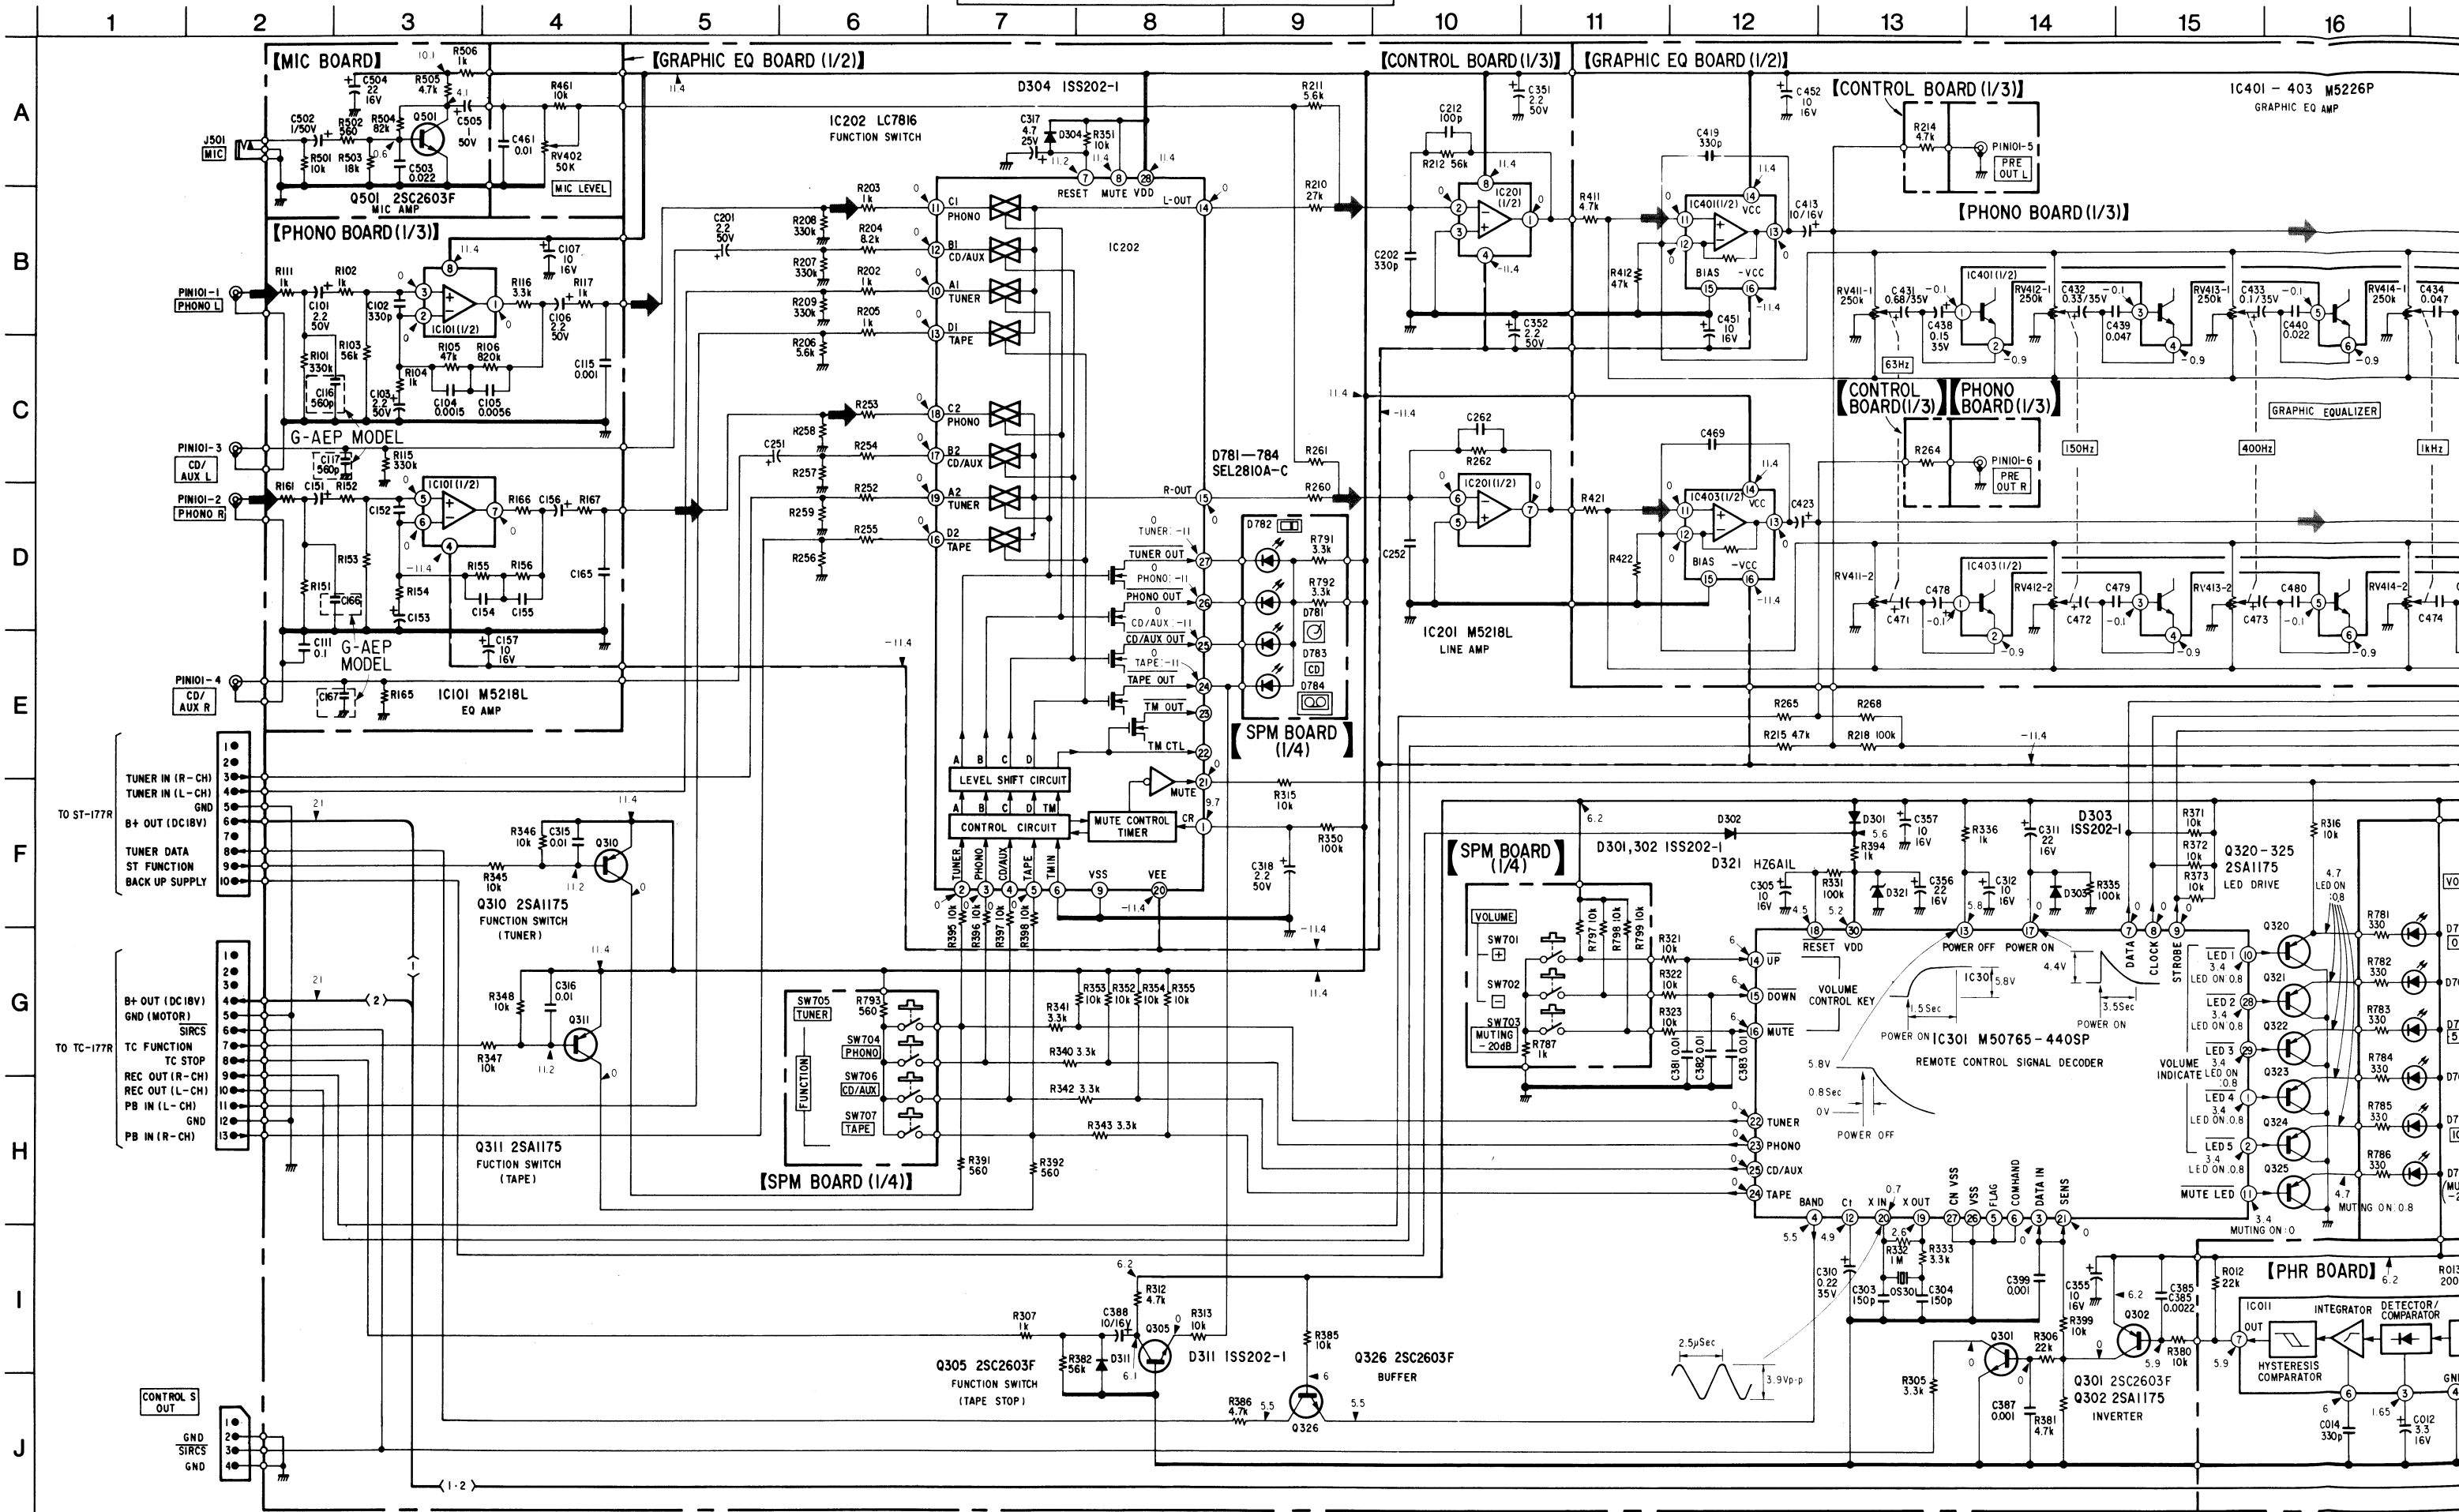FH-150R
TA-177RFH-150R
TA-177R

 



FH-150R
TA-177R

 


7. EXPLODED VIEWS AND PARTS LIST


NOTE:

The mechanical parts with no reference number in the exploded views are not supplied.

Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

 
The construction parts of an assembled part are indicated with a collation number in the remark column.

The components identified by shading and mark  are critical for safety. Replace only with part number specified.

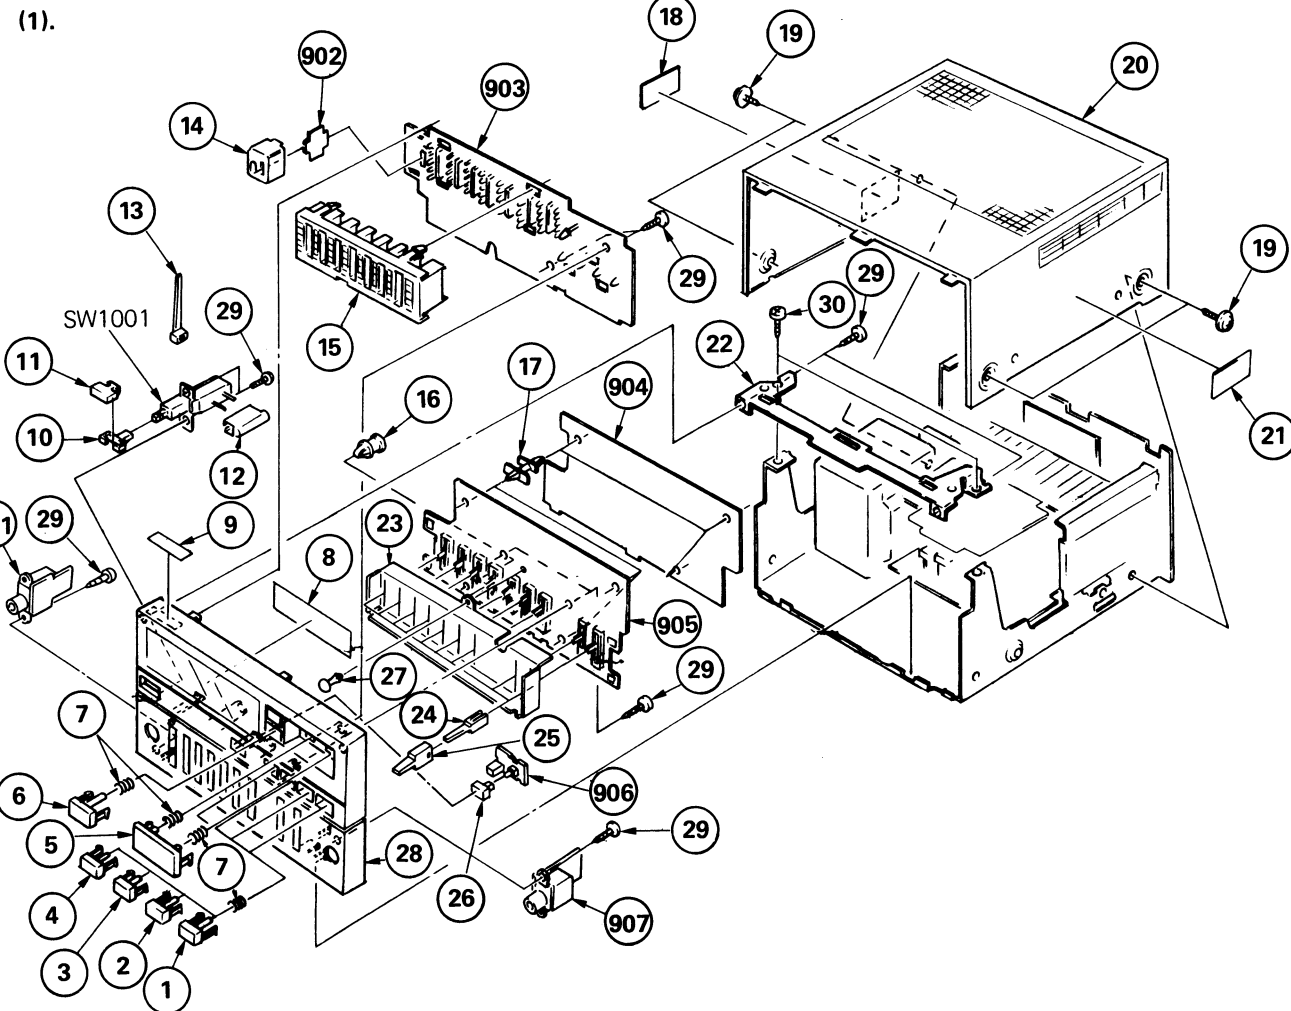

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	4-914-350-31	BUTTON (FUNCTION), SQUARE, PHONO		19	4-886-821-01	SCREW, M3 CASE	
2	4-914-350-21	BUTTON (FUNCTION), SQUARE, TUNER		20	4-910-078-31	CASE	
3	4-914-350-11	BUTTON (FUNCTION), SQUARE, CD/AUX		21	3-703-845-01	(UK)...LABEL (N)(UIC), MAIN CAUTION	
4	4-914-350-01	BUTTON (FUNCTION), SQUARE, TAPE		22	*4-910-068-01	JOINT	
5	4-910-094-11	BUTTON (UP-DOWN), SQUARE, VOLUME		23	*4-914-353-01	PLATE, BLIND	
6	4-910-087-61	BUTTON (B), SQUARE, MUTING -20dB		24	*4-914-351-01	INDICATOR	
7	4-886-032-00	SPRING, COMPRESSION		25	4-914-352-01	KNOB, SLIDE	
8	*4-910-099-11	PLATE (8 GANG), INDICATION		26	4-910-392-01	KNOB, SQUARE, AMFB	
9	3-701-690-00	(UK)...LABEL (MADE IN JAPAN)		27	4-812-134-11	RIVET NYLON, 3.5	
10	4-910-058-01	JOINT, KNOB		28	X-4910-050-1	(EA3,E).....PANEL ASSY, FRONT	
11	4-910-056-11	KNOB, POWER			X-4910-050-2	(G-AEP,AEP,UK,AED)...PANEL ASSY, FRONT	
12	3-575-524-00	COVER, POWER SWITCH		29	7-685-646-71	SCREW +BVTP 3X8 TYPE2 N-S	
13	3-701-748-00	CLAMP		30	7-685-871-01	SCREW +BVTT 3X6 (S)	
14	*4-910-301-01	PLATE, SHIELD		901	*1-619-008-11	PC BOARD, HP	
15	*4-910-306-01	HOUSE (8 GANG), LAMP		902	*1-619-014-11	PC BOARD, PHR	
16	*3-669-610-00	SPACER		903	*1-619-013-11	PC BOARD, SPM	
17	3-659-619-01	HOLDER, PC BOARD					
18	*4-914-325-01	(E,EA3).....LABEL, MODEL NUMBER (E2/E3)		904	*A-4375-251-A	MOUNTED PCB, CONTROL	
	*4-914-326-11	(AEP,AED)...LABEL, MODEL NUMBER (AE2)		905	*1-619-011-11	PC BOARD, GRAPHIC EQ	
	*4-914-327-01	(UK).....LABEL, MODEL NUMBER (UK)		906	*1-619-039-11	PC BOARD, MFB SW	
	*4-914-328-01	(G-AEP).....LABEL, MODEL NUMBER (AE4)		907	*1-619-009-11	PC BOARD, MIC	
					▲SW1001.1-553-318-51	SWITCH, PUSH (AC POWER)(1 KEY), POWER	


(2).

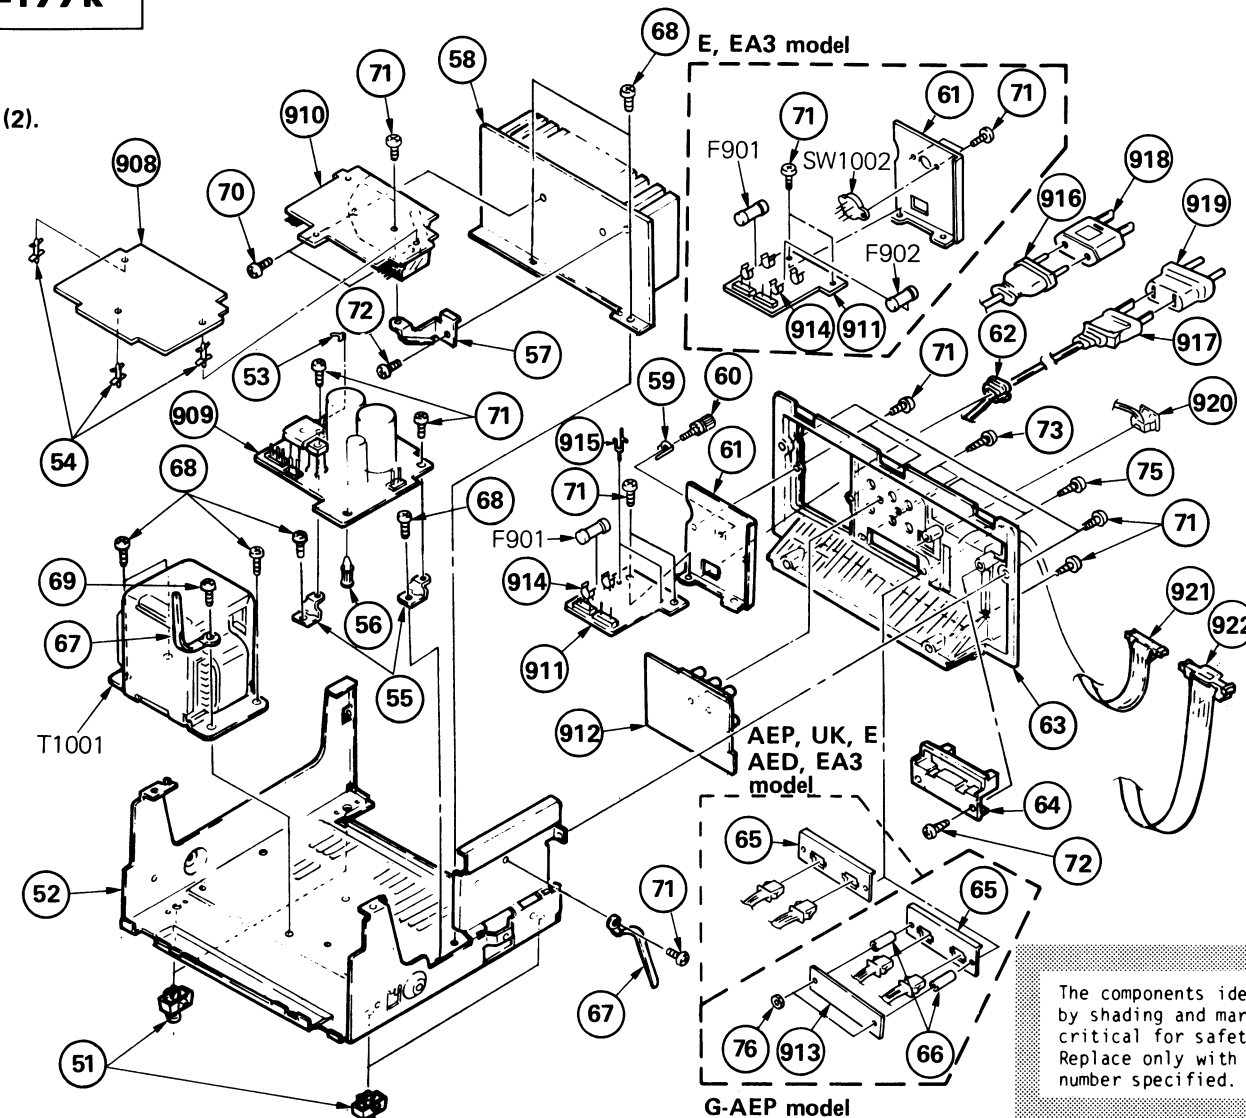

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	X-4902-937-1	FOOT ASSY, RUBBER		76	7-684-023-04	(G-AEP).....N 3, TYPE2	
52	*4-902-974-01	CHASSIS		908	*A-4388-532-A	(MOUNTED PCB, MFB	
53	*4-904-446-01	PLATE, GROUND		909	*A-4394-377-A	(G-AEP,AEP,UK,AED)...MOUNTED PCB, POWER	
54	3-659-619-01	HOLDER, PC BOARD			*A-4394-379-A	(EA3,E).....MOUNTED PCB, POWER	
55	*4-910-393-01	BRACKET, PC BOARD		910	*A-4388-528-A	(AEP,UK,AED)...MOUNTED PCB, POWER AMP	
56	*3-669-610-00	SPACER			*A-4388-530-A	(G-AEP).....MOUNTED PCB, POWER AMP	
57	*4-910-064-01	BRACKET (H), PC BOARD			*A-4388-531-A	(EA3,E).....MOUNTED PCB, POWER AMP	
58	*4-910-077-01	HEAT SINK		911	*1-618-060-11	PC BOARD, FUSE	
59	3-701-993-00	(G-AEP)...SPACER, TERMINAL		912	*1-619-010-11	PC BOARD, PHONO	
60	3-706-165-00	(G-AEP)...SCREW		913	*1-619-634-11	(G-AEP)...MOUNTED PCB, SPEAKER TERMINAL	
61	*4-910-073-01	(G-AEP,AEP,UK,AED)...BRACKET, INLET		914	1-533-162-00	HOLDER, FUSE	
	*4-910-073-11	(EA3,E).....BRACKET, INLET		915	1-535-416-00	(G-AEP,AEP,UK,AED)...TERMINAL	
62	3-703-244-00	(G-AEP,AEP,UK,AED,EA3)		916	▲.1-534-817-XX	(G-AEP,AEP,AED,EA3)	
	3-703-571-00	(E).....BUSHING(2104), CORD			▲.1-551-472-00	(E).....CORD, POWER	
63	*4-910-079-11	PLATE, JACK			▲.1-551-884-00	(UK)...CORD, POWER	
64	*4-910-302-01	HOLDER (H), WIRE		918	▲.1-506-409-00	(EA3)...AC PLUG, ADAPTOR	
65	*4-910-390-01	BRACKET, MFB		919	▲.1-526-565-00	(E).....AC PLUG, ADAPTOR	
66	3-654-603-00	(G-AEP)...SPACER		920	1-558-350-21	(G-AEP,AEP,UK,E)...CORD	
67	*3-703-150-11	CLAMP				(WITH CONNECTOR), CONTROL S OUT	
68	7-682-546-04	SCREW +BVTT 3X5 (S)		921	1-557-898-11	CORD (WITH CONNECTOR), 10P (BLUE)	
69	7-685-751-09	SCREW +BVTT 3X6 (S)		922	1-557-899-11	CORD (WITH CONNECTOR), 13P (GRAY)	
70	7-685-650-71	SCREW +BVTP 3X16 TYPE2 IT-3		F901	▲.1-532-285-00	FUSE, TIME-LAG, 1.25A	
71	7-685-871-01	SCREW +BVTT 3X6 (S)		F902	▲.1-532-285-00	(EA3,E)...FUSE, TIME-LAG, 1.25A	
72	7-685-646-71	SCREW +BVTP 3X8 TYPE2 IT-3		SW1002	▲.1-526-576-51	(EA3,E)...SELECTOR, POWER VOLTAGE	
73	7-685-647-14	SCREW +BVTP 3X10 TYPE2 N-S		T1001	▲.1-448-133-11	(EA3,E)...TRANSFORMER, POWER	
75	7-685-877-01	(G-AEP)...SCREW +BVTT 3X20		T1001A	▲.1-448-134-11	(G-AEP,AEP,UK,AED)...TRANSFORMER, POWER	
	7-685-871-01	(AEP,UK,AED,EA3,E)...SCREW +BVTT 3X6 (S)					

8. ELECTRIC

 NOTE:

Items marked  they are seldom required for routine service. Some delay should be anticipated when ordering these items.

If there are any set such as a typical circuit capacitors and circuits may be

Ref.No. Part No.

901 *1-619-
902 *1-619-
903 *1-619-
904 *A-4375-

905 *1-619-
906 *1-619-
907 *1-619-
908 *A-4388-

909 *A-4394-
*A-4394-

910 *A-4388-
*A-4388-
*A-4388-

911 *1-618-
912 *1-619-
913 *1-619-
914 1-533-
915 1-535-

916 ▲.1-534-
917 ▲.1-551-
▲.1-551-

918 ▲.1-506-
919 ▲.1-526-
920 1-558-

921 1-557-
922 1-557-

BP002 *1-535-
BP901 *1-535-
BP902 *1-535-
BP903 *1-535-


C011 1-131-
C012 1-131-
C013 1-131-

C014 1-102-
C101 1-123-
C102 1-162-

C103 1-123-
C104 1-110-
C105 1-110-

C106 1-123-
C107 1-123-
C111 1-136-

C115 1-162-
C116 1-162-
C117 1-162-

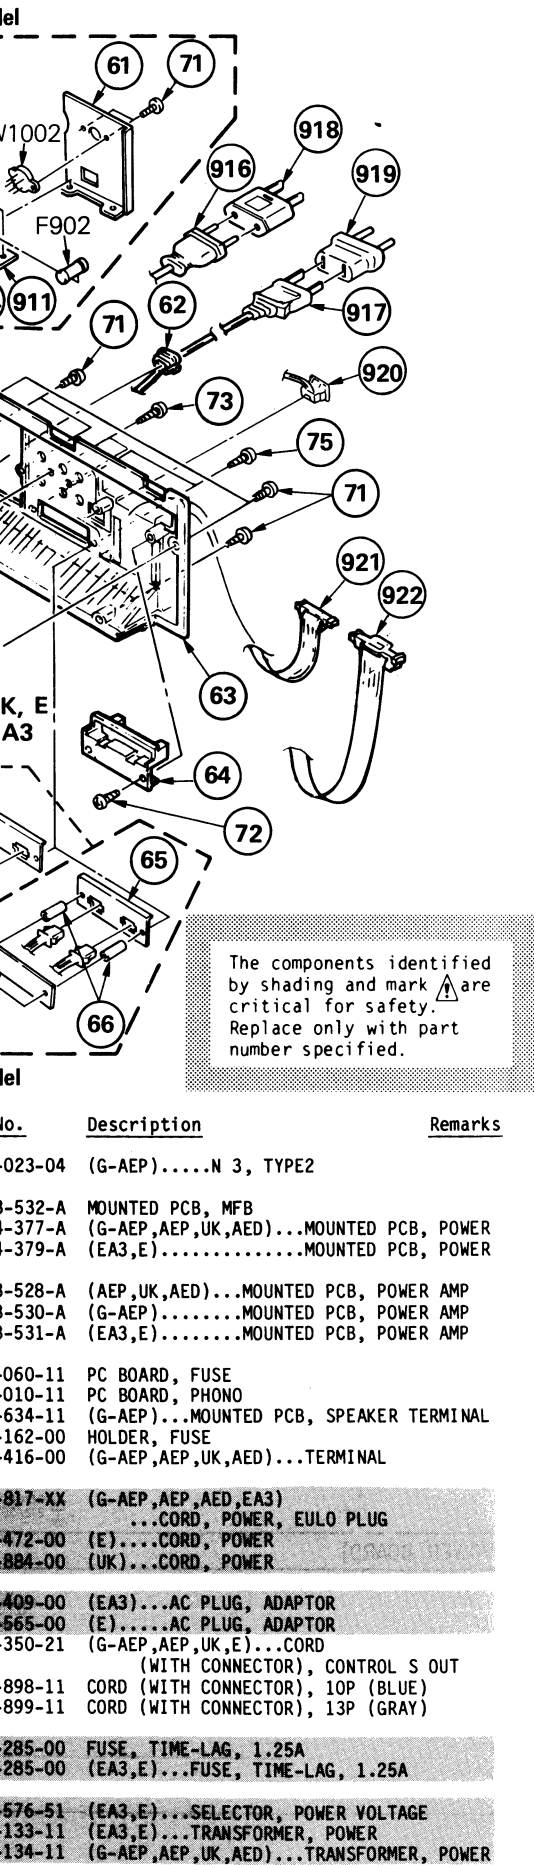

8. ELECTRICAL PARTS LIST

NOTE:

Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: μ F.

RESISTORS

All resistors are in ohms.

F: nonflammable

COILS

MMH: mH, UH: μ H

SEMICONDUCTORS

In each case, U: μ , for example:

UA...: μ A..., UPA...: μ PA..., UPC...: μ PC,

UPD...: μ PD...

Note:

EA3: Saudi Arabia model

AED: DENMARK model

The components identified by shading and mark A are critical for safety. Replace only with part number specified.

ELECTRICAL PARTS

Ref.No.	Part No.	Description
901	*1-619-008-11	PC BOARD, HP
902	*1-619-014-11	PC BOARD, PHR
903	*1-619-013-11	PC BOARD, SPM
904	*A-4375-251-A	MOUNTED PCB, CONTROL
905	*1-619-011-11	PC BOARD, GRAPHIC EQ
906	*1-619-039-11	PC BOARD, MFB SW
907	*1-619-009-11	PC BOARD, MIC
908	*A-4388-532-A	MOUNTED PCB, MFB
909	*A-4394-377-A	(G-AEP, AEP, UK, AED) ...MOUNTED PCB, POWER
	*A-4394-379-A	(EA3, E) ...MOUNTED PCB, POWER
910	*A-4388-528-A	(AEP, UK, AED) ...MOUNTED PCB, POWER AMP
	*A-4388-530-A	(G-AEP) ...MOUNTED PCB, POWER AMP
	*A-4388-531-A	(EA3, E) ...MOUNTED PCB, POWER AMP
911	*1-618-060-11	PC BOARD, FUSE
912	*1-619-010-11	PC BOARD, PHONO
913	*1-619-634-11	(G-AEP) ...MOUNTED PCB, SPEAKER TERMINAL
914	1-533-162-00	HOLDER, FUSE
915	1-535-416-00	(G-AEP, AEP, UK, AED) ...TERMINAL
916	A-1-534-817-XX	(G-AEP, AEP, AED, EA3) ...CORD, POWER, EULO PLUG
917	A-1-551-472-00	(E) ...CORD, POWER
	A-1-551-884-00	(UK) ...CORD, POWER
918	A-1-506-409-00	(EA3) ...AC PLUG, ADAPTOR
919	A-1-526-565-00	(E) ...AC PLUG, ADAPTOR
920	1-558-350-21	(G-AEP, AEP, UK, E) ...CORD (WITH CONNECTOR), CONTROL S OUT
921	1-557-898-11	CORD (WITH CONNECTOR), 10P (BLUE)
922	1-557-899-11	CORD (WITH CONNECTOR), 13P (GRAY)

No.	Description	Remarks
023-04	(G-AEP) ...N 3, TYPE2	
532-A	MOUNTED PCB, MFB	
1-377-A	(G-AEP, AEP, UK, AED) ...MOUNTED PCB, POWER	
1-379-A	(EA3, E) ...MOUNTED PCB, POWER	
1-528-A	(AEP, UK, AED) ...MOUNTED PCB, POWER AMP	
1-530-A	(G-AEP) ...MOUNTED PCB, POWER AMP	
1-531-A	(EA3, E) ...MOUNTED PCB, POWER AMP	
060-11	PC BOARD, FUSE	
010-11	PC BOARD, PHONO	
634-11	(G-AEP) ...MOUNTED PCB, SPEAKER TERMINAL	
162-00	HOLDER, FUSE	
416-00	(G-AEP, AEP, UK, AED) ...TERMINAL	
817-XX	(G-AEP, AEP, AED, EA3) ...CORD, POWER, EULO PLUG	
472-00	(E) ...CORD, POWER	
884-00	(UK) ...CORD, POWER	
409-00	(EA3) ...AC PLUG, ADAPTOR	
565-00	(E) ...AC PLUG, ADAPTOR	
350-21	(G-AEP, AEP, UK, E) ...CORD (WITH CONNECTOR), CONTROL S OUT	
898-11	CORD (WITH CONNECTOR), 10P (BLUE)	
899-11	CORD (WITH CONNECTOR), 13P (GRAY)	
285-00	FUSE, TIME-LAG, 1.25A	
285-00	(EA3, E) ...FUSE, TIME-LAG, 1.25A	
576-51	(EA3, E) ...SELECTOR, POWER VOLTAGE	
133-11	(EA3, E) ...TRANSFORMER, POWER	
134-11	(G-AEP, AEP, UK, AED) ...TRANSFORMER, POWER	

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C151	1-123-612-00	ELECT	2.2MF	20%	50V
C152	1-162-288-31	CERAMIC	330PF	10%	50V
C153	1-123-612-00	ELECT	2.2MF	20%	50V
C154	1-110-197-00	MYLAR	0.0015MF	5%	50V
C155	1-110-204-00	MYLAR	0.0056MF	5%	50V
C156	1-123-612-00	ELECT	2.2MF	20%	50V
C157	1-123-617-00	ELECT	10MF	20%	16V
C165	1-162-294-31	CERAMIC	0.001MF	10%	50V
C166	1-162-291-31	(G-AEP) ...CERAMIC	560PF	10%	50V
C167	1-162-291-31	(G-AEP) ...CERAMIC	560PF	10%	50V
C201	1-123-612-00	ELECT	2.2MF	20%	50V
C202	1-162-288-31	CERAMIC	330PF	10%	50V
C212	1-162-282-31	CERAMIC	100PF	10%	50V
C251	1-123-612-00	ELECT	2.2MF	20%	50V
C252	1-162-288-31	CERAMIC	330PF	10%	50V
C262	1-162-282-31	CERAMIC	100PF	10%	50V
C303	1-162-284-31	CERAMIC	150PF	10%	50V
C304	1-162-284-31	CERAMIC	150PF	10%	50V
C305	1-123-617-00	ELECT	10MF	20%	16V
C310	1-131-343-00	TANTALUM	0.22MF	10%	35V
C311	1-123-622-00	ELECT	22MF	20%	16V
C312	1-123-617-00	ELECT	10MF	20%	16V
C315	1-162-306-31	CERAMIC	0.01MF	30%	16V
C316	1-162-306-31	CERAMIC	0.01MF	30%	16V
C317	1-123-616-00	ELECT	4.7MF	20%	25V
C318	1-123-612-00	ELECT	2.2MF	20%	50V
C349	1-123-622-00	ELECT	22MF	20%	16V
C350	1-123-622-00	ELECT	22MF	20%	16V
C351	1-123-612-00	ELECT	2.2MF	20%	50V
C352	1-123-612-00	ELECT	2.2MF	20%	50V
C353	1-123-612-00	ELECT	2.2MF	20%	50V
C354	1-123-612-00	ELECT	2.2MF	20%	50V
C355	1-123-617-00	ELECT	10MF	20%	16V
C356	1-123-622-00	ELECT	22MF	20%	16V
C357	1-123-617-00	ELECT	10MF	20%	16V
C375	1-162-302-31	CERAMIC	0.0022MF	30%	16V
C376	1-162-302-31	CERAMIC	0.0022MF	30%	16V
C377	1-162-302-31	CERAMIC	0.0022MF	30%	16V
C381	1-162-306-31	CERAMIC	0.01MF	30%	16V
C382	1-162-306-31	CERAMIC	0.01MF	30%	16V
C383	1-162-306-31	CERAMIC	0.01MF	30%	16V
C385	1-162-302-31	CERAMIC	0.0022MF	30%	16V
C387	1-162-294-31	CERAMIC	0.001MF	10%	50V
C388	1-123-617-00	ELECT	10MF	20%	16V
C395	1-162-306-31	CERAMIC	0.01MF	30%	16V

ELECTRICAL PARTS

ef.No.	Part No.	Description			
C399	1-162-294-31	CERAMIC	0.001MF	10%	50V
C413	1-131-371-00	TANTALUM	10MF	10%	16V
C419	1-162-288-31	CERAMIC	330PF	10%	50V
C423	1-131-371-00	TANTALUM	10MF	10%	16V
C431	1-131-346-00	TANTALUM	0.68MF	10%	35V
C432	1-131-344-00	TANTALUM	0.33MF	10%	35V
C433	1-131-341-00	TANTALUM	0.1MF	10%	35V
C434	1-136-161-00	FILM	0.047MF	5%	50V
C435	1-162-306-31	CERAMIC	0.01MF	20%	16V
C436	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C437	1-162-303-31	CERAMIC	0.0033MF	20%	16V
C438	1-131-342-00	TANTALUM	0.15MF	10%	35V
C439	1-136-161-00	FILM	0.047MF	5%	50V
C440	1-162-596-00	CERAMIC	0.022MF	25V	
C441	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C442	1-162-302-31	CERAMIC	0.0022MF	20%	16V
C443	1-162-294-31	CERAMIC	0.001MF	10%	50V
C444	1-162-291-31	CERAMIC	560PF	10%	50V
C451	1-131-371-00	TANTALUM	10MF	10%	16V
C452	1-131-371-00	TANTALUM	10MF	10%	16V
C461	1-162-306-31	CERAMIC	0.01MF	30%	16V
C469	1-162-288-31	CERAMIC	330PF	10%	50V
C471	1-131-346-00	TANTALUM	0.68MF	10%	35V
C472	1-131-344-00	TANTALUM	0.33MF	10%	35V
C473	1-131-341-00	TANTALUM	0.1MF	10%	35V
C474	1-136-161-00	FILM	0.047MF	5%	50V
C475	1-162-306-31	CERAMIC	0.01MF	20%	16V
C476	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C477	1-162-303-31	CERAMIC	0.0033MF	20%	16V
C478	1-131-342-00	TANTALUM	0.15MF	10%	35V
C479	1-136-161-00	FILM	0.047MF	5%	50V
C480	1-162-596-00	CERAMIC	0.022MF	25V	
C481	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C482	1-162-302-31	CERAMIC	0.0022MF	20%	16V
C483	1-162-294-31	CERAMIC	0.001MF	10%	50V
C484	1-162-291-31	CERAMIC	560PF	10%	50V
C502	1-123-611-00	ELECT	1MF	20%	50V
C503	1-161-055-00	CERAMIC	0.022MF	20%	25V
C504	1-123-622-00	ELECT	22MF	20%	16V
C505	1-123-611-00	ELECT	1MF	20%	50V
C601	1-162-286-31	CERAMIC	220PF	10%	50V
C602	1-136-165-00	FILM	0.1MF	5%	50V
C603	1-162-302-31	CERAMIC	0.0022MF	20%	16V
C604	1-123-357-00	ELECT	22MF	20%	50V
C605	1-123-359-00	ELECT	47MF	20%	50V
C606	1-162-290-31	CERAMIC	470PF	10%	50V
C607	1-123-380-00	ELECT	1MF	20%	50V
C611	1-136-165-00	FILM	0.1MF	5%	50V
C612	1-136-165-00	(G-AEP,AEP,UK,AED)... FILM	0.1MF	5%	50V
C623	1-161-330-00	(G-AEP)...CERAMIC	0.01MF	30%	25V
C632	1-123-360-00	ELECT	100MF	20%	50V
C633	1-123-356-00	ELECT	10MF	20%	50V
C651	1-162-286-31	CERAMIC	220PF	10%	50V
C652	1-136-165-00	FILM	0.1MF	5%	50V
C653	1-162-302-31	CERAMIC	0.0022MF	20%	16V
C654	1-123-357-00	ELECT	22MF	20%	50V
C655	1-123-359-00	ELECT	47MF	20%	50V

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C399	1-162-294-31	CERAMIC	0.001MF	10%	50V
C413	1-131-371-00	TANTALUM	10MF	10%	16V
C419	1-162-288-31	CERAMIC	330PF	10%	50V
C423	1-131-371-00	TANTALUM	10MF	10%	16V
C431	1-131-346-00	TANTALUM	0.68MF	10%	35V
C432	1-131-344-00	TANTALUM	0.33MF	10%	35V
C433	1-131-341-00	TANTALUM	0.1MF	10%	35V
C434	1-136-161-00	FILM	0.047MF	5%	50V
C435	1-162-306-31	CERAMIC	0.01MF	20%	16V
C436	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C437	1-162-303-31	CERAMIC	0.0033MF	20%	16V
C438	1-131-342-00	TANTALUM	0.15MF	10%	35V
C439	1-136-161-00	FILM	0.047MF	5%	50V
C440	1-162-596-00	CERAMIC	0.022MF		25V
C441	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C442	1-162-302-31	CERAMIC	0.0022MF	20%	16V
C443	1-162-294-31	CERAMIC	0.001MF	10%	50V
C444	1-162-291-31	CERAMIC	560PF	10%	50V
C451	1-131-371-00	TANTALUM	10MF	10%	16V
C452	1-131-371-00	TANTALUM	10MF	10%	16V
C461	1-162-306-31	CERAMIC	0.01MF	30%	16V
C469	1-162-288-31	CERAMIC	330PF	10%	50V
C471	1-131-346-00	TANTALUM	0.68MF	10%	35V
C472	1-131-344-00	TANTALUM	0.33MF	10%	35V
C473	1-131-341-00	TANTALUM	0.1MF	10%	35V
C474	1-136-161-00	FILM	0.047MF	5%	50V
C475	1-162-306-31	CERAMIC	0.01MF	20%	16V
C476	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C477	1-162-303-31	CERAMIC	0.0033MF	20%	16V
C478	1-131-342-00	TANTALUM	0.15MF	10%	35V
C479	1-136-161-00	FILM	0.047MF	5%	50V
C480	1-162-596-00	CERAMIC	0.022MF		25V
C481	1-162-305-31	CERAMIC	0.0068MF	20%	16V
C482	1-162-302-31	CERAMIC	0.0022MF	20%	16V
C483	1-162-294-31	CERAMIC	0.001MF	10%	50V
C484	1-162-291-31	CERAMIC	560PF	10%	50V
C502	1-123-611-00	ELECT	1MF	20%	50V
C503	1-161-055-00	CERAMIC	0.022MF	20%	25V
C504	1-123-622-00	ELECT	22MF	20%	16V
C505	1-123-611-00	ELECT	1MF	20%	50V
C601	1-162-286-31	CERAMIC	220PF	10%	50V
C602	1-136-165-00	FILM	0.1MF	5%	50V
C603	1-162-302-31	CERAMIC	0.0022MF	20%	16V
C604	1-123-357-00	ELECT	22MF	20%	50V
C605	1-123-359-00	ELECT	47MF	20%	50V
C606	1-162-290-31	CERAMIC	470PF	10%	50V
C607	1-123-380-00	ELECT	1MF	20%	50V
C611	1-136-165-00	FILM	0.1MF	5%	50V
C612	1-136-165-00	(G-AEP,AEP,UK,AED)... FILM 0.1MF	5%	50V	
C623	1-161-330-00	(G-AEP)...CERAMIC	0.01MF	30%	25V
C632	1-123-360-00	ELECT	100MF	20%	50V
C633	1-123-356-00	ELECT	10MF	20%	50V
C651	1-162-286-31	CERAMIC	220PF	10%	50V
C652	1-136-165-00	FILM	0.1MF	5%	50V
C653	1-162-302-31	CERAMIC	0.0022MF	20%	16V
C654	1-123-357-00	ELECT	22MF	20%	50V
C655	1-123-359-00	ELECT	47MF	20%	50V

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C656	1-162-290-31	CERAMIC	470PF	10%	50V
C657	1-123-380-00	ELECT	1MF	20%	50V
C661	1-136-165-00	FILM	0.1MF	5%	50V
C662	1-136-165-00	(G-AEP,AEP,UK,AED)... FILM 0.1MF	5%	50V	
C672	1-123-308-00	ELECT	220MF	20%	10V
C673	1-162-306-31	CERAMIC	0.01MF	30%	16V
C674	1-123-308-00	ELECT	220MF	20%	10V
C675	1-136-157-00	FILM	0.022MF	5%	50V
C677	1-123-307-00	ELECT	100MF	20%	10V
C682	1-161-330-00	(G-AEP)...CERAMIC	0.01MF	30%	25V
C683	1-162-306-31	(G-AEP)...CERAMIC	0.01MF	30%	16V
C701	1-131-355-00	TANTALUM	2.2MF	10%	25V
C702	1-131-371-00	TANTALUM	10MF	10%	16V
C711	1-131-344-00	TANTALUM	0.33MF	10%	35V
C712	1-136-161-00	FILM	0.047MF	5%	50V
C713	1-131-356-00	TANTALUM	3.3MF	10%	25V
C721	1-131-342-00	TANTALUM	0.15MF	10%	35V
C722	1-162-596-00	CERAMIC	0.022MF		25V
C723	1-131-356-00	TANTALUM	3.3MF	10%	25V
C731	1-136-162-00	FILM	0.056MF	5%	50V
C732	1-161-012-00	CERAMIC	0.0082MF	10%	25V
C733	1-131-356-00	TANTALUM	3.3MF	10%	25V
C741	1-162-596-00	CERAMIC	0.022MF		25V
C742	1-162-303-31	CERAMIC	0.0033MF	30%	16V
C743	1-131-356-00	TANTALUM	3.3MF	10%	25V
C751	1-162-306-31	CERAMIC	0.01MF	30%	16V
C752	1-162-301-31	CERAMIC	0.0015MF	30%	16V
C753	1-131-356-00	TANTALUM	3.3MF	10%	25V
C761	1-161-046-00	CERAMIC	0.0039MF	10%	25V
C762	1-162-291-31	CERAMIC	560PF	10%	50V
C763	1-131-356-00	TANTALUM	3.3MF	10%	25V
C771	1-161-041-00	CERAMIC	0.0015MF	10%	25V
C772	1-162-286-31	CERAMIC	220PF	10%	50V
C773	1-131-356-00	TANTALUM	3.3MF	10%	25V
C791	1-131-371-00	TANTALUM	10MF	10%	16V
C795	1-162-306-31	CERAMIC	0.01MF	30%	16V
C796	1-131-355-00	TANTALUM	2.2MF	10%	25V
C901	1-124-362-00	ELECT	4700MF	20%	42V
C902	1-124-362-00	ELECT	4700MF	20%	42V
C903	1-123-338-00	ELECT	2200MF	20%	25V
C905	1-123-369-00	ELECT	4.7MF	20%	50V
C910	1-123-356-00	ELECT	10MF	20%	25V
C915	1-123-356-00	ELECT	10MF	20%	25V
C920	1-123-307-00	ELECT	100MF	20%	10V
C930	1-136-171-00	FILM	0.33MF	5%	50V
C931	1-102-394-00	CERAMIC	0.01MF		250V
C932	1-161-744-00	CERAMIC	0.01MF		400V
C933	1-136-171-00	FILM	0.33MF	5%	50V
C1101	1-123-612-00	ELECT	2.2MF	20%	50V
C1102	1-136-165-00	FILM	0.1MF	5%	50V
C1103	1-136-165-00	FILM	0.1MF	5%	50V
C1104	1-162-282-31	CERAMIC	100PF	10%	50V
C1105	1-136-160-00	FILM	0.039MF	5%	50V
C1106	1-136-157-00	FILM	0.022MF	5%	50V
C1107	1-123-617-00	ELECT	10MF	20%	16V
C1108	1-123-612-00	ELECT	2.2MF	20%	50V

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C1109	1-123-617-00	ELECT	10MF	20%	16V
C1111	1-123-611-00	ELECT	1MF	20%	50V
C1112	1-162-288-31	CERAMIC	330PF	10%	50V
C1125	1-162-199-11	CERAMIC	10PF	10%	50V
C1126	1-136-160-00	FILM	0.039MF	5%	50V
C1127	1-123-307-00	ELECT	100MF	20%	10V
C1128	1-123-611-00	ELECT	1MF	20%	50V
C1129	1-123-610-00	ELECT	0.47MF	20%	50V
C1131	1-136-168-00	FILM	0.18MF	5%	50V
C1151	1-123-612-00	ELECT	2.2MF	20%	50V
C1152	1-136-165-00	FILM	0.1MF	5%	50V
C1153	1-136-165-00	FILM	0.1MF	5%	50V
C1154	1-162-282-31	CERAMIC	100PF	10%	50V
C1155	1-136-160-00	FILM	0.039MF	5%	50V
C1156	1-136-157-00	FILM	0.022MF	5%	50V
C1157	1-123-617-00	ELECT	10MF	20%	16V
C1158	1-123-612-00	ELECT	2.2MF	20%	50V
C1159	1-123-617-00	ELECT	10MF	20%	16V
C1161	1-123-611-00	ELECT	1MF	20%	50V
C1162	1-162-288-31	CERAMIC	330PF	10%	50V
C1175	1-162-199-11	CERAMIC	10PF	10%	50V
C1176	1-136-160-00	FILM	0.039MF	5%	50V
C1177	1-123-307-00	ELECT	10MF	20%	10V
C1178	1-123-611-00	ELECT	1MF	20%	50V
C1179	1-123-610-00	ELECT	0.47MF	20%	50V
C1181	1-136-168-00	FILM	0.18MF	5%	50V
C1201	1-123-612-00	ELECT	2.2MF	20%	50V
C1202	1-123-612-00	ELECT	2.2MF	20%	50V
C1203	1-123-612-00	ELECT	2.2MF	20%	50V
C1204	1-123-612-00	ELECT	2.2MF	20%	50V
C1205	1-123-612-00	ELECT	2.2MF	20%	50V
C1206	1-123-612-00	ELECT	2.2MF	20%	50V
C1211	1-123-612-00	ELECT	2.2MF	20%	50V
C1213	1-123-612-00	ELECT	2.2MF	20%	50V
C1214	1-123-612-00	ELECT	2.2MF	20%	50V
C1215	1-123-617-00	ELECT	10MF	20%	16V
C1216	1-123-617-00	ELECT	10MF	20%	16V
C1218	1-123-612-00	ELECT	2.2MF	20%	50V
C1231	1-162-306-31	CERAMIC	0.01MF	30%	16V
C1232	1-123-617-00	ELECT	10MF	20%	16V
C1233	1-136-165-00	FILM	0.1MF	5%	50V
C1501	1-161-330-00	(G-AEP)...CERAMIC	0.01MF	30%	25V
C1502	1-161-330-00	(G-AEP)...CERAMIC	0.01MF	30%	25V
C1503	1-161-330-00	(G-AEP)...CERAMIC	0.01MF	30%	25V
CN201	*1-560-061-00	PIN, CONNECTOR 3P			
CN202	*1-560-064-00	PIN, CONNECTOR 6P			
CN203	*1-560-063-00	PIN, CONNECTOR 5P			
CN204	*1-560-066-00	PIN, CONNECTOR 10P			
CN205	*1-560-060-00	PIN, CONNECTOR 2P			
CN206	*1-560-065-00	PIN, CONNECTOR 8P			
CN208	*1-564-496-11	PIN, CONNECTOR 3P			
CN216	*1-560-062-00	PIN, CONNECTOR 4P			
CN217	*1-560-603-00	PIN, CONNECTOR 4P			
CN401	*1-564-501-11	PIN, CONNECTOR 8P			
CN402	*1-564-496-11	PIN, CONNECTOR 3P			
CN403	*1-564-112-21	PIN, CONNECTOR 3P			

ELECTRICAL PARTS

Ref.No.	Part No.	Description
CN601	*1-560-070-00	BASE POST 5P
CN603	*1-560-070-00	BASE POST 5P
CN903	*1-560-063-00	PIN, CONNECTOR 5P
CN1101	*1-564-506-11	PLUG, CONNECTOR 3P
CN1102	*1-564-507-11	PLUG, CONNECTOR 4P
CN1103	*1-564-338-00	PIN, CONNECTOR 4P
CN1104	*1-564-506-11	PLUG, CONNECTOR 3P
CN1105	*1-564-505-11	PLUG, CONNECTOR 2P
CN1106	*1-564-506-11	PLUG, CONNECTOR 3P
CN1107	*1-564-507-11	PLUG, CONNECTOR 4P
D011	8-719-110-32	DIODE PH302B
D301	8-719-911-19	DIODE 1SS119
D302	8-719-911-19	DIODE 1SS119
D303	8-719-911-19	DIODE 1SS119
D304	8-719-911-19	DIODE 1SS119
D311	8-719-911-19	DIODE 1SS119
D312	8-719-911-19	DIODE 1SS119
D321	8-719-910-61	DIODE HZ6A1L
D401	1-807-013-11	DIODE AA3422K
D402	1-807-013-11	DIODE AA3422K
D411	1-807-013-11	DIODE AA3422K
D412	1-807-013-11	DIODE AA3422K
D413	1-807-013-11	DIODE AA3422K
D414	1-807-013-11	DIODE AA3422K
D415	1-807-013-11	DIODE AA3422K
D416	1-807-013-11	DIODE AA3422K
D417	1-807-013-11	DIODE AA3422K
D671	8-719-911-19	DIODE 1SS119
D701	8-719-301-38	DIODE SEL2210S-C
D702	8-719-301-38	DIODE SEL2210S-C
D703	8-719-301-38	DIODE SEL2210S-C
D704	8-719-301-38	DIODE SEL2210S-C
D705	8-719-301-38	DIODE SEL2210S-C
D706	8-719-907-80	DIODE AA5535S
D711	8-719-301-43	DIODE SEL2410E-C
D712	8-719-300-95	DIODE SEL2710K
D713	8-719-301-60	DIODE SEL2910A-C
D714	8-719-301-52	DIODE SEL2810A-C
D715	8-719-301-38	DIODE SEL2210S-C
D721	8-719-301-43	DIODE SEL2410E-C
D722	8-719-300-95	DIODE SEL2710K
D723	8-719-301-60	DIODE SEL2910A-C
D724	8-719-301-52	DIODE SEL2810A-C
D725	8-719-301-38	DIODE SEL2210S-C
D731	8-719-301-43	DIODE SEL2410E-C
D732	8-719-300-95	DIODE SEL2710K
D733	8-719-301-60	DIODE SEL2910A-C
D734	8-719-301-52	DIODE SEL2810A-C
D735	8-719-301-38	DIODE SEL2210S-C
D741	8-719-301-43	DIODE SEL2410E-C
D742	8-719-300-95	DIODE SEL2710K
D743	8-719-301-60	DIODE SEL2910A-C
D744	8-719-301-52	DIODE SEL2810A-C
D745	8-719-301-38	DIODE SEL2210S-C
D751	8-719-301-43	DIODE SEL2410E-C
D752	8-719-300-95	DIODE SEL2710K
D753	8-719-301-60	DIODE SEL2910A-C
D754	8-719-301-52	DIODE SEL2810A-C

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
	C1109	1-123-617-00	ELECT	10MF	20% 16V
	C1111	1-123-611-00	ELECT	1MF	20% 50V
	C1112	1-162-288-31	CERAMIC	330PF	10% 50V
	C1125	1-162-199-11	CERAMIC	10PF	10% 50V
	C1126	1-136-160-00	FILM	0.039MF	5% 50V
	C1127	1-123-307-00	ELECT	100MF	20% 10V
	C1128	1-123-611-00	ELECT	1MF	20% 50V
	C1129	1-123-610-00	ELECT	0.47MF	20% 50V
	C1131	1-136-168-00	FILM	0.18MF	5% 50V
	C1151	1-123-612-00	ELECT	2.2MF	20% 50V
	C1152	1-136-165-00	FILM	0.1MF	5% 50V
	C1153	1-136-165-00	FILM	0.1MF	5% 50V
	C1154	1-162-282-31	CERAMIC	100PF	10% 50V
	C1155	1-136-160-00	FILM	0.039MF	5% 50V
	C1156	1-136-157-00	FILM	0.022MF	5% 50V
	C1157	1-123-617-00	ELECT	10MF	20% 16V
	C1158	1-123-612-00	ELECT	2.2MF	20% 50V
	C1159	1-123-617-00	ELECT	10MF	20% 16V
	C1161	1-123-611-00	ELECT	1MF	20% 50V
	C1162	1-162-288-31	CERAMIC	330PF	10% 50V
	C1175	1-162-199-11	CERAMIC	10PF	10% 50V
	C1176	1-136-160-00	FILM	0.039MF	5% 50V
	C1177	1-123-307-00	ELECT	100MF	20% 10V
	C1178	1-123-611-00	ELECT	1MF	20% 50V
	C1179	1-123-610-00	ELECT	0.47MF	20% 50V
	C1181	1-136-168-00	FILM	0.18MF	5% 50V
	C1201	1-123-612-00	ELECT	2.2MF	20% 50V
	C1202	1-123-612-00	ELECT	2.2MF	20% 50V
	C1203	1-123-612-00	ELECT	2.2MF	20% 50V
	C1204	1-123-612-00	ELECT	2.2MF	20% 50V
	C1205	1-123-612-00	ELECT	2.2MF	20% 50V
	C1206	1-123-612-00	ELECT	2.2MF	20% 50V
	C1211	1-123-612-00	ELECT	2.2MF	20% 50V
	C1213	1-123-612-00	ELECT	2.2MF	20% 50V
	C1214	1-123-612-00	ELECT	2.2MF	20% 50V
	C1215	1-123-617-00	ELECT	10MF	20% 16V
	C1216	1-123-617-00	ELECT	10MF	20% 16V
	C1218	1-123-612-00	ELECT	2.2MF	20% 50V
	C1231	1-162-306-31	CERAMIC	0.01MF	30% 16V
	C1232	1-123-617-00	ELECT	10MF	20% 16V
	C1233	1-136-165-00	FILM	0.1MF	5% 50V
	C1501	1-161-330-00	(G-AEP)...CERAMIC	0.01MF	30% 25V
	C1502	1-161-330-00	(G-AEP)...CERAMIC	0.01MF	30% 25V
	C1503	1-161-330-00	(G-AEP)...CERAMIC	0.01MF	30% 25V
	CN201	*1-560-061-00	PIN, CONNECTOR 3P		
	CN202	*1-560-064-00	PIN, CONNECTOR 6P		
	CN203	*1-560-063-00	PIN, CONNECTOR 5P		
	CN204	*1-560-066-00	PIN, CONNECTOR 10P		
	CN205	*1-560-060-00	PIN, CONNECTOR 2P		
	CN206	*1-560-065-00	PIN, CONNECTOR 8P		
	CN208	*1-564-496-11	PIN, CONNECTOR 3P		
	CN216	*1-560-062-00	PIN, CONNECTOR 4P		
	CN217	*1-560-603-00	PIN, CONNECTOR 4P		
	CN401	*1-564-501-11	PIN, CONNECTOR 8P		
	CN402	*1-564-496-11	PIN, CONNECTOR 3P		
	CN403	*1-564-112-21	PIN, CONNECTOR 3P		

ELECTRICAL PARTS


Ref.No.	Part No.	Description
CN601	*1-560-070-00	BASE POST 5P
CN603	*1-560-070-00	BASE POST 5P
CN903	*1-560-063-00	PIN, CONNECTOR 5P
CN1101	*1-564-506-11	PLUG, CONNECTOR 3P
CN1102	*1-564-507-11	PLUG, CONNECTOR 4P
CN1103	*1-564-338-00	PIN, CONNECTOR 4P
CN1104	*1-564-506-11	PLUG, CONNECTOR 3P
CN1105	*1-564-505-11	PLUG, CONNECTOR 2P
CN1106	*1-564-506-11	PLUG, CONNECTOR 3P
CN1107	*1-564-507-11	PLUG, CONNECTOR 4P
D011	8-719-110-32	DIODE PH302B
D301	8-719-911-19	DIODE 1SS119
D302	8-719-911-19	DIODE 1SS119
D303	8-719-911-19	DIODE 1SS119
D304	8-719-911-19	DIODE 1SS119
D311	8-719-911-19	DIODE 1SS119
D312	8-719-911-19	DIODE 1SS119
D321	8-719-910-61	DIODE HZ6A1L
D401	1-807-013-11	DIODE AA3422K
D402	1-807-013-11	DIODE AA3422K
D411	1-807-013-11	DIODE AA3422K
D412	1-807-013-11	DIODE AA3422K
D413	1-807-013-11	DIODE AA3422K
D414	1-807-013-11	DIODE AA3422K
D415	1-807-013-11	DIODE AA3422K
D416	1-807-013-11	DIODE AA3422K
D417	1-807-013-11	DIODE AA3422K
D671	8-719-911-19	DIODE 1SS119
D701	8-719-301-38	DIODE SEL2210S-C
D702	8-719-301-38	DIODE SEL2210S-C
D703	8-719-301-38	DIODE SEL2210S-C
D704	8-719-301-38	DIODE SEL2210S-C
D705	8-719-301-38	DIODE SEL2210S-C
D706	8-719-907-80	DIODE AA5535S
D711	8-719-301-43	DIODE SEL2410E-C
D712	8-719-300-95	DIODE SEL2710K
D713	8-719-301-60	DIODE SEL2910A-C
D714	8-719-301-52	DIODE SEL2810A-C
D715	8-719-301-38	DIODE SEL2210S-C
D721	8-719-301-43	DIODE SEL2410E-C
D722	8-719-300-95	DIODE SEL2710K
D723	8-719-301-60	DIODE SEL2910A-C
D724	8-719-301-52	DIODE SEL2810A-C
D725	8-719-301-38	DIODE SEL2210S-C
D731	8-719-301-43	DIODE SEL2410E-C
D732	8-719-300-95	DIODE SEL2710K
D733	8-719-301-60	DIODE SEL2910A-C
D734	8-719-301-52	DIODE SEL2810A-C
D735	8-719-301-38	DIODE SEL2210S-C
D741	8-719-301-43	DIODE SEL2410E-C
D742	8-719-300-95	DIODE SEL2710K
D743	8-719-301-60	DIODE SEL2910A-C
D744	8-719-301-52	DIODE SEL2810A-C
D745	8-719-301-38	DIODE SEL2210S-C
D751	8-719-301-43	DIODE SEL2410E-C
D752	8-719-300-95	DIODE SEL2710K
D753	8-719-301-60	DIODE SEL2910A-C
D754	8-719-301-52	DIODE SEL2810A-C

ELECTRICAL PARTS

Ref.No.	Part No.	Description
D755	8-719-301-38	DIODE SEL2210S-C
D761	8-719-301-43	DIODE SEL2410E-C
D762	8-719-300-95	DIODE SEL2710K
D763	8-719-301-60	DIODE SEL2910A-C
D764	8-719-301-52	DIODE SEL2810A-C
D765	8-719-301-38	DIODE SEL2210S-C
D771	8-719-301-43	DIODE SEL2410E-C
D772	8-719-300-95	DIODE SEL2710K
D773	8-719-301-60	DIODE SEL2910A-C
D774	8-719-301-52	DIODE SEL2810A-C
D775	8-719-301-38	DIODE SEL2210S-C
D781	8-719-301-52	DIODE SEL2810A-C
D782	8-719-301-52	DIODE SEL2810A-C
D783	8-719-301-52	DIODE SEL2810A-C
D784	8-719-301-52	DIODE SEL2810A-C
D791	8-719-901-62	DIODE HZ16-2L
D901	8-719-300-67	DIODE RB602F
D902	8-719-300-57	DIODE RB402
D904	8-719-911-19	DIODE 1SS119
D910	8-719-904-21	DIODE HZ12A1
D915	8-719-904-21	DIODE HZ12A1
D920	8-719-910-71	DIODE HZ7A1L
D1101	8-719-911-19	DIODE 1SS119
D1102	8-719-911-19	DIODE 1SS119
D1125	8-719-910-61	DIODE HZ6A1L
D1151	8-719-911-19	DIODE 1SS119
D1152	8-719-911-19	DIODE 1SS119
D1175	8-719-910-61	DIODE HZ6A1L
D1231	8-719-911-19	DIODE 1SS119
D1232	8-719-911-19	DIODE 1SS119
D1301	8-719-403-98	DIODE LN450YP
F901	1-532-285-00	FUSE, TIME-LAG, 1.25A
F902	1-532-285-00	(EA3,E)...FUSE, TIME-LAG, 1.25A
IC011	8-759-602-54	IC CX20106A
IC101	8-759-600-02	IC M5218L
IC201	8-759-600-02	IC M5218L
IC202	8-759-801-63	IC LC7816
IC203	8-759-204-30	IC TC9176P
IC301	8-759-602-60	IC M50765-440SP
IC401	8-759-602-04	IC M5226P
IC402	8-759-602-04	IC M5226P
IC403	8-759-602-04	IC M5226P
IC601	8-759-941-52	IC STK415211
IC671	8-759-101-23	IC UPC1237H
IC711	8-759-913-80	IC IR2E31
IC721	8-759-913-80	IC IR2E31
IC731	8-759-913-80	IC IR2E31
IC741	8-759-913-80	IC IR2E31
IC751	8-759-913-80	IC IR2E31
IC761	8-759-913-80	IC IR2E31
IC771	8-759-913-80	IC IR2E31
IC1201	8-759-600-02	IC M5218L
IC1202	8-759-801-01	IC LC4966
IC1203	8-759-600-02	IC M5218L
IC1204	8-759-801-01	IC LC4966
J501	1-507-984-11	JACK (LARGE TYPE)(MIC)
J801	1-507-981-11	JACK (LARGE TYPE)(HEADPHONES)

ELECTRICAL PARTS

Ref.No.	Part No.	Description
OS301	1-527-532-00	OSCILLATOR, CERAMIC
PIN101	1-507-914-21	JACK, PIN 6P
Q201	8-729-600-08	TRANSISTOR 2SK381-E
Q251	8-729-600-08	TRANSISTOR 2SK381-E
Q301	8-729-606-33	TRANSISTOR 2SC2603F
Q302	8-729-117-54	TRANSISTOR 2SA1175
Q305	8-729-606-33	TRANSISTOR 2SC2603F
Q310	8-729-117-54	TRANSISTOR 2SA1175
Q311	8-729-117-54	TRANSISTOR 2SA1175
Q312	8-729-117-54	TRANSISTOR 2SA1175
Q320	8-729-117-54	TRANSISTOR 2SA1175
Q321	8-729-117-54	TRANSISTOR 2SA1175
Q322	8-729-117-54	TRANSISTOR 2SA1175
Q323	8-729-117-54	TRANSISTOR 2SA1175
Q324	8-729-117-54	TRANSISTOR 2SA1175
Q325	8-729-117-54	TRANSISTOR 2SA1175
Q326	8-729-606-33	TRANSISTOR 2SC2603F
Q501	8-729-606-33	TRANSISTOR 2SC2603F
Q601	8-729-108-05	TRANSISTOR 2SC1841PA
Q651	8-729-108-05	TRANSISTOR 2SC1841PA
Q671	8-729-117-54	TRANSISTOR 2SA1175
Q701	8-729-606-33	TRANSISTOR 2SC2603F
Q702	8-729-180-93	TRANSISTOR 2SD809
Q910	8-729-111-85	TRANSISTOR 2SD1288-Q
Q911	8-729-606-33	TRANSISTOR 2SC2603F
Q915	8-729-111-91	TRANSISTOR 2SB965-Q
Q916	8-729-117-54	TRANSISTOR 2SA1175
Q920	8-729-180-93	TRANSISTOR 2SD809
Q1101	8-729-600-27	TRANSISTOR 2SC634SP
Q1102	8-729-600-27	TRANSISTOR 2SC634SP
Q1125	8-729-117-54	TRANSISTOR 2SA1175
Q1151	8-729-600-27	TRANSISTOR 2SC634SP
Q1152	8-729-600-27	TRANSISTOR 2SC634SP
Q1175	8-729-117-54	TRANSISTOR 2SA1175
Q1231	8-729-900-85	TRANSISTOR DTC144WS
Q1232	8-729-900-69	TRANSISTOR DTA144WS
Q1233	8-729-900-85	TRANSISTOR DTC144WS
Q1234	8-729-900-69	TRANSISTOR DTA144WS
Q1235	8-729-900-69	TRANSISTOR DTA144WS
Q1236	8-729-900-85	TRANSISTOR DTC144WS
Q1237	8-729-900-69	TRANSISTOR DTA144WS
Q1238	8-729-900-85	TRANSISTOR DTC144WS
Q1239	8-729-900-69	TRANSISTOR DTA144WS
R011	1-247-775-00	CARBON 4.7 5% 1/6W
R012	1-249-433-11	CARBON 22K 5% 1/6W
R013	1-215-476-00	METAL 200K 1% 1/6W
R101	1-247-891-00	CARBON 330K 5% 1/6W
R102	1-247-831-00	CARBON 1K 5% 1/6W
R103	1-247-873-00	CARBON 56K 5% 1/6W
R104	1-247-831-00	CARBON 1K 5% 1/6W
R105	1-249-437-11	CARBON 47K 5% 1/6W
R106	1-247-901-00	CARBON 820K 5% 1/6W
R111	1-247-831-00	CARBON 1K 5% 1/6W
R115	1-247-891-00	CARBON 330K 5% 1/6W
R116	1-247-843-00	CARBON 3.3K 5% 1/6W


The components identified by shading and mark  are critical for safety. Replace only with part number specified.

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R117	1-247-831-00	CARBON	1K	5%	1/6W
R151	1-247-891-00	CARBON	330K	5%	1/6W
R152	1-247-831-00	CARBON	1K	5%	1/6W
R153	1-247-873-00	CARBON	56K	5%	1/6W
R154	1-247-831-00	CARBON	1K	5%	1/6W
R155	1-249-437-11	CARBON	47K	5%	1/6W
R156	1-247-901-00	CARBON	820K	5%	1/6W
R161	1-247-831-00	CARBON	1K	5%	1/6W
R165	1-247-891-00	CARBON	330K	5%	1/6W
R166	1-247-843-00	CARBON	3.3K	5%	1/6W
R167	1-247-831-00	CARBON	1K	5%	1/6W
R202	1-247-831-00	CARBON	1K	5%	1/6W
R203	1-247-831-00	CARBON	1K	5%	1/6W
R204	1-247-853-00	CARBON	8.2K	5%	1/6W
R205	1-247-831-00	CARBON	1K	5%	1/6W
R206	1-247-849-00	CARBON	5.6K	5%	1/6W
R207	1-247-891-00	CARBON	330K	5%	1/6W
R208	1-247-891-00	CARBON	330K	5%	1/6W
R209	1-247-891-00	CARBON	330K	5%	1/6W
R210	1-249-434-11	CARBON	27K	5%	1/6W
R211	1-247-849-00	CARBON	5.6K	5%	1/6W
R212	1-247-873-00	CARBON	56K	5%	1/6W
R214	1-249-425-11	CARBON	4.7K	5%	1/6W
R215	1-249-425-11	CARBON	4.7K	5%	1/6W
R218	1-249-441-11	CARBON	100K	5%	1/6W
R231	1-247-903-00	CARBON	1M	5%	1/6W
R252	1-247-831-00	CARBON	1K	5%	1/6W
R253	1-247-831-00	CARBON	1K	5%	1/6W
R254	1-247-853-00	CARBON	8.2K	5%	1/6W
R255	1-247-831-00	CARBON	1K	5%	1/6W
R256	1-247-849-00	CARBON	5.6K	5%	1/6W
R257	1-247-891-00	CARBON	330K	5%	1/6W
R258	1-247-891-00	CARBON	330K	5%	1/6W
R259	1-247-891-00	CARBON	330K	5%	1/6W
R260	1-249-434-11	CARBON	27K	5%	1/6W
R261	1-247-849-00	CARBON	5.6K	5%	1/6W
R262	1-247-873-00	CARBON	56K	5%	1/6W
R264	1-249-425-11	CARBON	4.7K	5%	1/6W
R265	1-249-425-11	CARBON	4.7K	5%	1/6W
R268	1-249-441-11	CARBON	100K	5%	1/6W
R281	1-247-903-00	CARBON	1M	5%	1/6W
R305	1-247-843-00	CARBON	3.3K	5%	1/6W
R306	1-249-433-11	CARBON	22K	5%	1/6W
R307	1-247-831-00	CARBON	1K	5%	1/6W
R312	1-249-425-11	CARBON	4.7K	5%	1/6W
R313	1-249-429-11	CARBON	10K	5%	1/6W
R315	1-249-429-11	CARBON	10K	5%	1/6W
R316	1-249-429-11	CARBON	10K	5%	1/6W
R321	1-249-429-11	CARBON	10K	5%	1/6W
R322	1-249-429-11	CARBON	10K	5%	1/6W
R323	1-249-429-11	CARBON	10K	5%	1/6W
R331	1-249-441-11	CARBON	100K	5%	1/6W
R332	1-247-903-00	CARBON	1M	5%	1/6W
R333	1-247-843-00	CARBON	3.3K	5%	1/6W
R335	1-249-441-11	CARBON	100K	5%	1/6W
R336	1-247-831-00	CARBON	1K	5%	1/6W
R340	1-247-843-00	CARBON	3.3K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R341	1-247-843-00	CARBON	3.3K	5%	1/6W
R342	1-247-843-00	CARBON	3.3K	5%	1/6W
R343	1-247-843-00	CARBON	3.3K	5%	1/6W
R345	1-249-429-11	CARBON	10K	5%	1/6W
R346	1-249-429-11	CARBON	10K	5%	1/6W
R347	1-249-429-11	CARBON	10K	5%	1/6W
R348	1-249-429-11	CARBON	10K	5%	1/6W
R350	1-249-441-11	CARBON	100K	5%	1/6W
R351	1-249-429-11	CARBON	10K	5%	1/6W
R352	1-249-429-11	CARBON	10K	5%	1/6W
R353	1-249-429-11	CARBON	10K	5%	1/6W
R354	1-249-429-11	CARBON	10K	5%	1/6W
R355	1-249-429-11	CARBON	10K	5%	1/6W
R356	1-249-441-11	CARBON	100K	5%	1/6W
R357	1-247-891-00	CARBON	330K	5%	1/6W
R358	1-249-441-11	CARBON	100K	5%	1/6W
R361	1-249-429-11	CARBON	10K	5%	1/6W
R362	1-249-429-11	CARBON	10K	5%	1/6W
R363	1-249-429-11	CARBON	10K	5%	1/6W
R371	1-249-429-11	CARBON	10K	5%	1/6W
R372	1-249-429-11	CARBON	10K	5%	1/6W
R373	1-249-429-11	CARBON	10K	5%	1/6W
R380	1-249-429-11	CARBON	10K	5%	1/6W
R381	1-249-425-11	CARBON	4.7K	5%	1/6W
R382	1-247-873-00	CARBON	56K	5%	1/6W
R385	1-249-429-11	CARBON	10K	5%	1/6W
R386	1-249-425-11	CARBON	4.7K	5%	1/6W
R391	1-249-414-11	CARBON	560	5%	1/6W
R392	1-249-414-11	CARBON	560	5%	1/6W
R394	1-247-831-00	CARBON	1K	5%	1/6W
R395	1-249-429-11	CARBON	10K	5%	1/6W
R396	1-249-429-11	CARBON	10K	5%	1/6W
R397	1-249-429-11	CARBON	10K	5%	1/6W
R398	1-249-429-11	CARBON	10K	5%	1/6W
R399	1-249-429-11	CARBON	10K	5%	1/6W
R411	1-249-425-11	CARBON	4.7K	5%	1/6W
R412	1-249-437-11	CARBON	47K	5%	1/6W
R413	1-249-425-11	CARBON	4.7K	5%	1/6W
R421	1-249-425-11	CARBON	4.7K	5%	1/6W
R422	1-249-437-11	CARBON	47K	5%	1/6W
R423	1-249-425-11	CARBON	4.7K	5%	1/6W
R461	1-249-429-11	CARBON	10K	5%	1/6W
R491	1-247-823-00	CARBON	470	5%	1/6W
R501	1-249-429-11	CARBON	10K	5%	1/6W
R502	1-249-414-11	CARBON	560	5%	1/6W
R503	1-249-432-11	CARBON	18K	5%	1/6W
R504	1-249-440-11	CARBON	82K	5%	1/6W
R505	1-249-425-11	CARBON	4.7K	5%	1/6W
R506	1-247-831-00	CARBON	1K	5%	1/6W
R601	1-247-873-00	CARBON	56K	5%	1/6W
R602	1-249-421-11	CARBON	2.2K	5%	1/6W
R603	1-249-421-11	CARBON	2.2K	5%	1/6W
R604	1-247-873-00	CARBON	56K	5%	1/6W
R605	1-247-717-11	CARBON	2.2K	5%	1/4W
R606	1-247-717-11	CARBON	2.2K	5%	1/4W
R607	1-217-151-00	METAL PLATE	0.22	10%	2W
R608	1-249-414-11	CARBON	560	5%	1/6W

The components identified by shading and mark  are critical for safety. Replace only with part number specified.

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R609	1-249-414-11	CARBON	560	5%	1/6W
R611	△.1-247-192-00	CARBON	10	5%	1/2W F
R631	△.1-217-399-00	FUSIBLE	100	5%	1/4W F
R632	△.1-247-240-00	CARBON	1K	5%	1/2W F
R633	△.1-247-240-00	CARBON	1K	5%	1/2W F
R634	△.1-212-883-00	FUSIBLE	120	5%	1/4W F
R635	△.1-217-399-00	FUSIBLE	100	5%	1/4W F
R641	1-247-849-00	CARBON	5.6K	5%	1/6W
R651	1-247-873-00	CARBON	56K	5%	1/6W
R652	1-249-421-11	CARBON	2.2K	5%	1/6W
R653	1-249-421-11	CARBON	2.2K	5%	1/6W
R654	1-247-873-00	CARBON	56K	5%	1/6W
R655	△.1-247-717-11	CARBON	2.2K	5%	1/4W
R656	△.1-247-717-11	CARBON	2.2K	5%	1/4W
R657	△.1-217-151-00	METAL PLATE	0.22	10%	2W
R658	1-249-414-11	CARBON	560	5%	1/6W
R659	1-249-414-11	CARBON	560	5%	1/6W
R661	△.1-247-192-00	CARBON	10	5%	1/2W F
R671	1-249-433-11	CARBON	22K	5%	1/6W
R672	1-249-429-11	CARBON	10K	5%	1/6W
R673	1-249-433-11	CARBON	22K	5%	1/6W
R674	1-249-433-11	CARBON	22K	5%	1/6W
R675	1-247-881-00	CARBON	120K	5%	1/6W
R676	1-247-881-00	CARBON	120K	5%	1/6W
R677	1-249-441-11	CARBON	100K	5%	1/6W
R678	△.1-247-220-00	CARBON	150	5%	1/2W F
R679	1-249-429-11	CARBON	10K	5%	1/6W
R680	1-247-873-00	CARBON	56K	5%	1/6W
R691	1-247-849-00	CARBON	5.6K	5%	1/6W
R701	1-249-414-11	CARBON	560	5%	1/6W
R702	1-249-425-11	CARBON	4.7K	5%	1/6W
R703	1-249-435-11	CARBON	33K	5%	1/6W
R704	1-247-833-00	CARBON	1.2K	5%	1/6W
R705	1-249-419-11	CARBON	1.5K	5%	1/6W
R711	1-249-425-11	CARBON	4.7K	5%	1/6W
R712	1-247-875-00	CARBON	68K	5%	1/6W
R716	1-247-813-00	CARBON	180	5%	1/6W
R721	1-249-425-11	CARBON	4.7K	5%	1/6W
R722	1-247-875-00	CARBON	68K	5%	1/6W
R726	1-247-813-00	CARBON	180	5%	1/6W
R731	1-249-425-11	CARBON	4.7K	5%	1/6W
R732	1-247-875-00	CARBON	68K	5%	1/6W
R736	1-247-813-00	CARBON	180	5%	1/6W
R741	1-249-425-11	CARBON	4.7K	5%	1/6W
R742	1-247-875-00	CARBON	68K	5%	1/6W
R746	1-247-813-00	CARBON	180	5%	1/6W
R751	1-249-425-11	CARBON	4.7K	5%	1/6W
R752	1-247-875-00	CARBON	68K	5%	1/6W
R756	1-247-813-00	CARBON	180	5%	1/6W
R761	1-249-425-11	CARBON	4.7K	5%	1/6W
R762	1-247-875-00	CARBON	68K	5%	1/6W
R766	1-247-813-00	CARBON	180	5%	1/6W
R771	1-249-425-11	CARBON	4.7K	5%	1/6W
R772	1-247-875-00	CARBON	68K	5%	1/6W
R776	1-247-813-00	CARBON	180	5%	1/6W
R781	1-247-819-00	CARBON	330	5%	1/6W
R782	1-247-819-00	CARBON	330	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R783	1-247-819-00	CARBON	330	5%	1/6W
R784	1-247-819-00	CARBON	330	5%	1/6W
R785	1-247-819-00	CARBON	330	5%	1/6W
R786	1-247-819-00	CARBON	330	5%	1/6W
R787	1-247-831-00	CARBON	1K	5%	1/6W
R791	1-247-719-11	CARBON	3.3K	5%	1/4W
R792	1-247-719-11	CARBON	3.3K	5%	1/4W
R793	1-249-414-11	CARBON	560	5%	1/6W
R796	1-247-831-00	CARBON	1K	5%	1/6W
R797	1-249-429-11	CARBON	10K	5%	1/6W
R798	1-249-429-11	CARBON	10K	5%	1/6W
R799	1-249-429-11	CARBON	10K	5%	1/6W
R801	△.1-247-711-11	CARBON	680	5%	1/4W F
R802	△.1-247-711-11	CARBON	680	5%	1/4W F
R903	△.1-217-422-00	FUSIBLE	1	5%	1/2W F
R904	1-247-849-00	CARBON	5.6K	5%	1/6W
R905	△.1-217-422-00	FUSIBLE	1	5%	1/2W F
R906	△.1-217-482-00	FUSIBLE	12	5%	1W F
R910	△.1-207-934-00	WIREWOUND	120	10%	5W F
R911	1-249-425-11	CARBON	4.7K	5%	1/6W
R912	1-249-429-11	CARBON	10K	5%	1/6W
R915	△.1-207-686-00	WIREWOUND	100	10%	5W F
R916	1-249-425-11	CARBON	4.7K	5%	1/6W
R917	1-249-429-11	CARBON	10K	5%	1/6W
R920	△.1-213-131-00	METAL OXIDE	100	5%	1W F
R921	1-249-421-11	CARBON	2.2K	5%	1/6W
R1101	1-247-895-00	CARBON	470K	5%	1/6W
R1102	1-247-887-00	CARBON	220K	5%	1/6W
R1103	1-249-425-11	CARBON	4.7K	5%	1/6W
R1104	1-247-815-00	CARBON	220	5%	1/6W
R1105	1-249-440-11	CARBON	82K	5%	1/6W
R1106	1-247-857-00	CARBON	12K	5%	1/6W
R1107	1-247-851-00	CARBON	6.8K	5%	1/6W
R1108	1-247-831-00	CARBON	1K	5%	1/6W
R1109	1-247-869-00	CARBON	39K	5%	1/6W
R1110	1-247-845-00	CARBON	3.9K	5%	1/6W
R1111	1-247-875-00	CARBON	68K	5%	1/6W
R1112	1-247-833-00	CARBON	1.2K	5%	1/6W
R1113	1-247-895-00	CARBON	470K	5%	1/6W
R1114	1-247-903-00	CARBON	1M	5%	1/6W
R1115	1-247-841-00	CARBON	2.7K	5%	1/6W
R1116	1-249-433-11	CARBON	22K	5%	1/6W
R1117	1-247-815-00	CARBON	220	5%	1/6W
R1118	1-247-851-00	CARBON	6.8K	5%	1/6W
R1119	1-249-421-11	CARBON	2.2K	5%	1/6W
R1121	1-247-831-00	CARBON	1K	5%	1/6W
R1125	1-247-819-00	CARBON	330	5%	1/6W
R1126	1-247-831-00	CARBON	1K	5%	1/6W
R1127	1-249-429-11	CARBON	10K	5%	1/6W
R1128	1-249-405-11	CARBON	100	5%	1/6W
R1129	1-249-435-11	CARBON	33K	5%	1/6W
R1131	1-249-435-11	CARBON	33K	5%	1/6W
R1132	1-247-813-00	CARBON	180	5%	1/6W
R1133	1-247-706-11	CARBON	330	5%	1/4W
R1134	1-249-433-11	CARBON	22K	5%	1/6W
R1135	1-247-815-00	CARBON	220	5%	1/6W
R1136	1-247-809-00	CARBON	120	5%	1/6W


The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R1137	1-247-903-00	CARBON	1M	5%	1/6W
R1138	1-247-831-00	CARBON	1K	5%	1/6W
R1148	1-249-441-11	CARBON	100K	5%	1/6W
R1149	1-249-405-11	CARBON	100	5%	1/6W
R1151	1-247-895-00	CARBON	470K	5%	1/6W
R1152	1-247-887-00	CARBON	220K	5%	1/6W
R1153	1-249-425-11	CARBON	4.7K	5%	1/6W
R1154	1-247-815-00	CARBON	220	5%	1/6W
R1155	1-249-440-11	CARBON	82K	5%	1/6W
R1156	1-247-857-00	CARBON	12K	5%	1/6W
R1157	1-247-851-00	CARBON	6.8K	5%	1/6W
R1158	1-247-831-00	CARBON	1K	5%	1/6W
R1159	1-247-869-00	CARBON	39K	5%	1/6W
R1160	1-247-845-00	CARBON	3.9K	5%	1/6W
R1161	1-247-875-00	CARBON	68K	5%	1/6W
R1162	1-247-833-00	CARBON	1.2K	5%	1/6W
R1163	1-247-895-00	CARBON	470K	5%	1/6W
R1164	1-247-903-00	CARBON	1M	5%	1/6W
R1165	1-247-841-00	CARBON	2.7K	5%	1/6W
R1166	1-249-433-11	CARBON	22K	5%	1/6W
R1167	1-247-815-00	CARBON	220	5%	1/6W
R1168	1-247-851-00	CARBON	6.8K	5%	1/6W
R1169	1-249-421-11	CARBON	2.2K	5%	1/6W
R1171	1-247-831-00	CARBON	1K	5%	1/6W
R1175	1-247-819-00	CARBON	330	5%	1/6W
R1176	1-247-831-00	CARBON	1K	5%	1/6W
R1177	1-249-429-11	CARBON	10K	5%	1/6W
R1178	1-249-405-11	CARBON	100	5%	1/6W
R1179	1-249-435-11	CARBON	33K	5%	1/6W
R1181	1-249-435-11	CARBON	33K	5%	1/6W
R1182	1-247-813-00	CARBON	180	5%	1/6W
R1183	1-247-706-11	CARBON	330	5%	1/4W
R1184	1-249-433-11	CARBON	22K	5%	1/6W
R1185	1-247-815-00	CARBON	220	5%	1/6W
R1186	1-247-809-00	CARBON	120	5%	1/6W
R1187	1-247-903-00	CARBON	1M	5%	1/6W
R1188	1-247-831-00	CARBON	1K	5%	1/6W
R1199	1-249-405-11	CARBON	100	5%	1/6W
R1231	1-247-833-00	CARBON	1.2K	5%	1/6W
R1232	1-247-815-00	CARBON	220	5%	1/6W
R1233	1-247-815-00	CARBON	220	5%	1/6W
R1235	1-249-433-11	CARBON	22K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R1236	1-249-433-11	CARBON	22K	5%	1/6W
R1237	1-249-433-11	CARBON	22K	5%	1/6W
R1238	1-249-429-11	CARBON	10K	5%	1/6W
R1239	1-249-433-11	CARBON	22K	5%	1/6W
R1241	1-247-831-00	CARBON	1K	5%	1/6W
R1245	1-247-831-00	CARBON	1K	5%	1/6W
R1246	1-247-831-00	CARBON	1K	5%	1/6W
R1247	1-247-831-00	CARBON	1K	5%	1/6W
R1501	1-247-688-11	(G-AEP)...CARBON	10	5%	1/4W
R1502	1-247-688-11	(G-AEP)...CARBON	10	5%	1/4W
RV401	1-230-813-31	RES, VAR, SLIDE 250K/250K (BALANCE), including D401			
RV402	1-237-243-31	RES, VAR, SLIDE 50K/50K (MIC LEVEL), including D402			
RV411	1-230-813-31	RES, VAR, SLIDE 250K/250K (63Hz), including D411			
RV412	1-230-813-31	RES, VAR, SLIDE 250K/250K (150Hz), including D412			
RV413	1-230-813-31	RES, VAR, SLIDE 250K/250K (400Hz), including D413			
RV414	1-230-813-31	RES, VAR, SLIDE 250K/250K (1kHz), including D414			
RV415	1-230-813-31	RES, VAR, SLIDE 250K/250K (3kHz), including D415			
RV416	1-230-813-31	RES, VAR, SLIDE 250K/250K (6kHz), including D416			
RV417	1-230-813-31	RES, VAR, SLIDE 250K/250K (14kHz), including D417			
RY601	1-515-503-00	RELAY			
SW701	1-554-303-21	SWITCH, KEY BOARD (VOLUME UP)			
SW702	1-554-303-21	SWITCH, KEY BOARD (VOLUME DOWN)			
SW703	1-554-303-21	SWITCH, KEY BOARD (MUTING-20dB)			
SW704	1-554-303-21	SWITCH, KEY BOARD (PHONO)			
SW705	1-554-303-21	SWITCH, KEY BOARD (TVNER)			
SW706	1-554-303-21	SWITCH, KEY BOARD (CD/AUX)			
SW707	1-554-303-21	SWITCH, KEY BOARD (TAPE)			
ASW1001	1-553-318-51	SWITCH, PUSH (AC POWER)(1 KEY), POWER			
ASW1002	1-526-576-51	(EA3,E)...SELECTOR, POWER VOLTAGE			
SW1201	1-554-419-00	SWITCH, PUSH (1 KEY)(AMFB)			
T1001A	1-448-133-11	(EA3,E)...TRANSFORMER, POWER			
T1001A	1-448-134-11	(G-AEP,AEP,UK,AED)...TRANSFORMER, POWER			

 
The components identified by shading and mark  are critical for safety. Replace only with part number specified.

STEREO CASSETTE DECK (TC-177R)

Tape Transport Mechanism Type	TCM-150R10
-------------------------------	------------


SERVICING NOTE

- Voltage measurement should be made under the following condition.

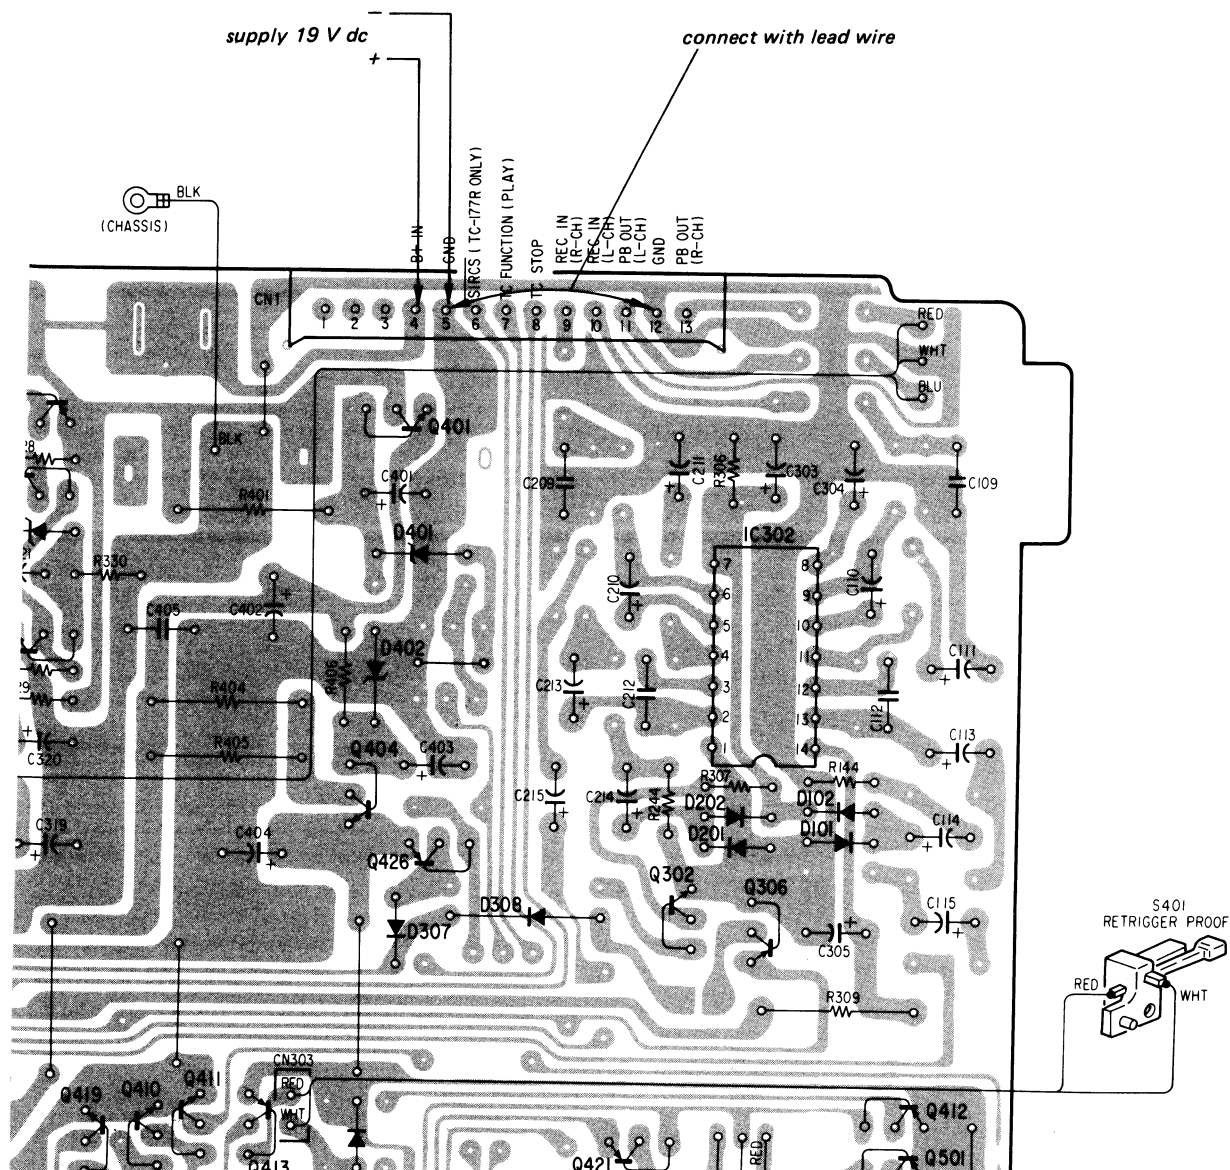

• **Repairing printed resistor**


Cut both sides of the resistor and solder the carbon resistor having same value in place of printed one on the conductor side.

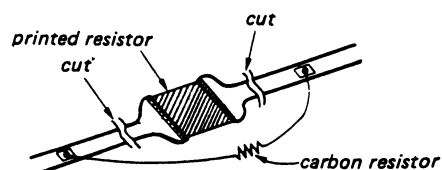

SECTION 1 BLOCK DIAGRAM

FH-15OR
TC-177R

FH-15OR
TC-177R




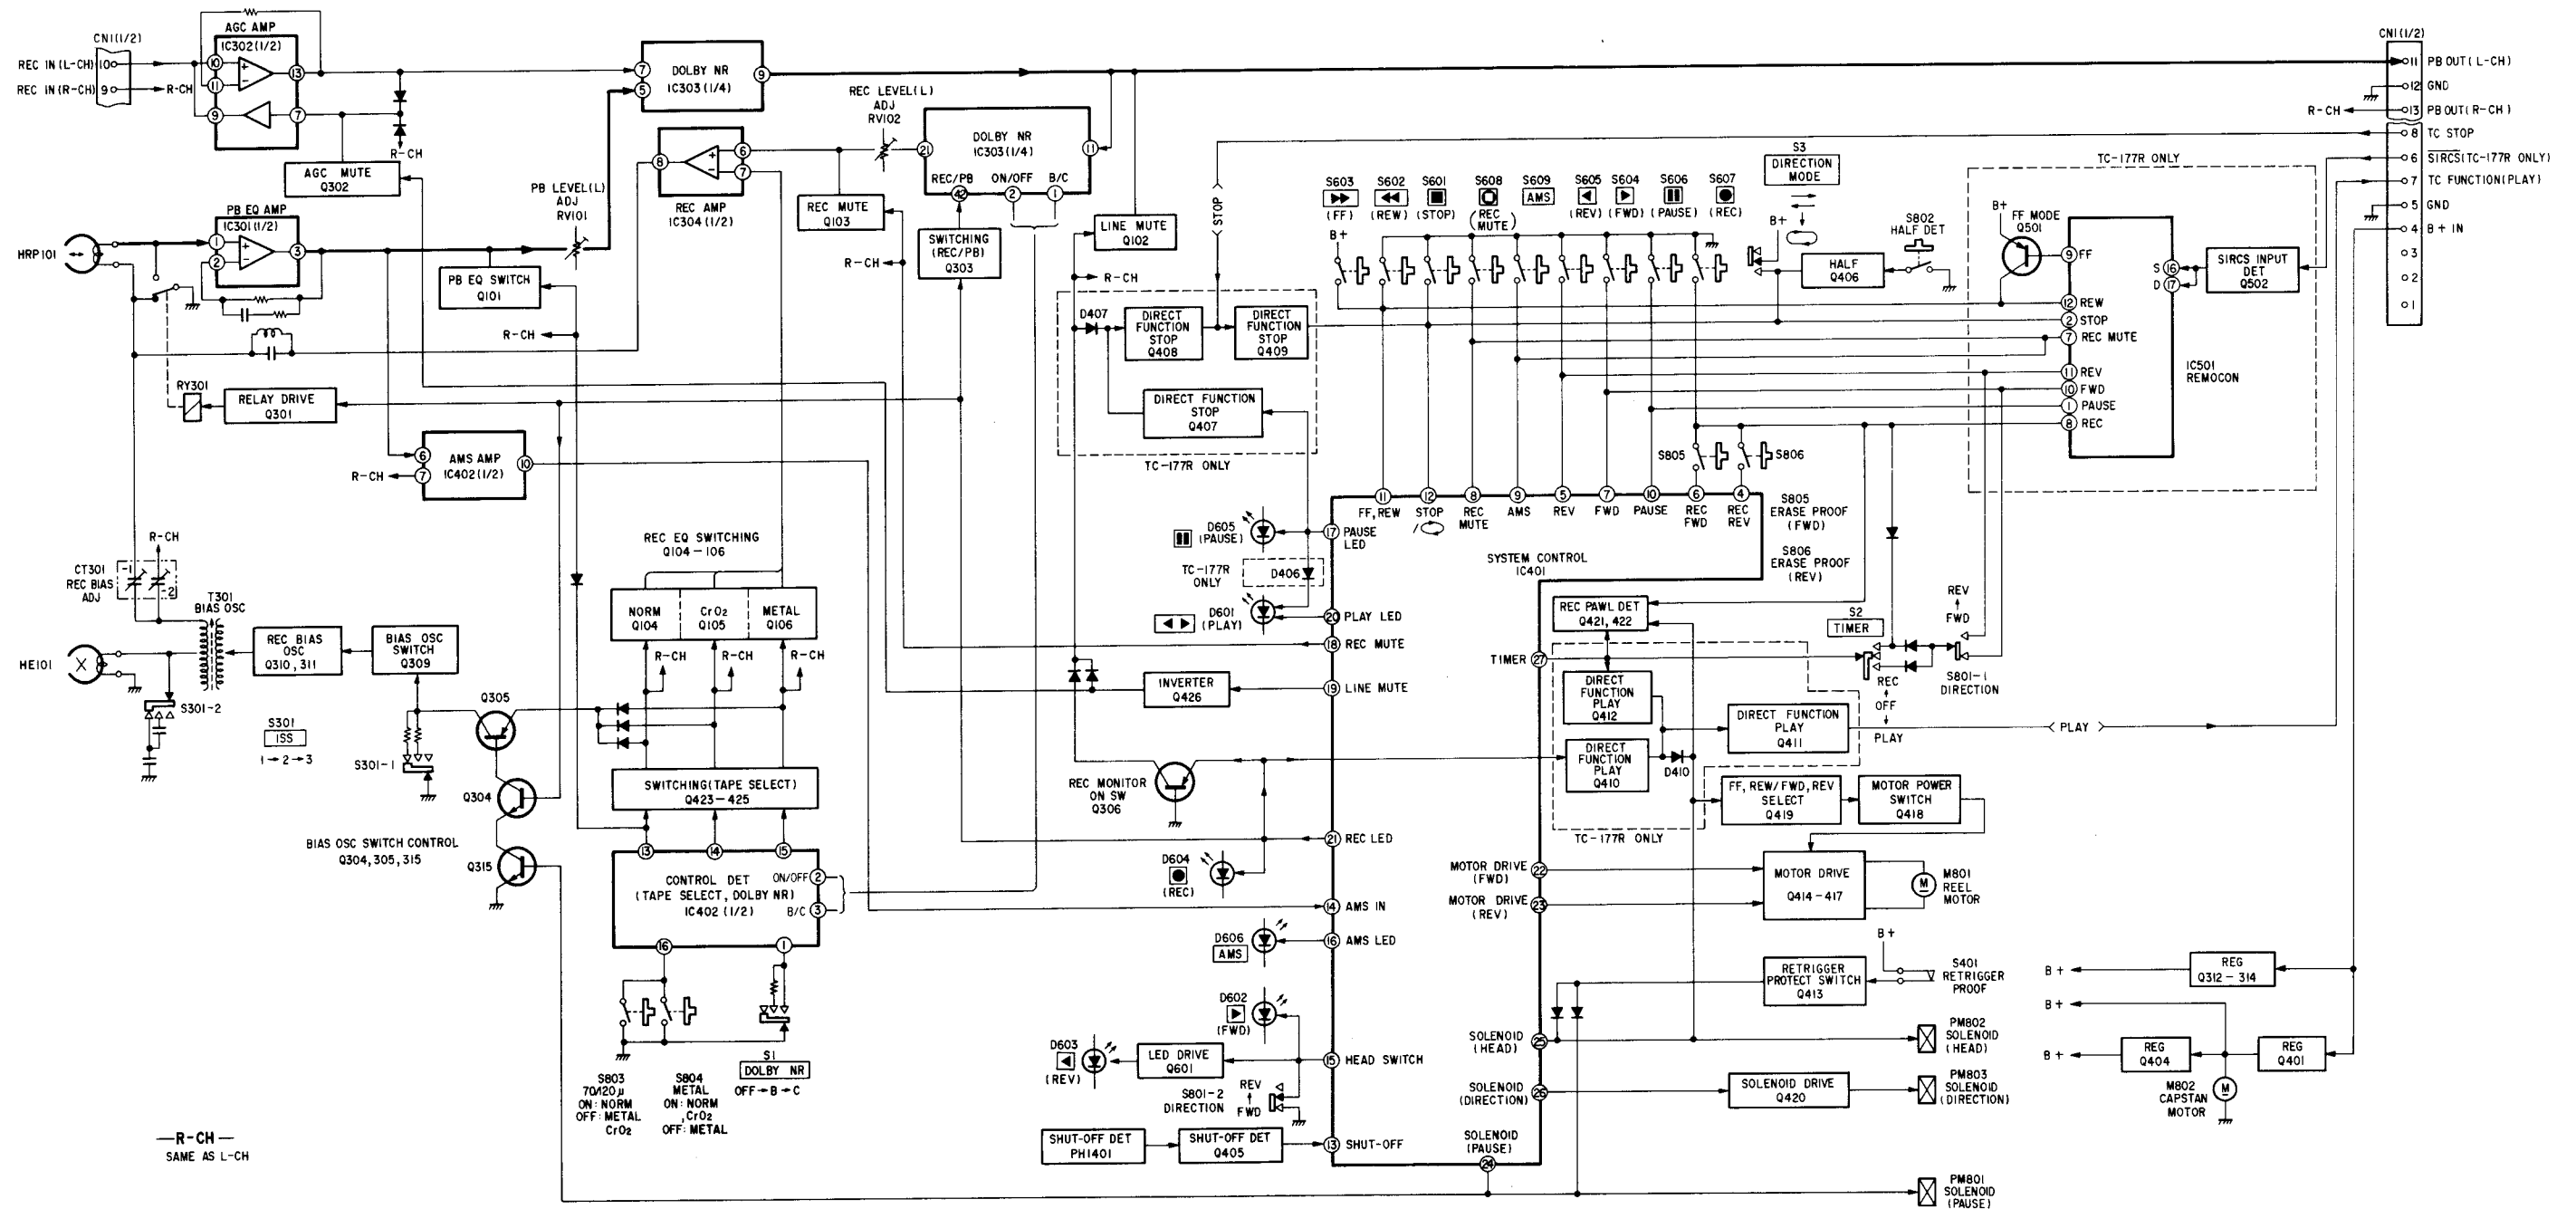


SECTION 2 DISASSEMBLY


Note: Follow the disassembly procedure in the numerical order given.

CASE REMOVAL


Remove case by taking out four screws securing case.

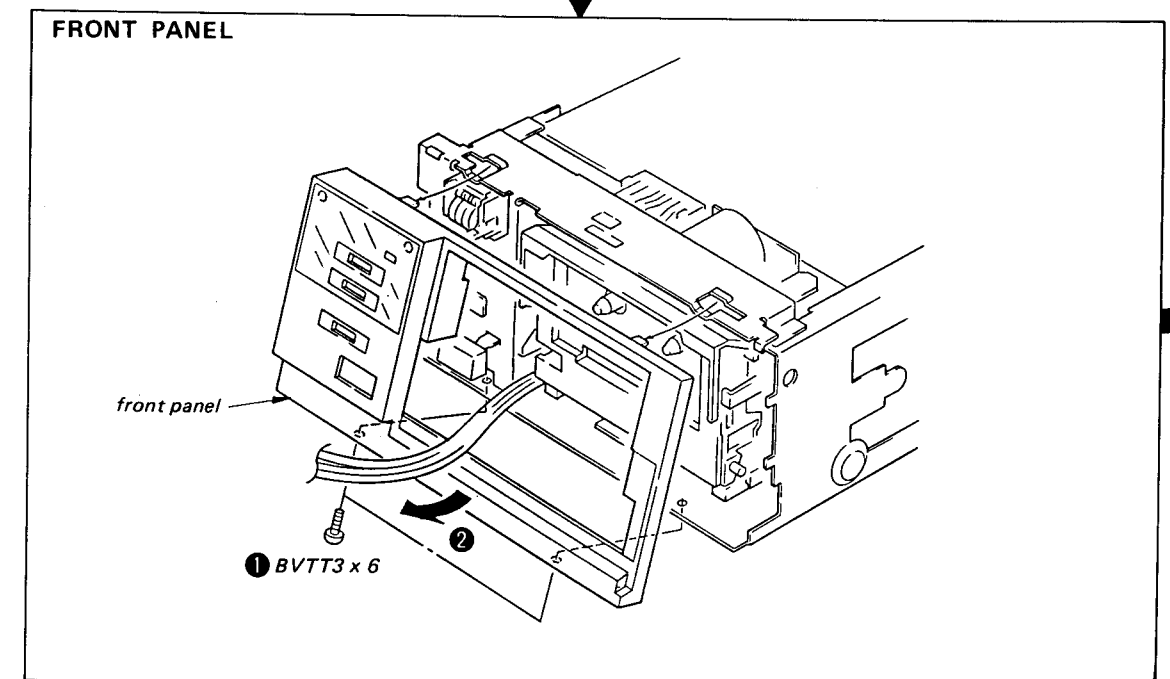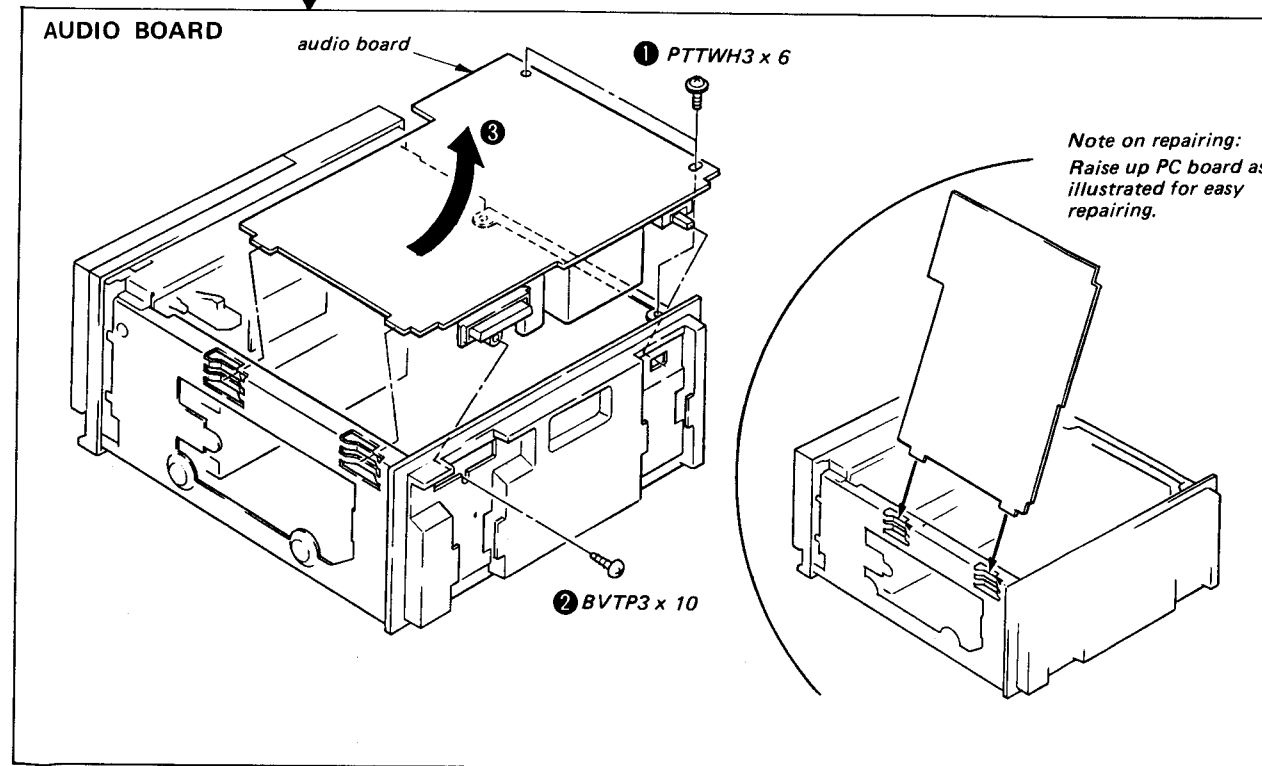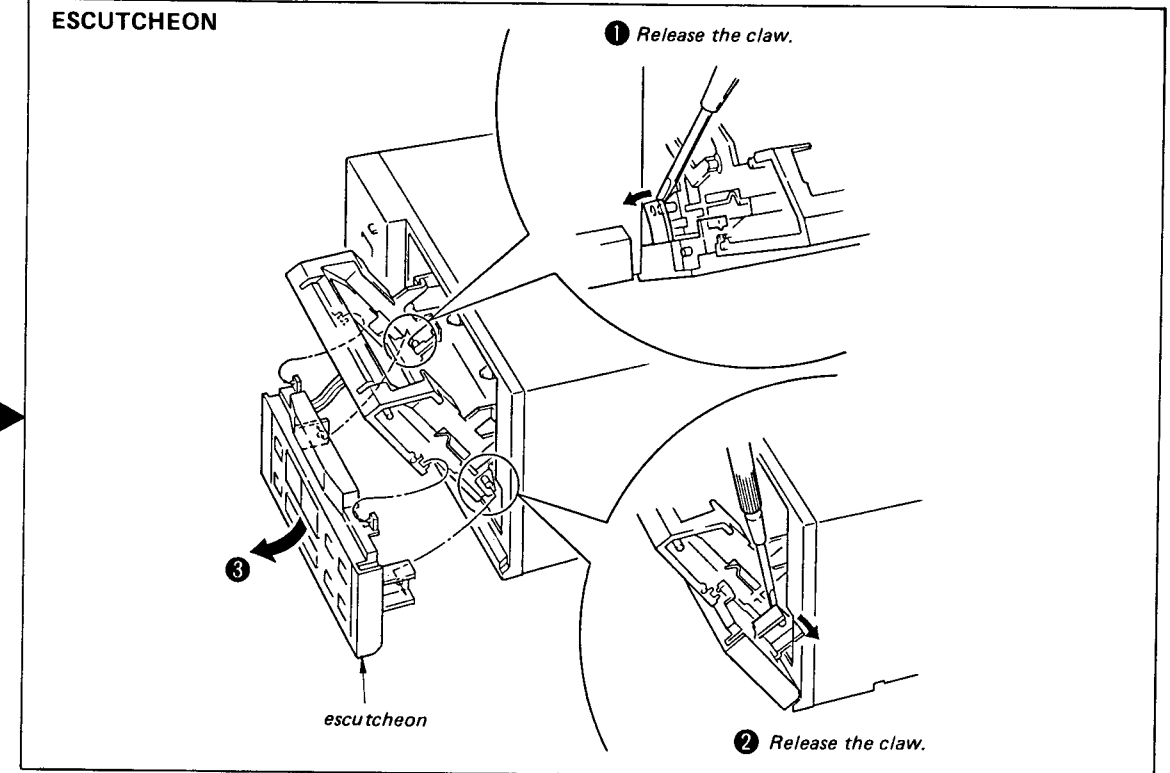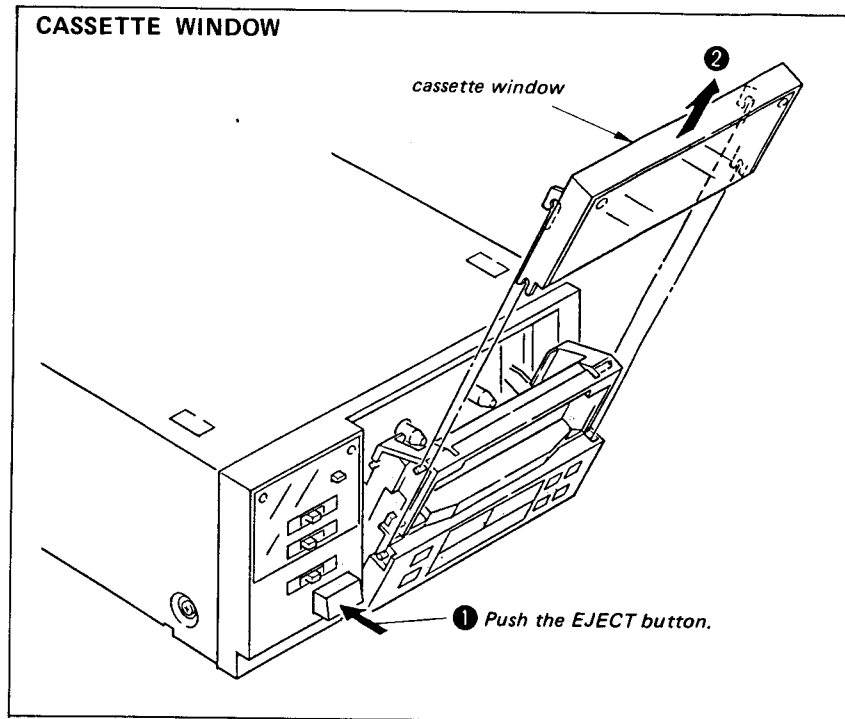


ORNAMENTAL PLATE

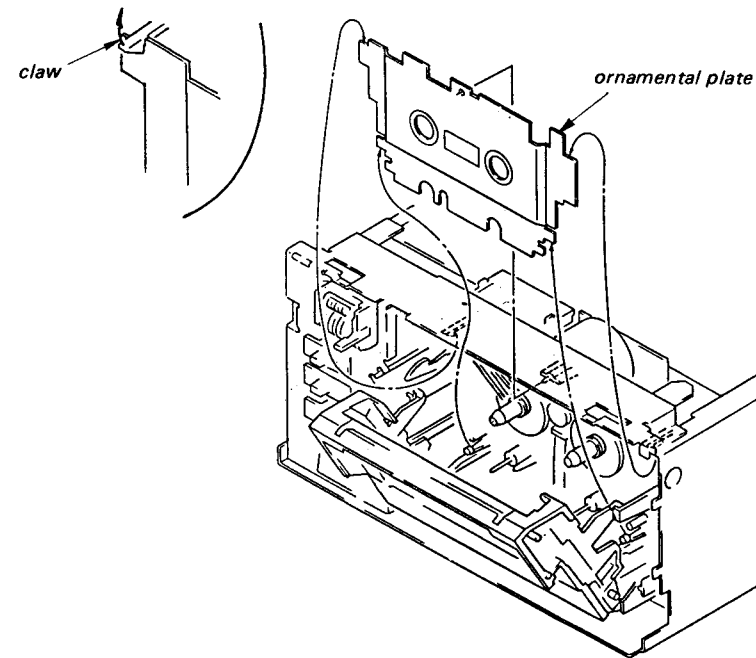


CAPSTAN MOTOR AND CAPSTAN BELT


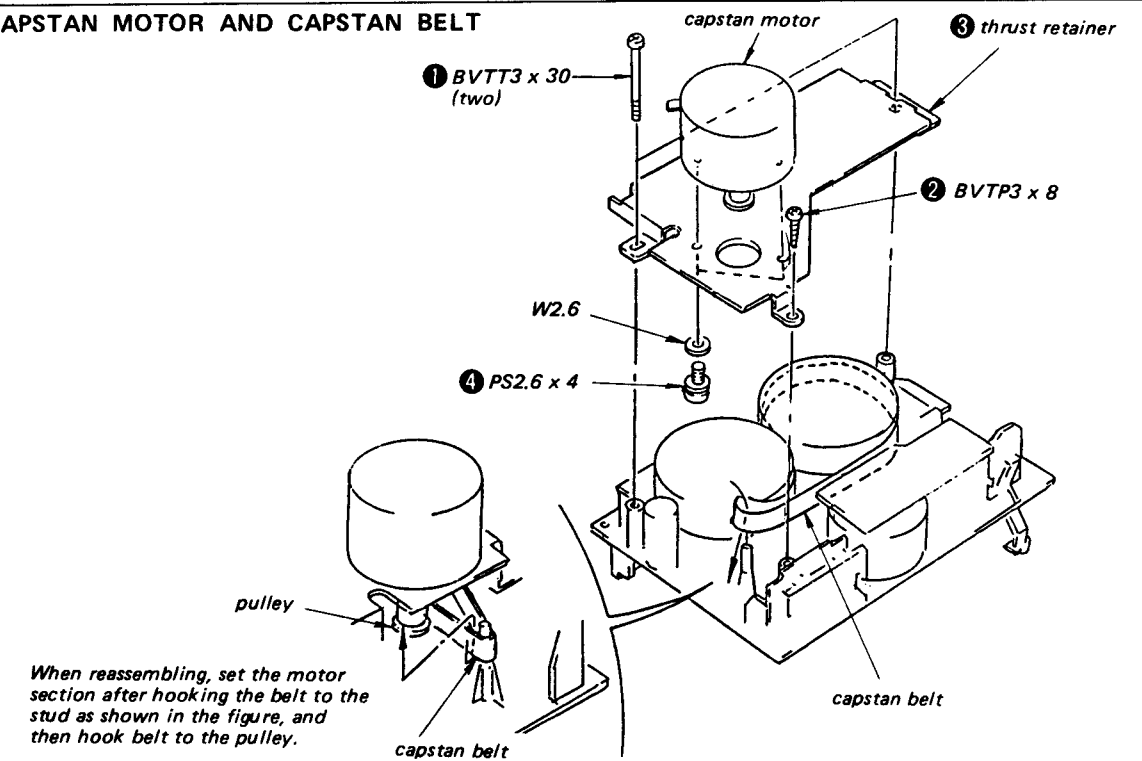


MECHANISM BLOCK AND COUNTER BELT

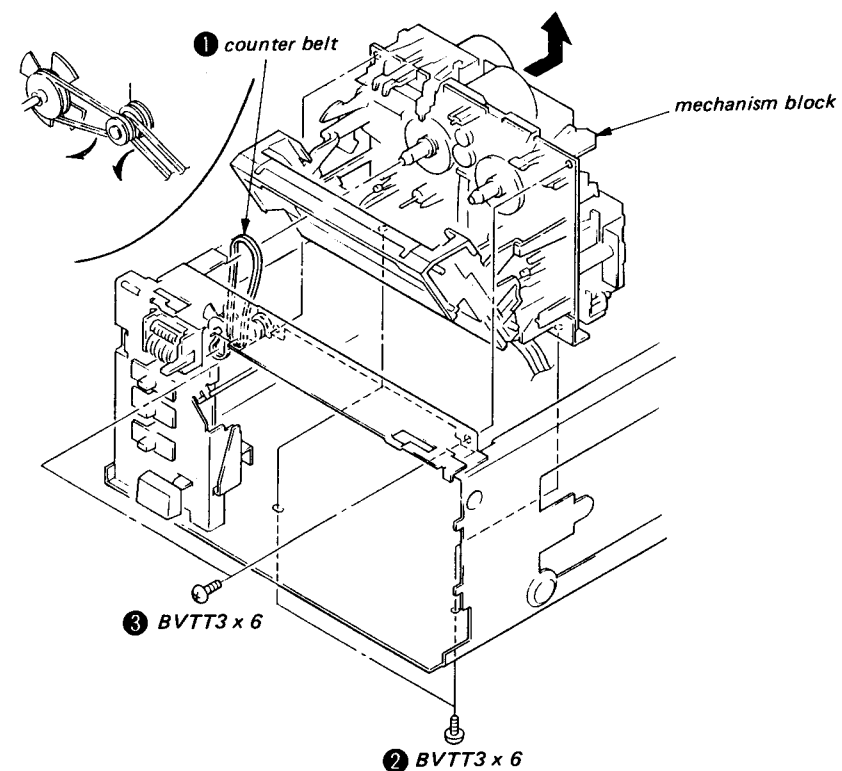

CASSETTE HOLDER

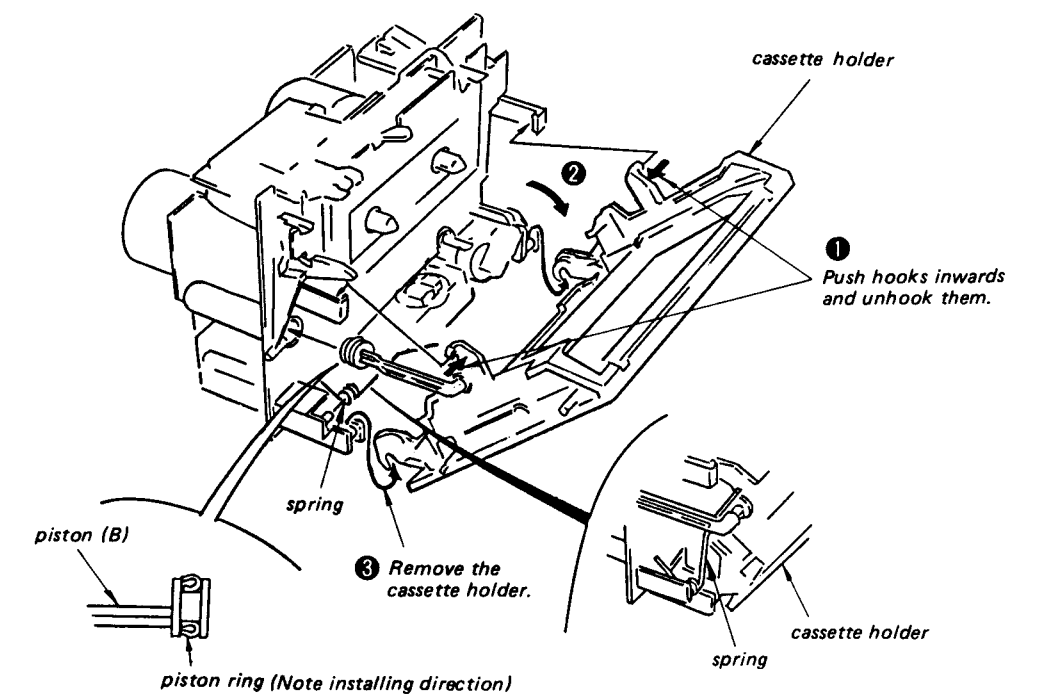

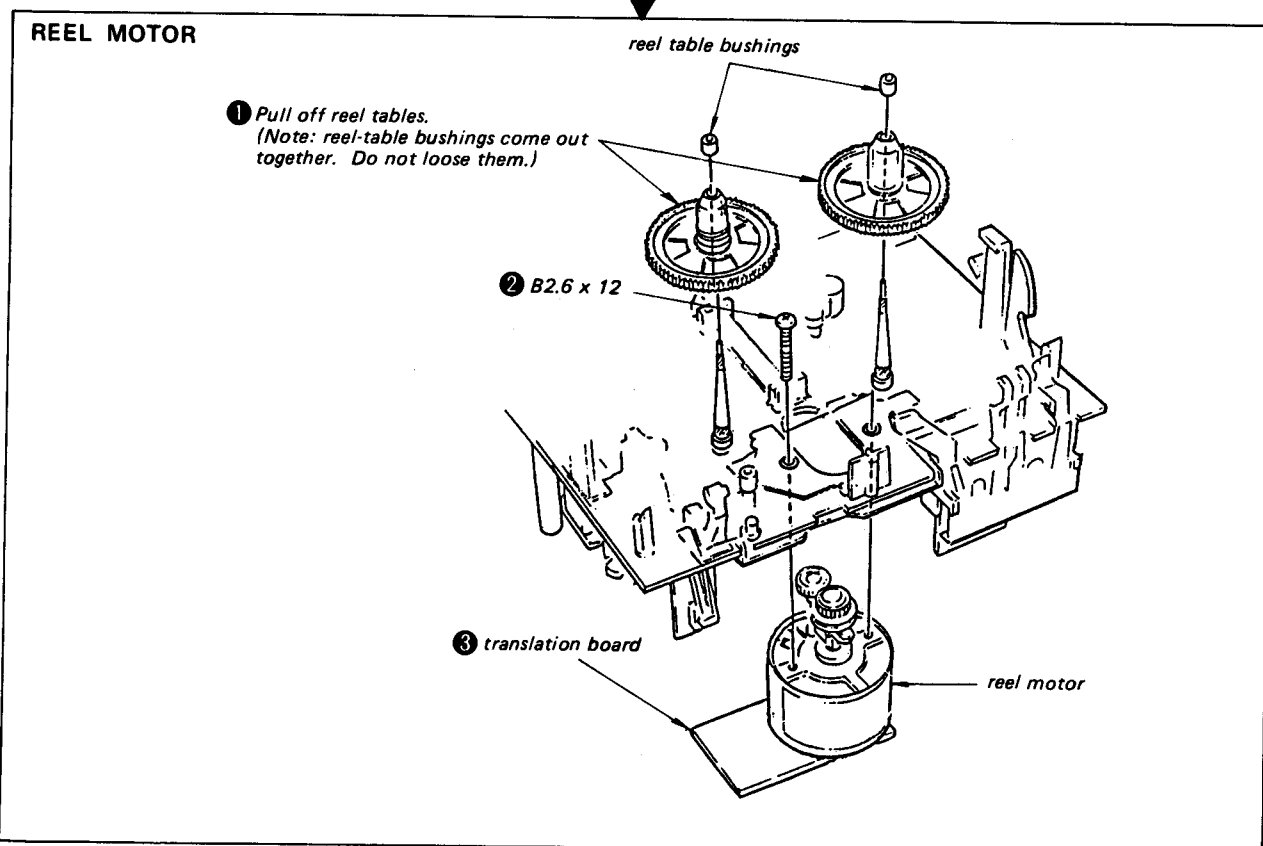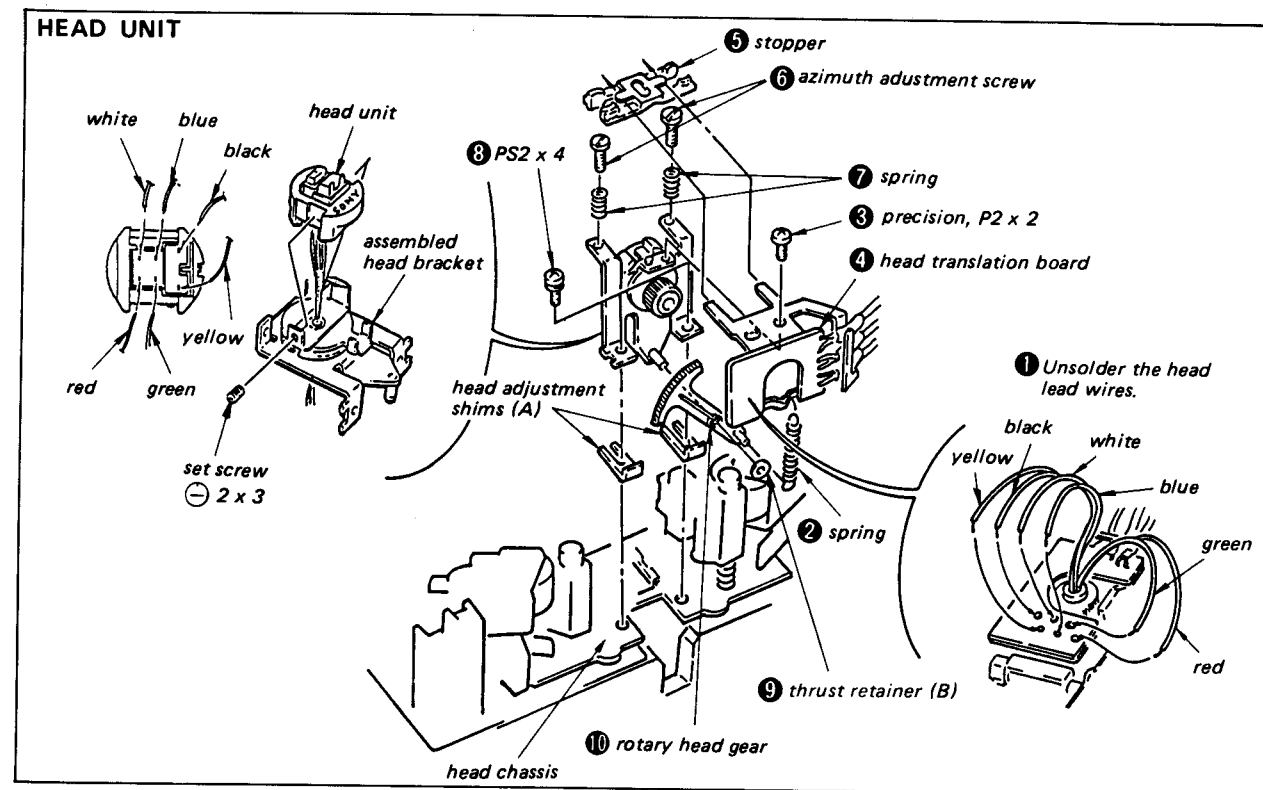

MEMO

SECTION 3 ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENTS

PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab:
record/playback/erase head rubber belts
capstan
pinch roller
2. Demagnetize the head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement



Torque	Torque meter	Meter reading
Forward	CQ-102C	28 – 60 g·cm (0.39 – 0.82 oz·inch)
Reverse	CQ-102RB	
Fast Forward and Rewind	CQ-201B	80 – 150 g·cm (1.1 – 2.07 oz·inch)
Forward Back Tension	CQ-102C	2.5 – 5.5 g·cm (0.03 – 0.07 oz·inch)
Reverse Back Tension	CQ-102RB	2.5 – 7 g·cm (0.03 – 0.09 oz·inch)

BACK TENSION ADJUSTMENT

– Forward and Reverse Playback Modes –

Forward: Torque Meter CQ-102C, Torque 2.5 – 5.5 g·cm
(0.03 – 0.07 oz·inch)


Reverse: Torque Meter CQ-102RB, Torque 2.5 – 7 g·cm
(0.03 – 0.09 oz·inch)

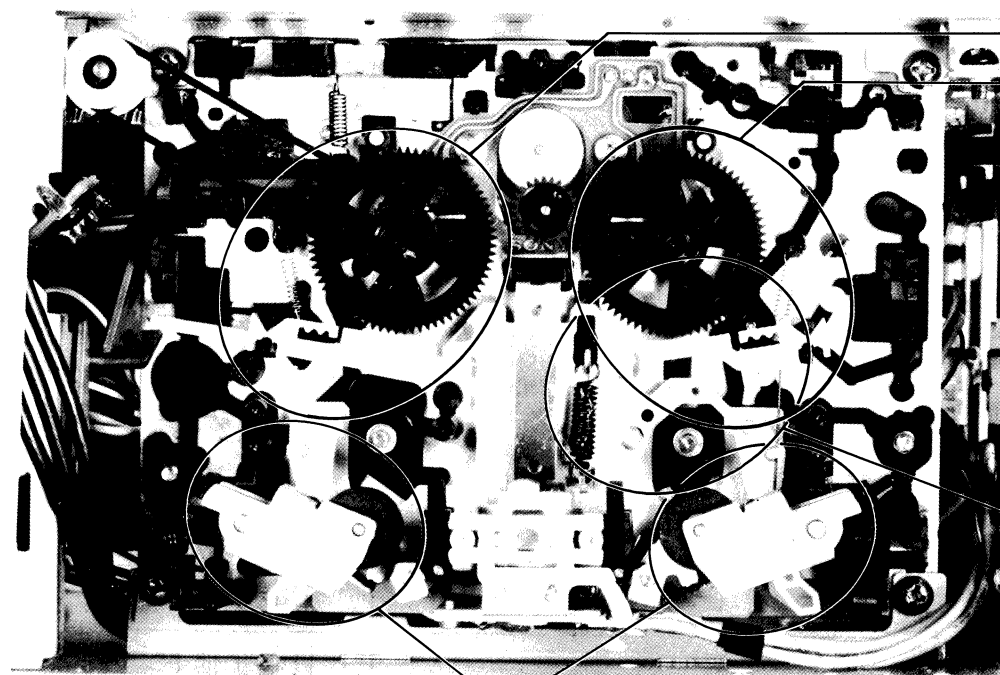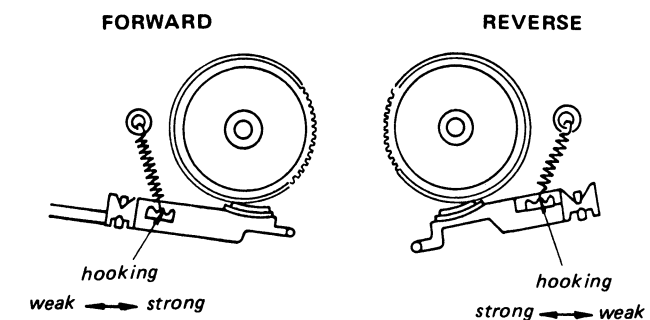

Pinch Roller Pressure Measurement


– Playback Mode –

2. Slowly return the pinch roller and read the spring scale just when the pinch roller starts rotating. (The capstan should first contacts here.)

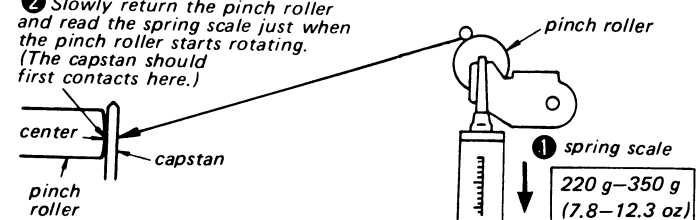


Head Position Adjustment in AMS mode


1. Prepare an adjustment cassette as shown below.

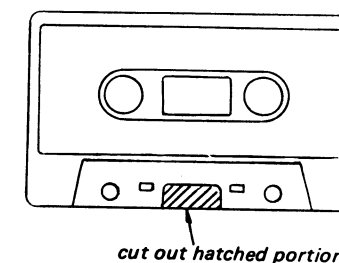

2. In AMS mode, confirm that the the distance between top of head and bottom of cassette is 2 mm ±0.1 mm (3/32 inch).

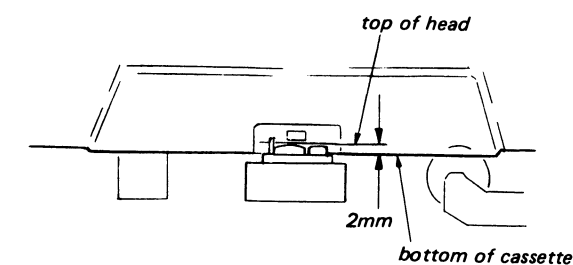

If it is not, insert a small screwdriver to the adjustment hole and adjust the head position by bending a head-base so that the distance between top of head and bottom of cassette is 2 mm ±0.1 mm.

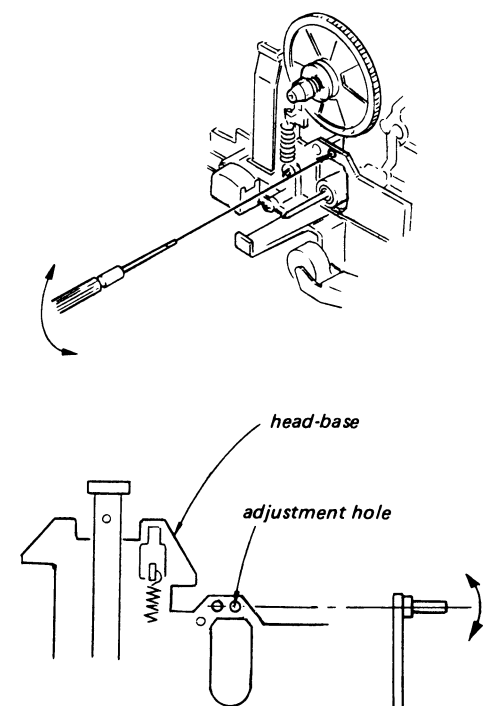

Precaution on Replacing

As the head center adjustment and the tape path adjustment are affected each other, do not perform them at the same time.

Note: When the record/playback/erase head is replaced, be sure to perform the preliminary adjustment first.



Head Center Adjustment

1. Insert a mirror tape cassette, CQ-009C or CQ-012C.
2. Place the unit in forward playback mode.
3. When the lower part of the tape is warped, loosen the head center adjustment screw. (Loosen the screw within one turn.)
4. Place the unit in reverse-playback mode.
5. When the upper part of the tape is warped, secure the adjustment screw. (Secure the screw within one turn.)
6. Repeat steps 2 to 5 several times until there is no warp both in forward and reverse mode.
7. If the warp is not disappeared, repeat steps 2 to 6 after adding or removing the head height adjustment shim (A).
8. After adjustment, lock the head center adjustment screw with locking compound.

Tape Path Adjustment

1. Clean the pinch roller and the record/playback/erase head with soft cloth moistened with alcohol.
2. Mode: playback
Refer to step 1 of the Record/playback Head Azimuth Adjustment on page TC-16 for the setup.
3. Adjust the FWD azimuth adjustment screw in the forward-playback mode and the REV azimuth adjustment screw in the reverse-playback mode so that the oscilloscope reads the maximum output and lissajous figure is in 30 angle reading on the oscilloscope across the LINE OUT.
4. Adjust the FWD tape-guide nut in the forward-playback mode and the REV tape-guide nut in the reverse-playback mode for an in-phase lissajous pattern.
The turning amount of the nuts should be within 3/4 turns.
5. Repeat steps 3 and 4 several times until no improvement is obtained.
6. Play a mirror tape cassette in the forward-playback mode.
7. Confirm there is no tape curl at the tape guide.

Note: After these adjustments, be sure to perform the Record/playback Head Azimuth Adjustment on page TC-16.

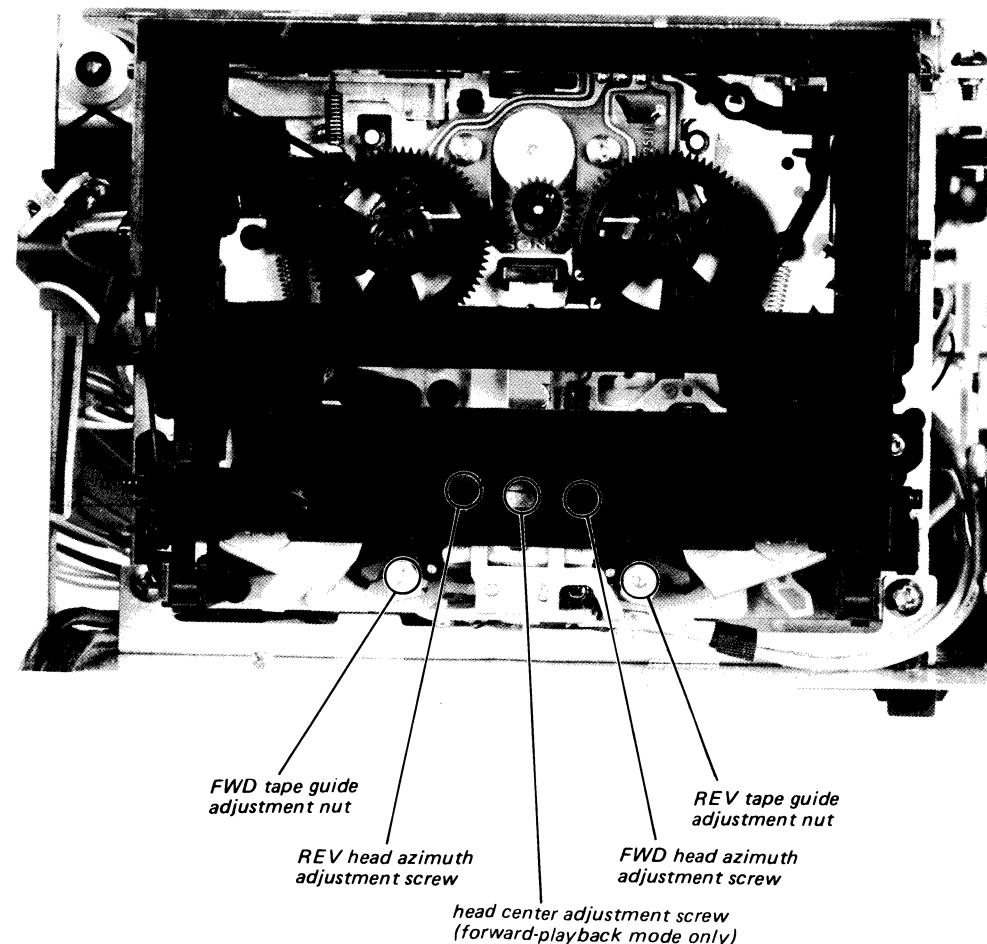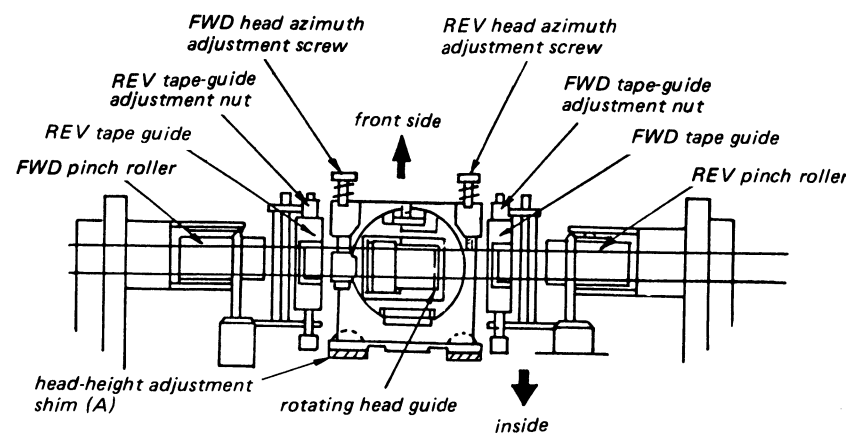


HEAD UNIT ADJUSTMENT WHEN REPLACED


Perform the following preliminary adjustments before proceeding to the Head Center and Tape Path Adjustments.

Preliminary Adjustment

1. Install head-mounting unit on the head-mounting base by threading head lead wires through the round hole in the head-mounting base. Also refer to page TC-9.
2. By adjusting both head-azimuth adjustment screws in both forward-playback and reverse-playback mode head positions, align the head-compartment edge line in parallel with the edge line of the head-mounting unit at the azimuth adjustment screws. (visual adjustment)

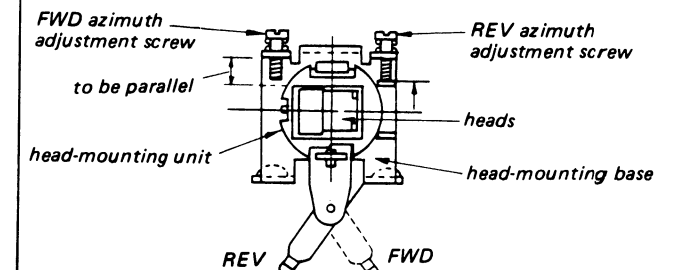

Be sure to orient the rotary-head gear as shown below.

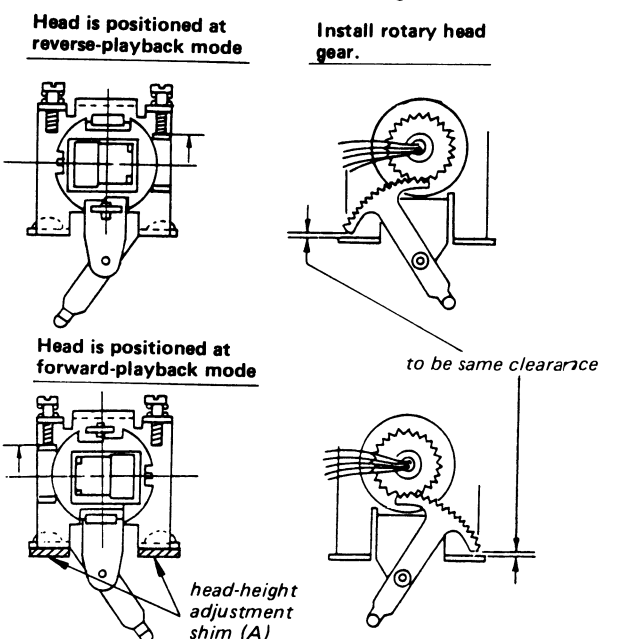

3. Reassemble the head assembly, head translation board, head-height adjustment shims (A), etc. in the reverse manner of disassembly on page TC-9.
4. Perform the Head-Center and Tape-Path Adjustments on pages TC-13 and TC-14.
5. Perform the Head-Azimuth Adjustment on page TC-16.


3-2. ELECTRICAL ADJUSTMENTS

Note: The adjustment should be performed in the order given in this service manual.
The adjustments should be performed for both L-CH and R-CH.

- Switches and controls should be set as follows unless otherwise specified.
DOLBY NR switch: OFF
TIMER switch: OFF
ISS switch: 2

- Standard Record:**
Deliver the standard input signal level to the input jack and control the attenuator to obtain the standard output signal level.

Record Mode — af osc

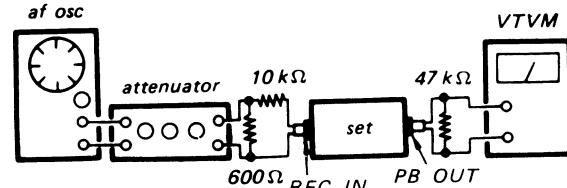

Standard Input Level


	REC IN
source impedance	10 kΩ
input level	0.44 V (−5 dB)

Standard Output Level

	PB OUT
load impedance	47 kΩ
output level	0.44 V (−5 dB)

Locations of REC IN and PB OUT

	CN1 terminal No.		
	L-CH	R-CH	GND
REC IN	10	9	12
PB OUT	11	13	12

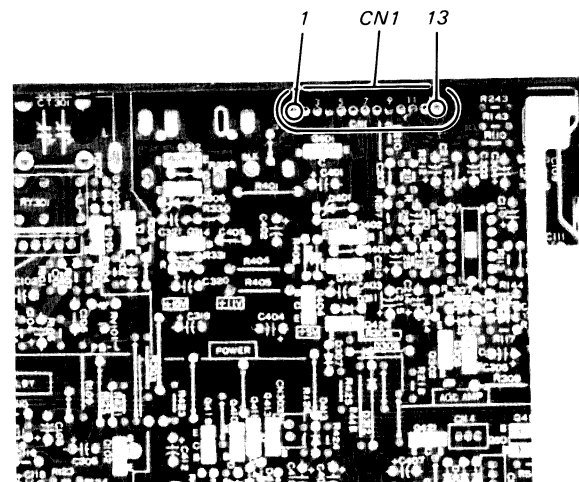


Tape Speed Adjustment

Procedure:

See the left for locations of REC IN and PB OUT.

Mode: forward-playback

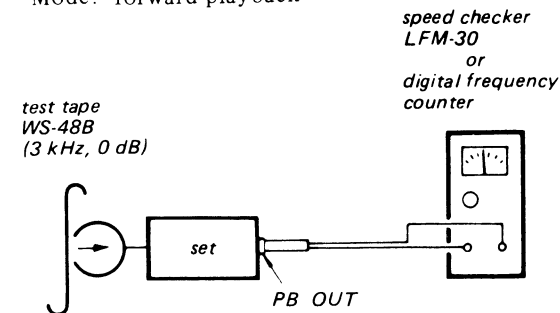


Specification:

Speed checker	Digital frequency counter
−1 ~ +1 %	2,970 Hz to 3,030 Hz

Frequency difference between the beginning and the end of the tape should be within 0.8% (25Hz).

Adjustment Location: Motor (M802)

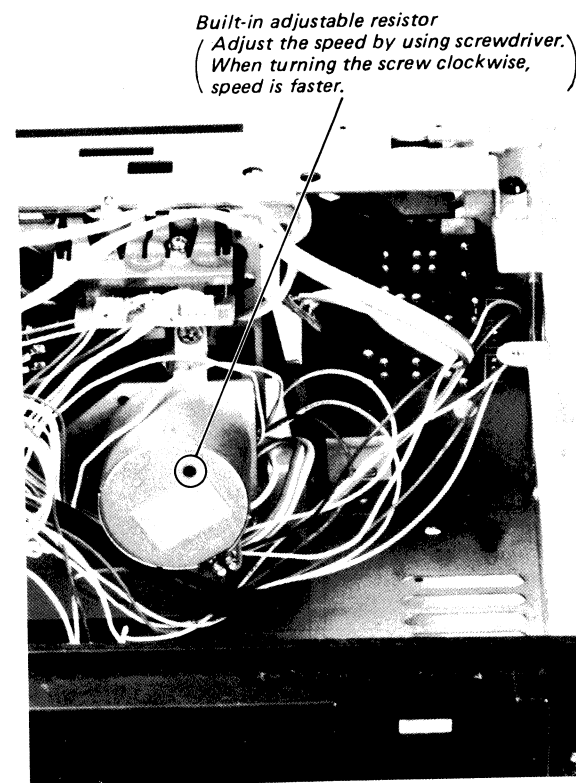


Record/playback Head Azimuth Adjustment


Procedure:

See page TC-15 for locations of REC IN and PB OUT.



1. Mode: forward-playback

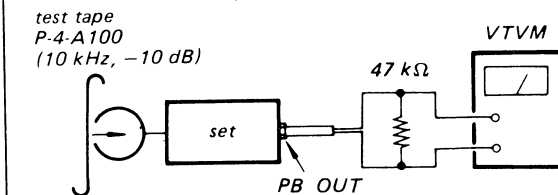

2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screws until both of output levels match together within 1 dB.

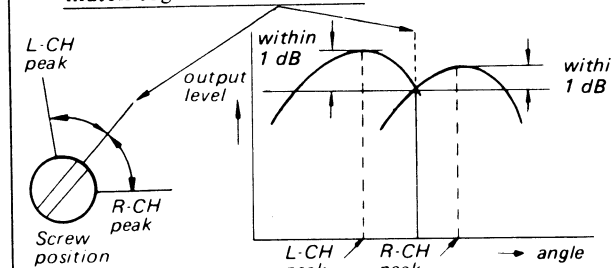


Phase Check

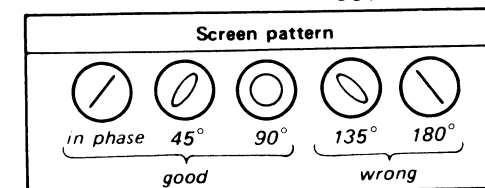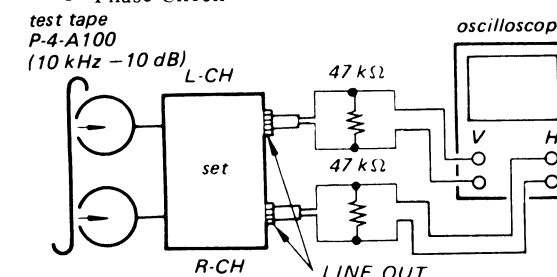

- Set in the reverse-playback mode and repeat the steps 1 – 2.
- After the adjustment, lock the screws with locking compound.

Adjustment Location:

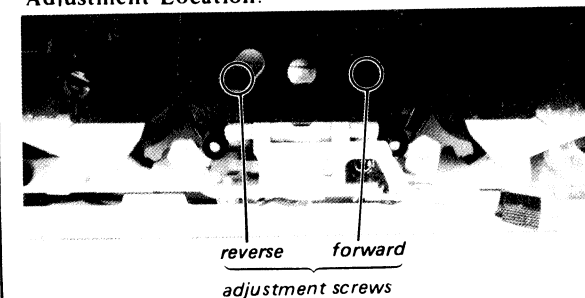


Playback Level Adjustment

Procedure:

See page TC-15 for locations of REC IN and PB OUT.

Mode: playback

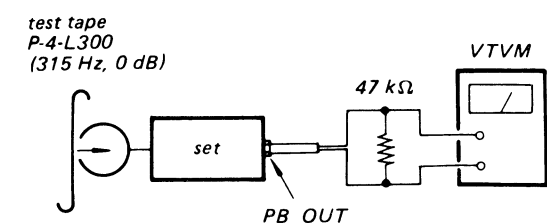

Adjust the RV101 (L-CH) and RV201 (R-CH) so that the specification is met.


Specification:

PB OUT level: 0.41 to 0.46 V
(−5.5 to −4.5 dB)

Level difference between channels:
less than 0.5 dB

Check that the PB OUT level does not change in playback mode while changing the mode from playback to stop several times.

Adjustment Location: audio board

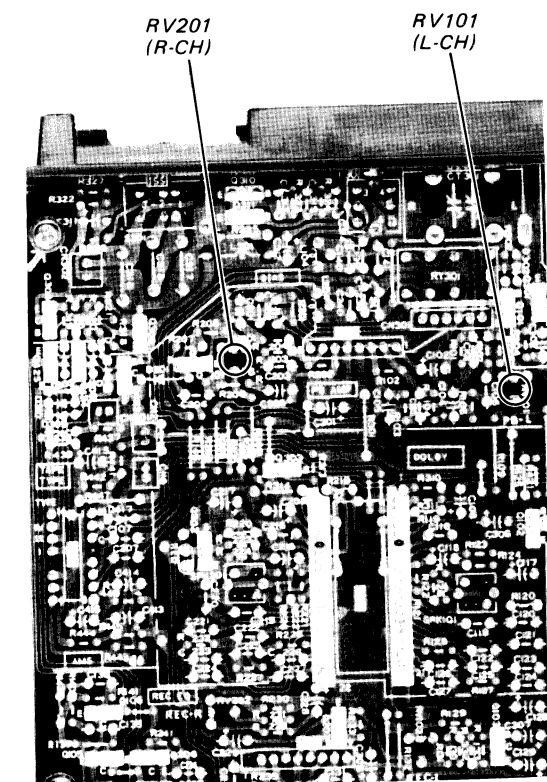

Note: Before

— audio board

Fig. 1


3-2. ELECTRICAL ADJUSTMENTS

Note: The adjustment should be performed in the order given in this service manual.
The adjustments should be performed for both L-CH and R-CH.

- Switches and controls should be set as follows unless otherwise specified.
DOLBY NR switch: OFF
TIMER switch: OFF
ISS switch: 2

- Standard Record:
Deliver the standard input signal level to the input jack and control the attenuator to obtain the standard output signal level.

Record Mode

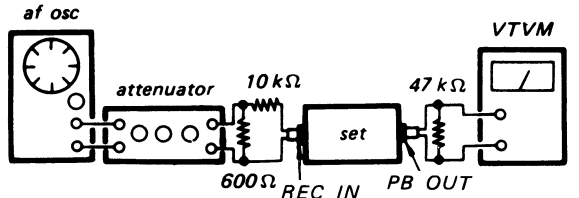

Standard Input Level


	REC IN
source impedance	10 kΩ
input level	0.44 V (−5 dB)

Standard Output Level

	PB OUT
load impedance	47 kΩ
output level	0.44 V (−5 dB)

Locations of REC IN and PB OUT

	CN1 terminal No.		
	L-CH	R-CH	GND
REC IN	10	9	12
PB OUT	11	13	12

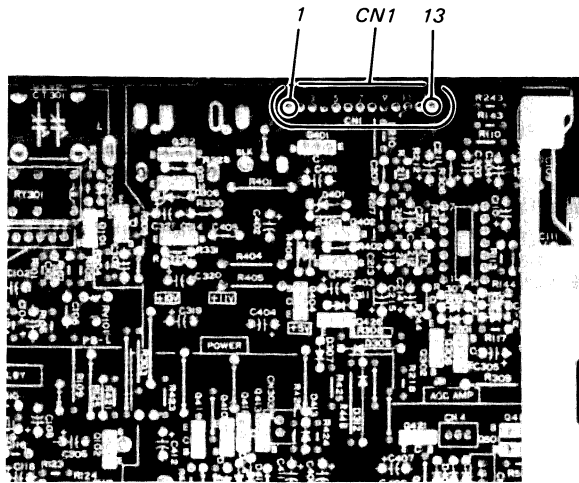


Tape Speed Adjustment

Procedure:

See the left for locations of REC IN and PB OUT.

Mode: forward-playback

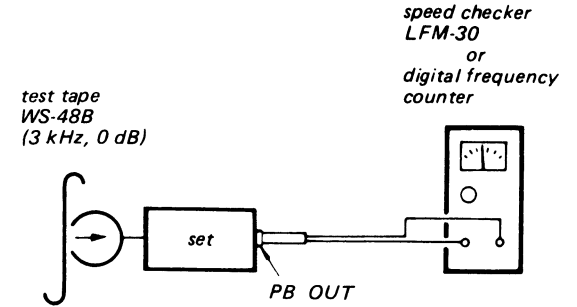


Specification:

Speed checker	Digital frequency counter
−1 +1 %	2,970 Hz to 3,030 Hz

Frequency difference between the beginning and the end of the tape should be within 0.8% (25Hz).

Adjustment Location: Motor (M802)

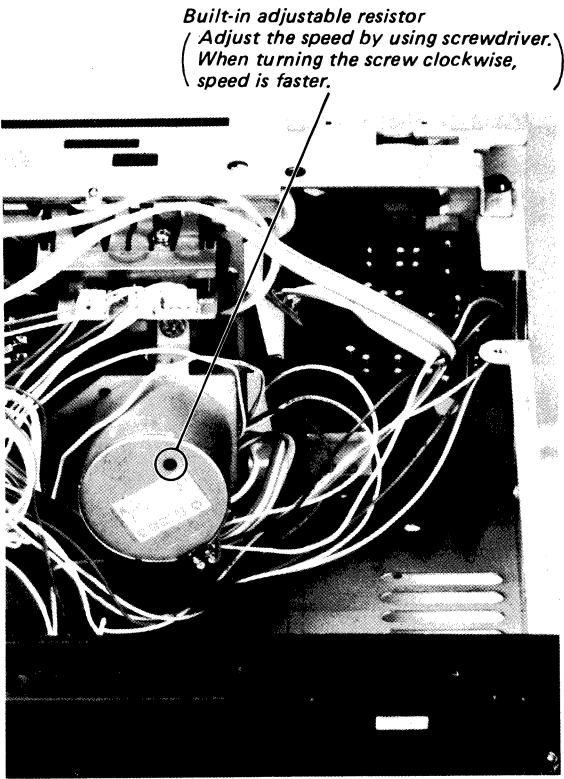


Record/playback Head Azimuth Adjustment

Procedure:


See page TC-15 for locations of REC IN and PB OUT.

1. Mode: forward-playback

test tape
P-4-A100
(10 kHz, −10 dB)


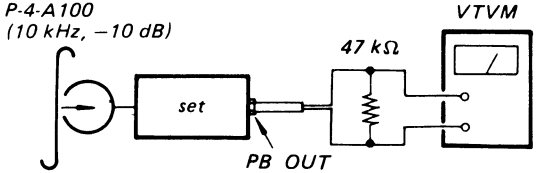


2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screws until both of output levels match together within 1 dB.

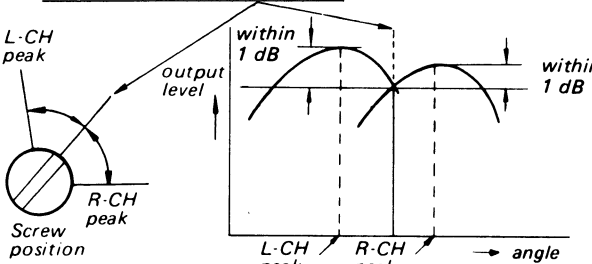

Phase Check


test tape
P-4-A100
(10 kHz −10 dB)

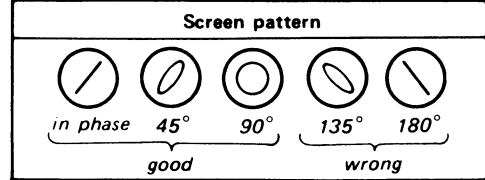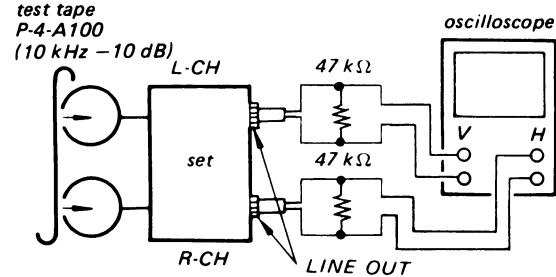

3. Set in the reverse-playback mode and repeat the steps 1 – 2.

4. After the adjustment, lock the screws with locking compound.

Adjustment Location:

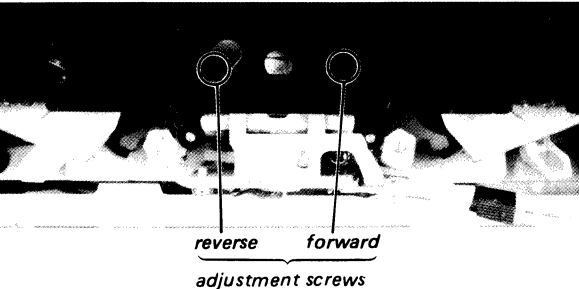


Playback Level Adjustment

Procedure:

See page TC-15 for locations of REC IN and PB OUT.

Mode: playback

test tape
P-4-L300
(315 Hz, 0 dB)

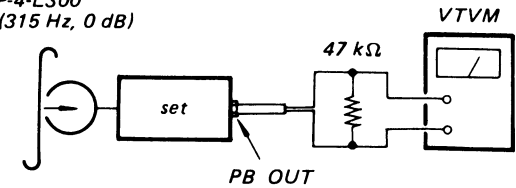

Adjust the RV101 (L-CH) and RV201 (R-CH) so that the specification is met.


Specification:

PB OUT level: 0.41 to 0.46 V
(−5.5 to −4.5 dB)

Level difference between channels:
less than 0.5 dB

Check that the PB OUT level does not change in playback mode while changing the mode from playback to stop several times.

Adjustment Location: audio board

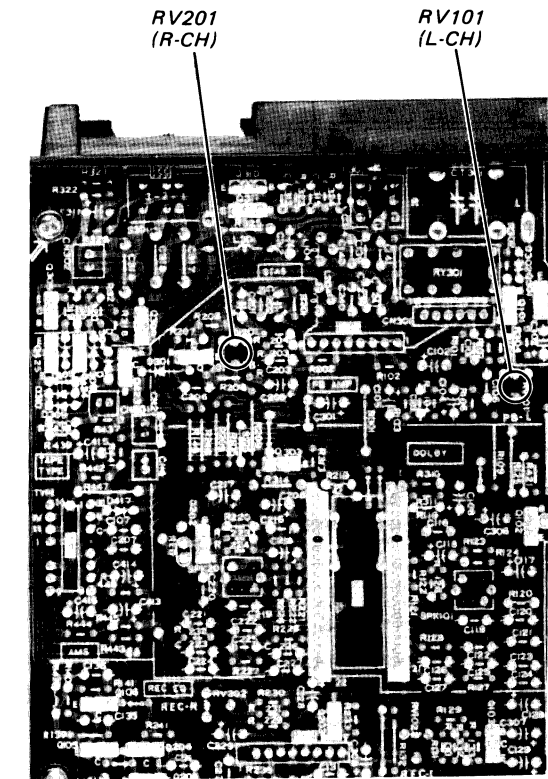

Note: Before performing Record Bias/Record Level Adjustment, connect pattern.

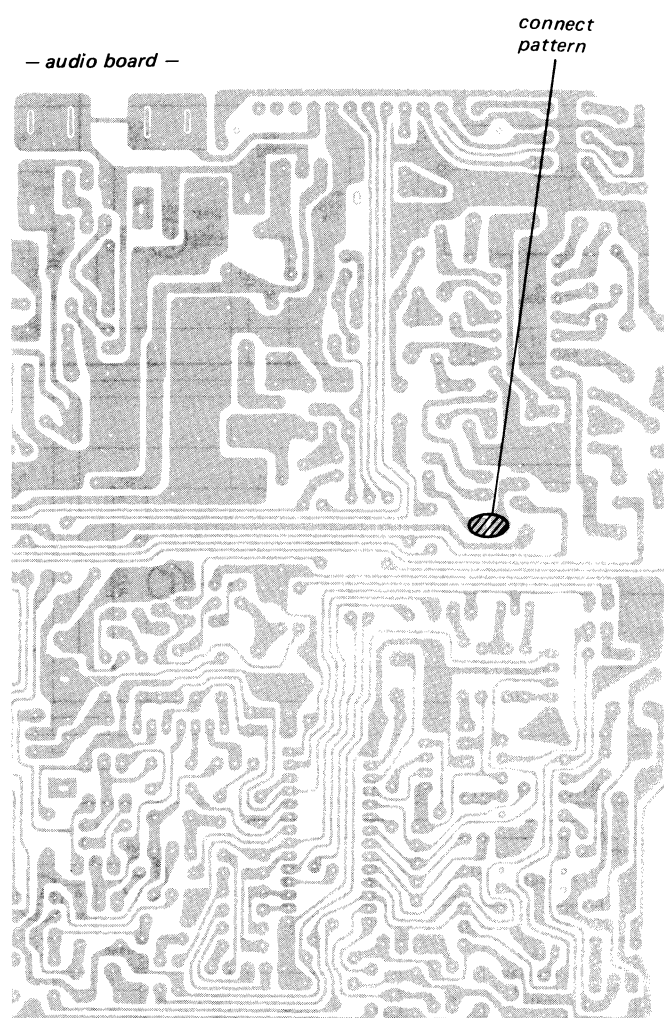


Fig. 1 Connecting Portion at the Adjustment

Record Bias Adjustment

Setting:


ATTENUATOR: standard record
 (See page TC-15.)

Connect pattern as shown in Fig. 1.


Procedure:

See page TC-15 for locations of REC IN and PB OUT.

1. Mode: record
 af osc

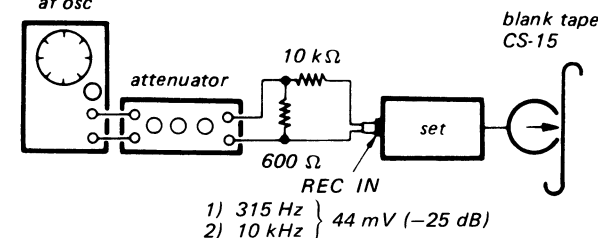


2. Mode: playback

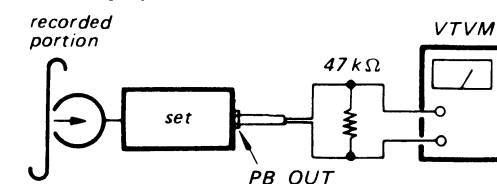

Confirm that the 10 kHz playback output is 0 dB relative to the 315 Hz output. If necessary, adjust CT301-1 (L-CH), CT301-2 (R-CH) and repeat the steps given above.

3. After the adjustment, disconnect pattern.

Adjustment Location: audio board

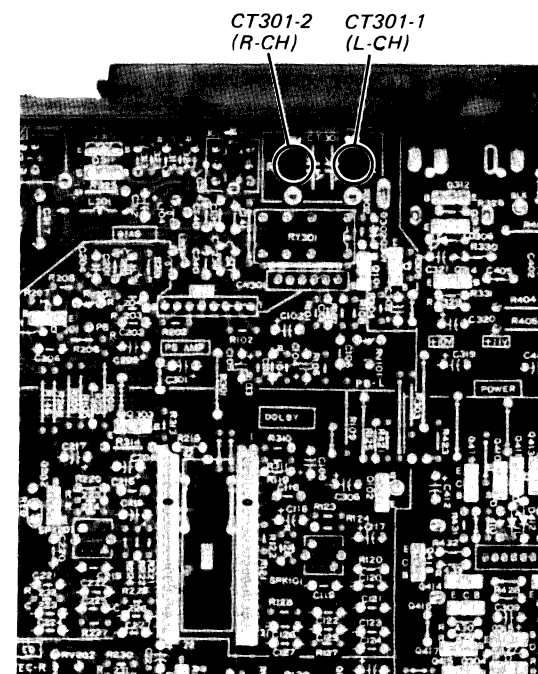

Record Level Adjustment

Setting:


ATTENUATOR: standard record
 (See page TC-15.)

Connect pattern as shown in Fig. 1.


Procedure:

See page TC-15 for locations of REC IN and PB OUT.

1. Mode: record
 af osc

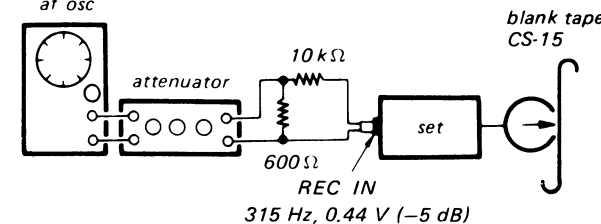

2. Mode: playback
 recorded portion

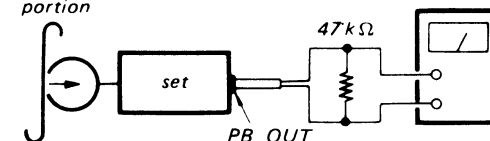

3. Play back the signal recorded in step 1.

Confirm that the signal level is within the specification below. If necessary, adjust RV102 (L-CH), RV202 (R-CH) and repeat the steps 1 - 3.

Specification:

PB OUT level: 0.41 to 0.46 V
 (-5.5 to -4.5 dB)

4. After the adjustment, disconnect pattern.




RV202
 (R-CH)


RV102
 (L-CH)

● Semiconductor Lead Layouts

 
LA3160




2SB548-R
 2SD809-K

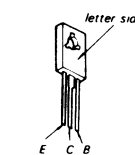


HZ11A1L
 HZ11B2L
 HZ6B1L

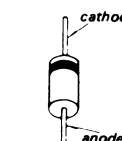


LA3220

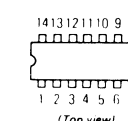


2SB1013
 2SD1387

 

SPI201-20

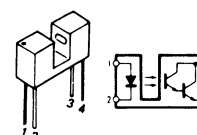


CX20187

 


2SC2603-F
 DTA114ES
 DTA144ES
 DTC144ES



 
NJM4558S




GL-1EG102
 GL-1HY102
 GL-1PR102

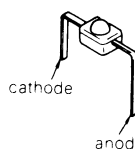


TC9312N-001

 


CX10034

 


GL-8PG1

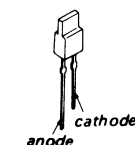

2SA1175
 2SD1020

 

1SS202-1

 

e in
rom



Record Level Adjustment

Setting:


ATTENUATOR: standard record
(See page TC-15.)

Connect pattern as shown in Fig. 1.


Procedure:

See page TC-15 for locations of REC IN and PB OUT.

1. Mode: record
af osc

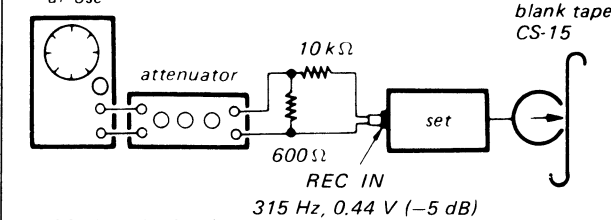

2. Mode: playback
recorded
portion

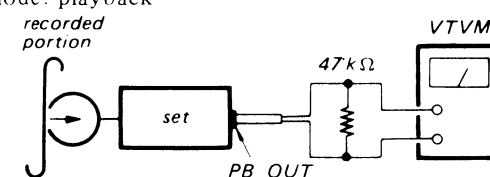


- Confirm that the signal level is within the specification below. If necessary, adjust RV102 (L-CH), RV202 (R-CH) and repeat the steps 1 – 3.

PB OUT level: 0.41 to 0.46 V
(−5.5 to −4.5 dB)

- . After the adjustment, disconnect pattern.


CT301-2 CT301-1
(R-CH) (L-CH)

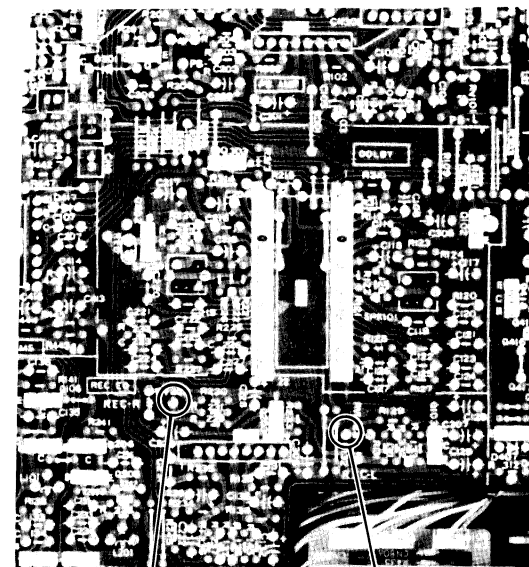

RV102
(L-CH)

HZ11A1L
HZ11B2L
HZ6B1L

2SB548-R
2SD809-K

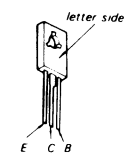


SPI201-20




2SC2603-F
DTA114ES
DTA144ES
DTC144ES




GL-1EG102
GL-1HY102
GL-1PR102

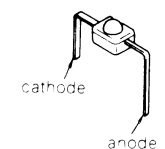

GL-8PG1

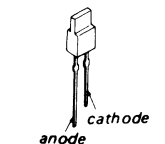

1SS202-1

 

A diagram of a key. The top part is a hexagonal head with a label 'letter side' pointing to its top surface. Two long, thin blades extend downwards from the head. The right blade is labeled 'B' at its tip, and the left blade is labeled 'C' at its tip.

Note: Before performing Record Bias/Record Level Adjustment, connect pattern.

— audio board —

connect pattern


Fig. 1 Connecting Portion at the Adjustment

Record/playback Head Azimuth Adjustment


Procedure:

See page TC-15 for locations of REC IN and PB OUT.

1. Mode: forward-playback
test tape
P-4-A100
(10 kHz, -10 dB)


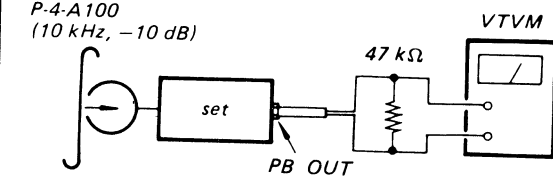


2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screws until both of output levels match together within 1 dB.

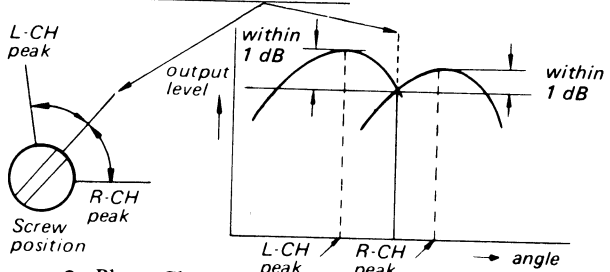

Phase Check


test tape
P-4-A100
(10 kHz -10 dB)

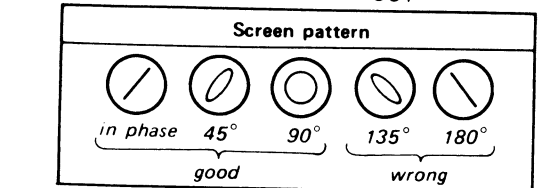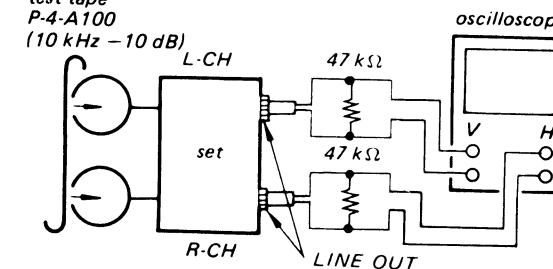

3. Set in the reverse-playback mode and repeat the steps 1 - 2.

4. After the adjustment, lock the screws with locking compound.

Adjustment Location:

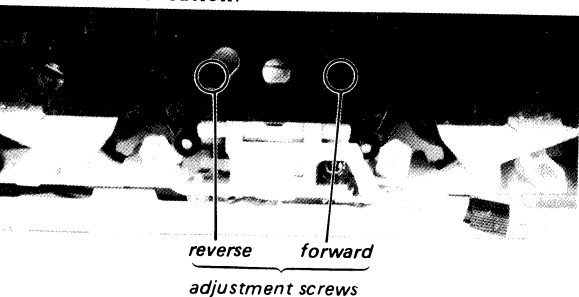


Playback Level Adjustment

Procedure:

See page TC-15 for locations of REC IN and PB OUT.

Mode: playback

test tape
P-4-L300
(315 Hz, 0 dB)

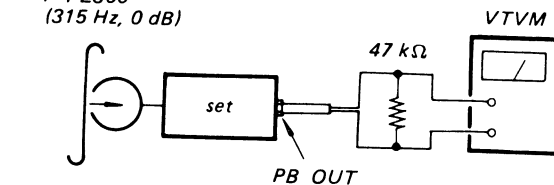

Adjust the RV101 (L-CH) and RV201 (R-CH) so that the specification is met.


Specification:

PB OUT level: 0.41 to 0.46 V
(-5.5 to -4.5 dB)

Level difference between channels:
less than 0.5 dB

Check that the PB OUT level does not change in playback mode while changing the mode from playback to stop several times.

Adjustment Location: audio board

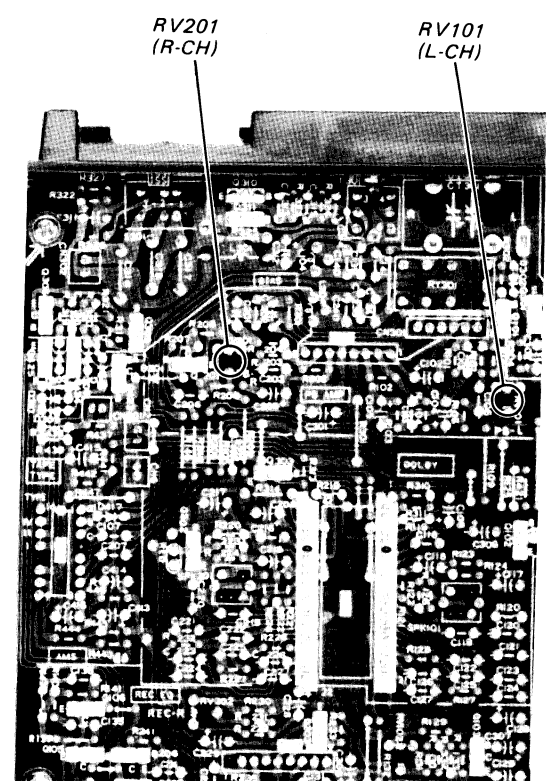

Record Bias Adjustment

Setting:


ATTENUATOR: standard record
(See page TC-15.)

Connect pattern as shown in Fig. 1.


Procedure:

See page TC-15 for locations of REC IN and PB OUT.

1. Mode: record

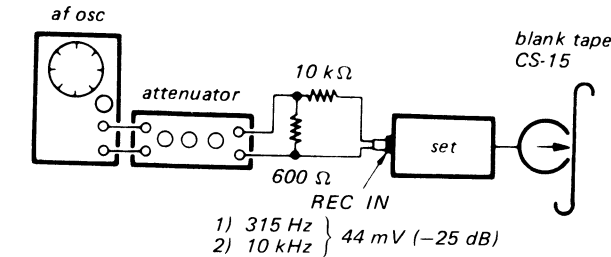


2. Mode: playback

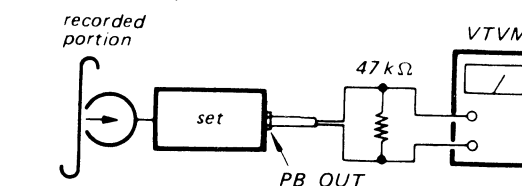

Confirm that the 10 kHz playback output is 0 dB relative to the 315 Hz output. If necessary, adjust CT301-1 (L-CH), CT301-2 (R-CH) and repeat the steps given above.

3. After the adjustment, disconnect pattern.

Adjustment Location: audio board

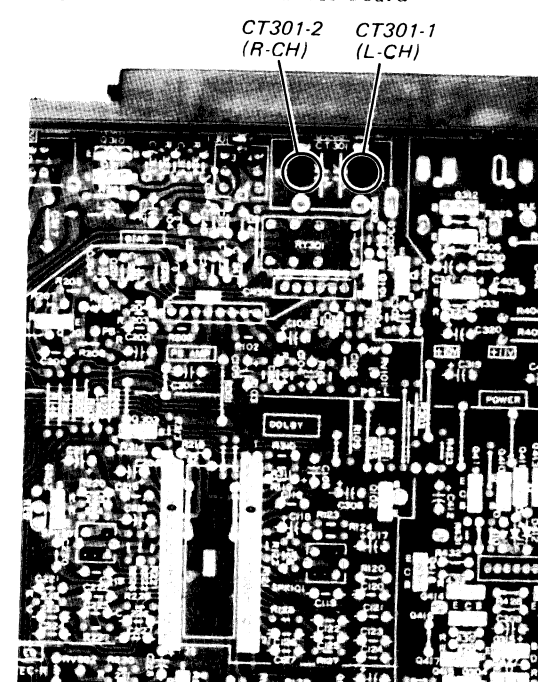

Record Level Adjustment

Setting:


ATTENUATOR: standard record
(See page TC-15.)

Connect pattern as shown in Fig. 1.


Procedure:

See page TC-15 for locations of REC IN and PB OUT.

1. Mode: record

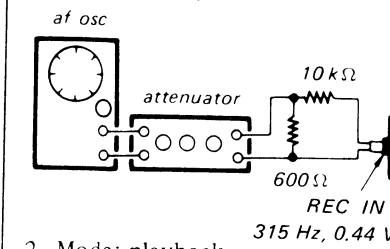

2. Mode: playback

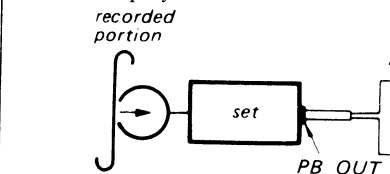


3. Play back the signal recorded in the previous step. Confirm that the signal level is within the specification below. If necessary, adjust RV202 (R-CH) and repeat the steps given above.

Specification:

PB OUT level: 0.41 to 0.46 V
(-5.5 to -4.5 dB)


4. After the adjustment, disconnect pattern.

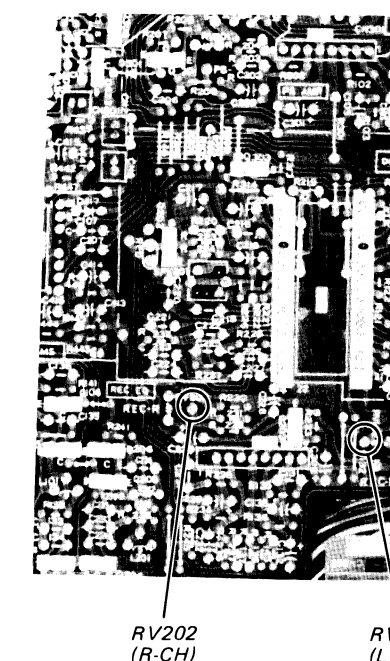



d/playback Head Azimuth Adjustment

Procedure:
See page TC-15 for locations of REC IN and PB OUT.
Mode: forward-playback

Test tape
P-4-L300
(315 Hz, -10 dB)

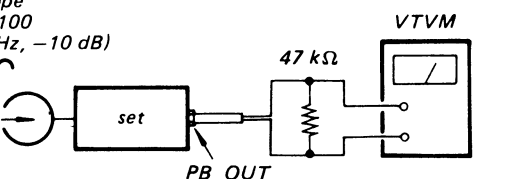


Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screws until both of output levels match together within 1 dB.

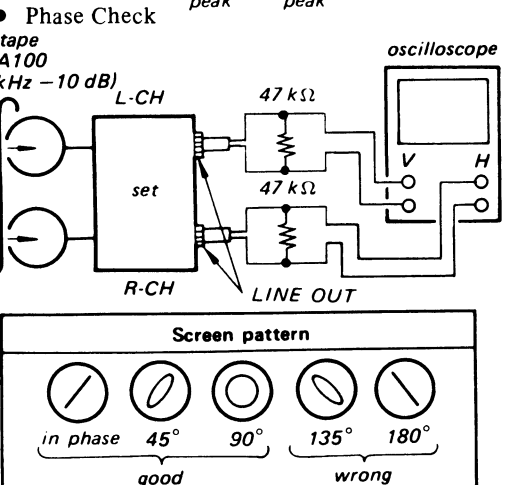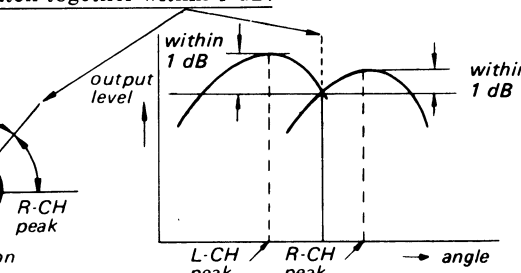

Set in the reverse-playback mode and repeat the steps 1 - 2.

After the adjustment, lock the screws with locking compound.

Adjustment Location:

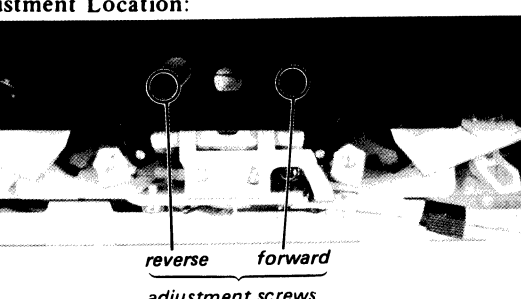


Playback Level Adjustment

Procedure:

See page TC-15 for locations of REC IN and PB OUT.

Mode: playback

Test tape
P-4-L300
(315 Hz, 0 dB)

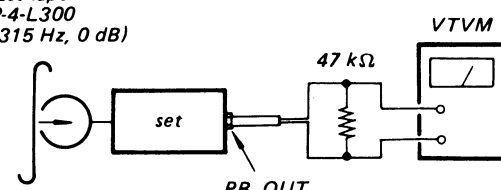

Adjust the RV101 (L-CH) and RV201 (R-CH) so that the specification is met.


Specification:

PB OUT level: 0.41 to 0.46 V
(-5.5 to -4.5 dB)

Level difference between channels:
less than 0.5 dB

Check that the PB OUT level does not change in playback mode while changing the mode from playback to stop several times.

Adjustment Location: audio board

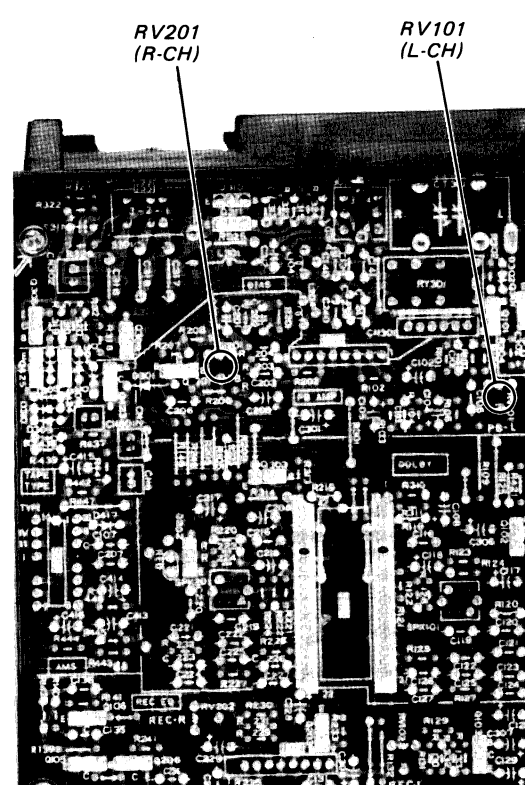

Note: Before performing Record Bias/Record Level Adjustment, connect pattern.

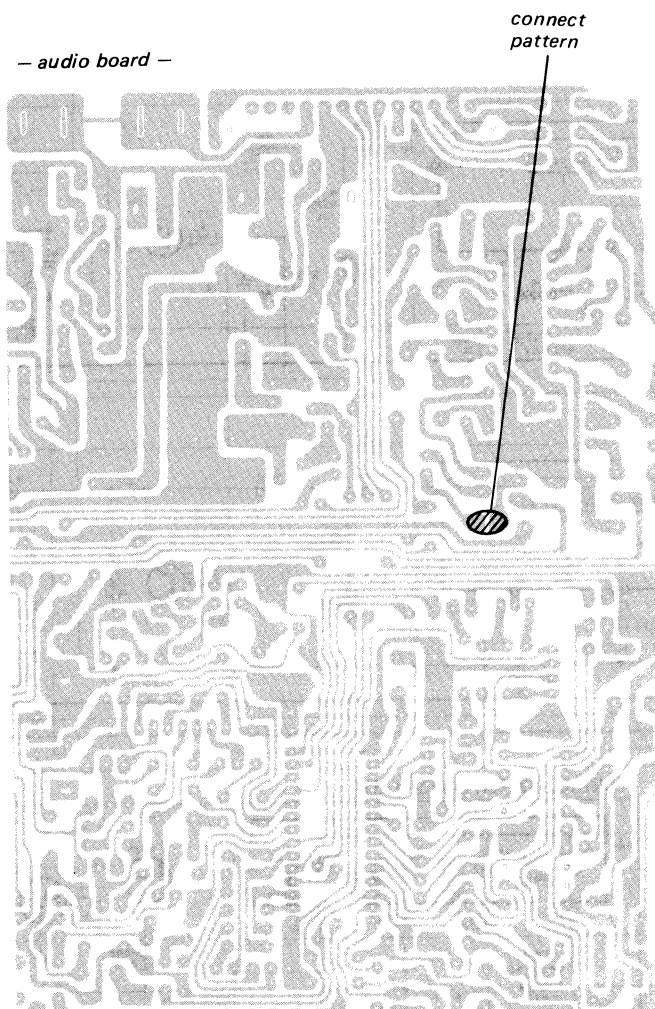


Fig. 1 Connecting Portion at the Adjustment

Record Bias Adjustment

Setting:


ATTENUATOR: standard record
(See page TC-15.)

Connect pattern as shown in Fig. 1.

Procedure:


See page TC-15 for locations of REC IN and PB OUT.

1. Mode: record
af osc

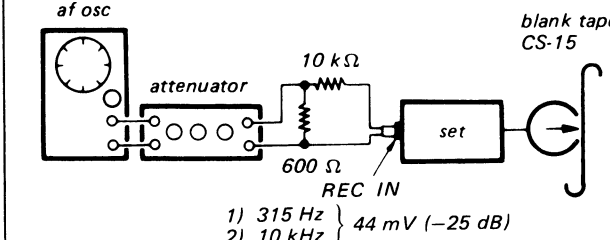

1) 315 Hz
2) 10 kHz } 44 mV (-25 dB)


2. Mode: playback

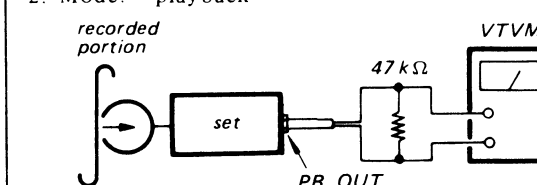

Confirm that the 10 kHz playback output is 0 dB relative to the 315 Hz output. If necessary, adjust CT301-1 (L-CH), CT301-2 (R-CH) and repeat the steps given above.

3. After the adjustment, disconnect pattern.

Adjustment Location: audio board

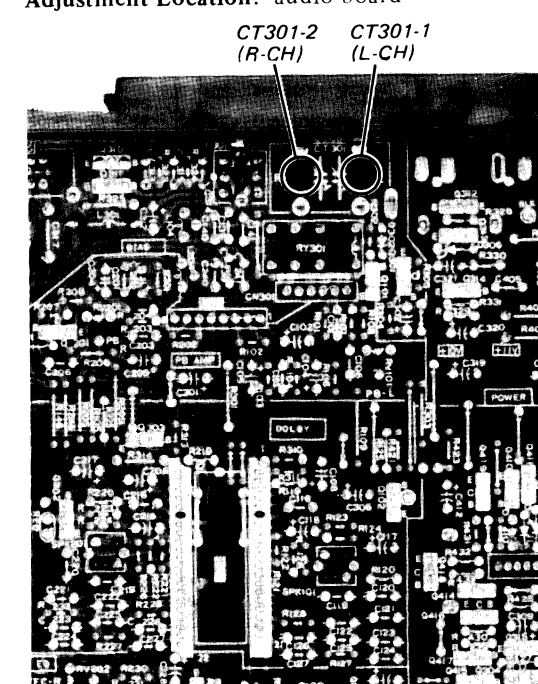

Record Level Adjustment

Setting:


ATTENUATOR: standard record
(See page TC-15.)

Connect pattern as shown in Fig. 1.

Procedure:


See page TC-15 for locations of REC IN and PB OUT.

1. Mode: record
af osc

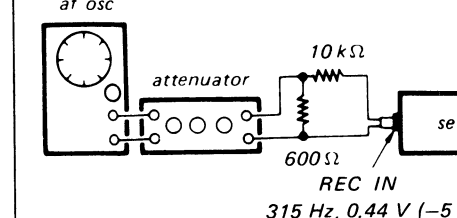

315 Hz, 0.44 V (-5 dB)

2. Mode: playback
recorded portion

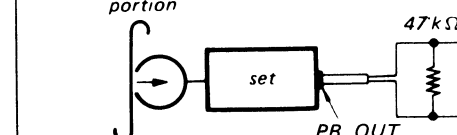


3. Play back the signal recorded in step 1. Confirm that the signal level is within specification below. If necessary, adjust RV202 (R-CH) and repeat the steps 1 - 2.

Specification:

PB OUT level: 0.41 to 0.46 V
(-5.5 to -4.5 dB)

4. After the adjustment, disconnect pattern.

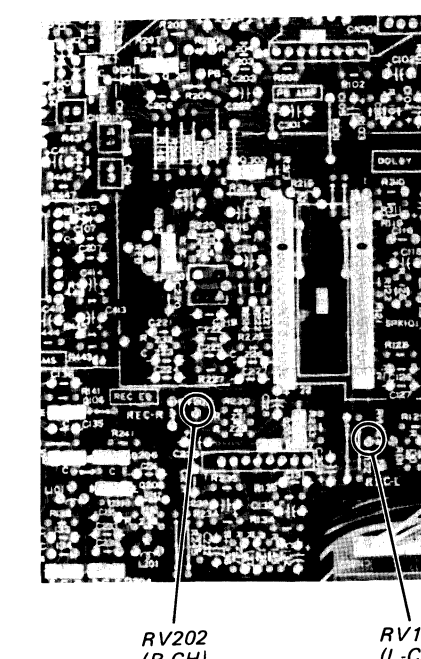


SECTION 4 DIAGRAMS


FH-150R
TC-177R

FH-150R
TC-177R

4-1. SCHEMATIC DIAGRAM

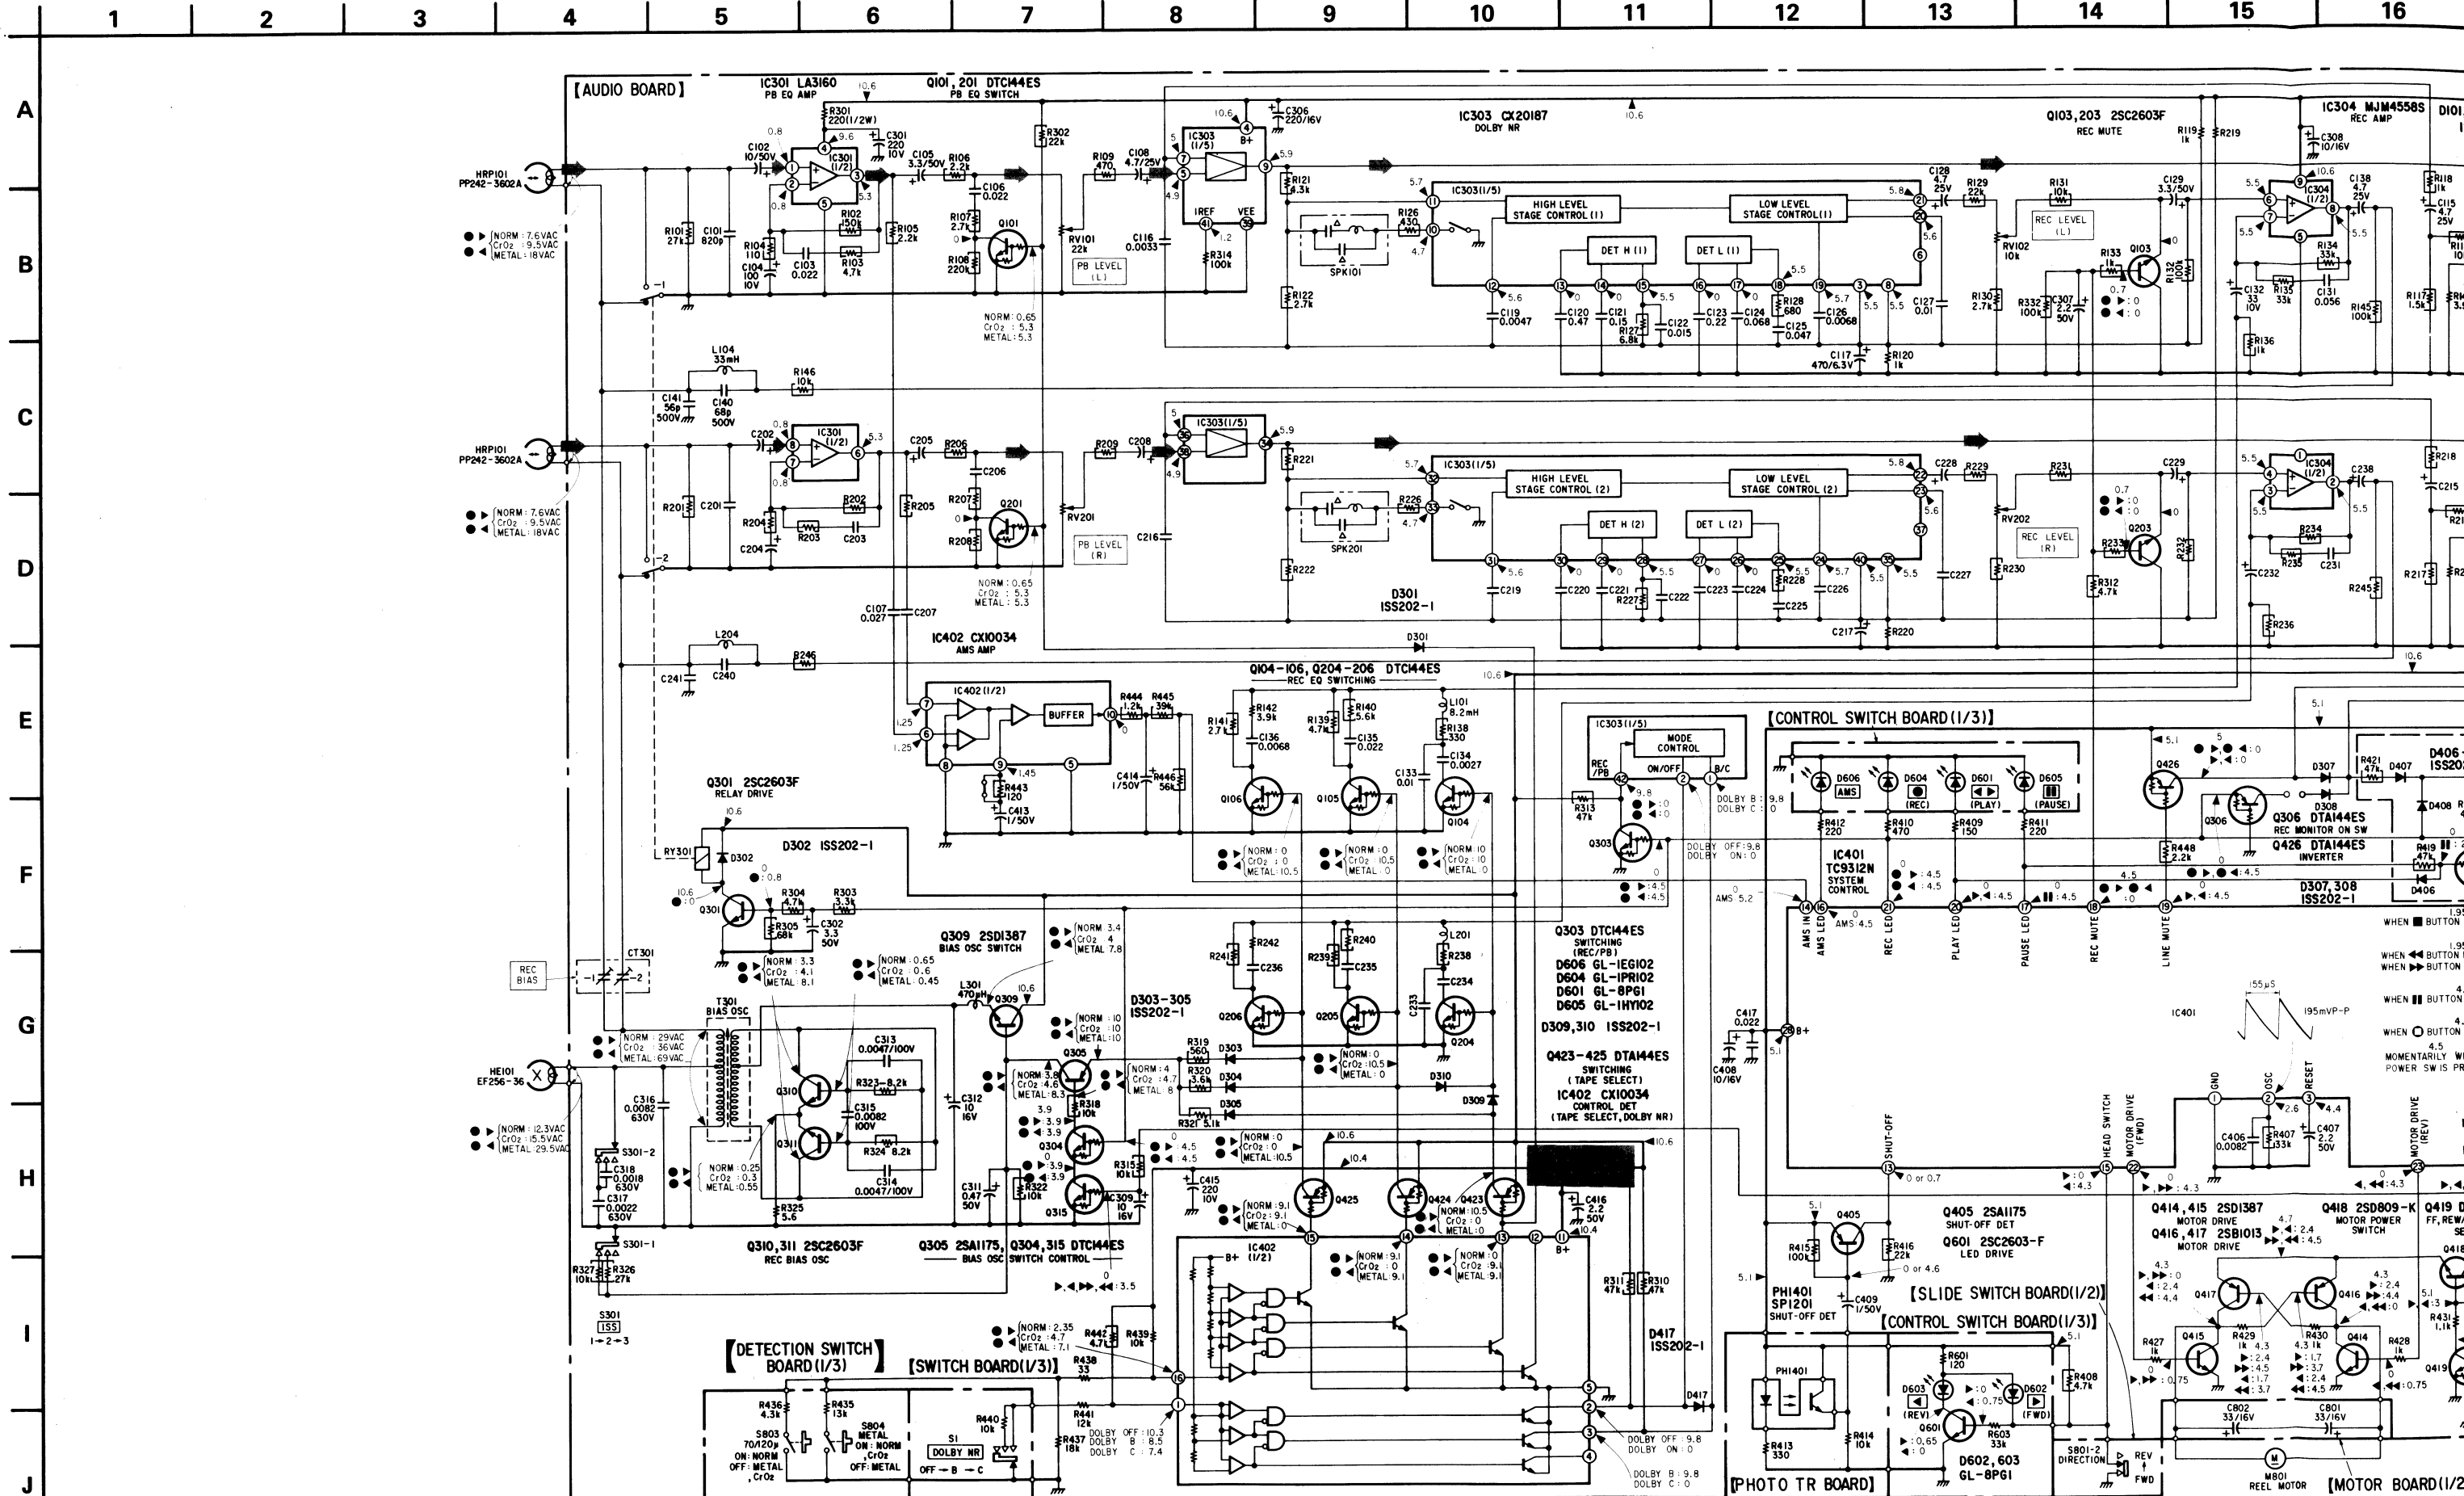





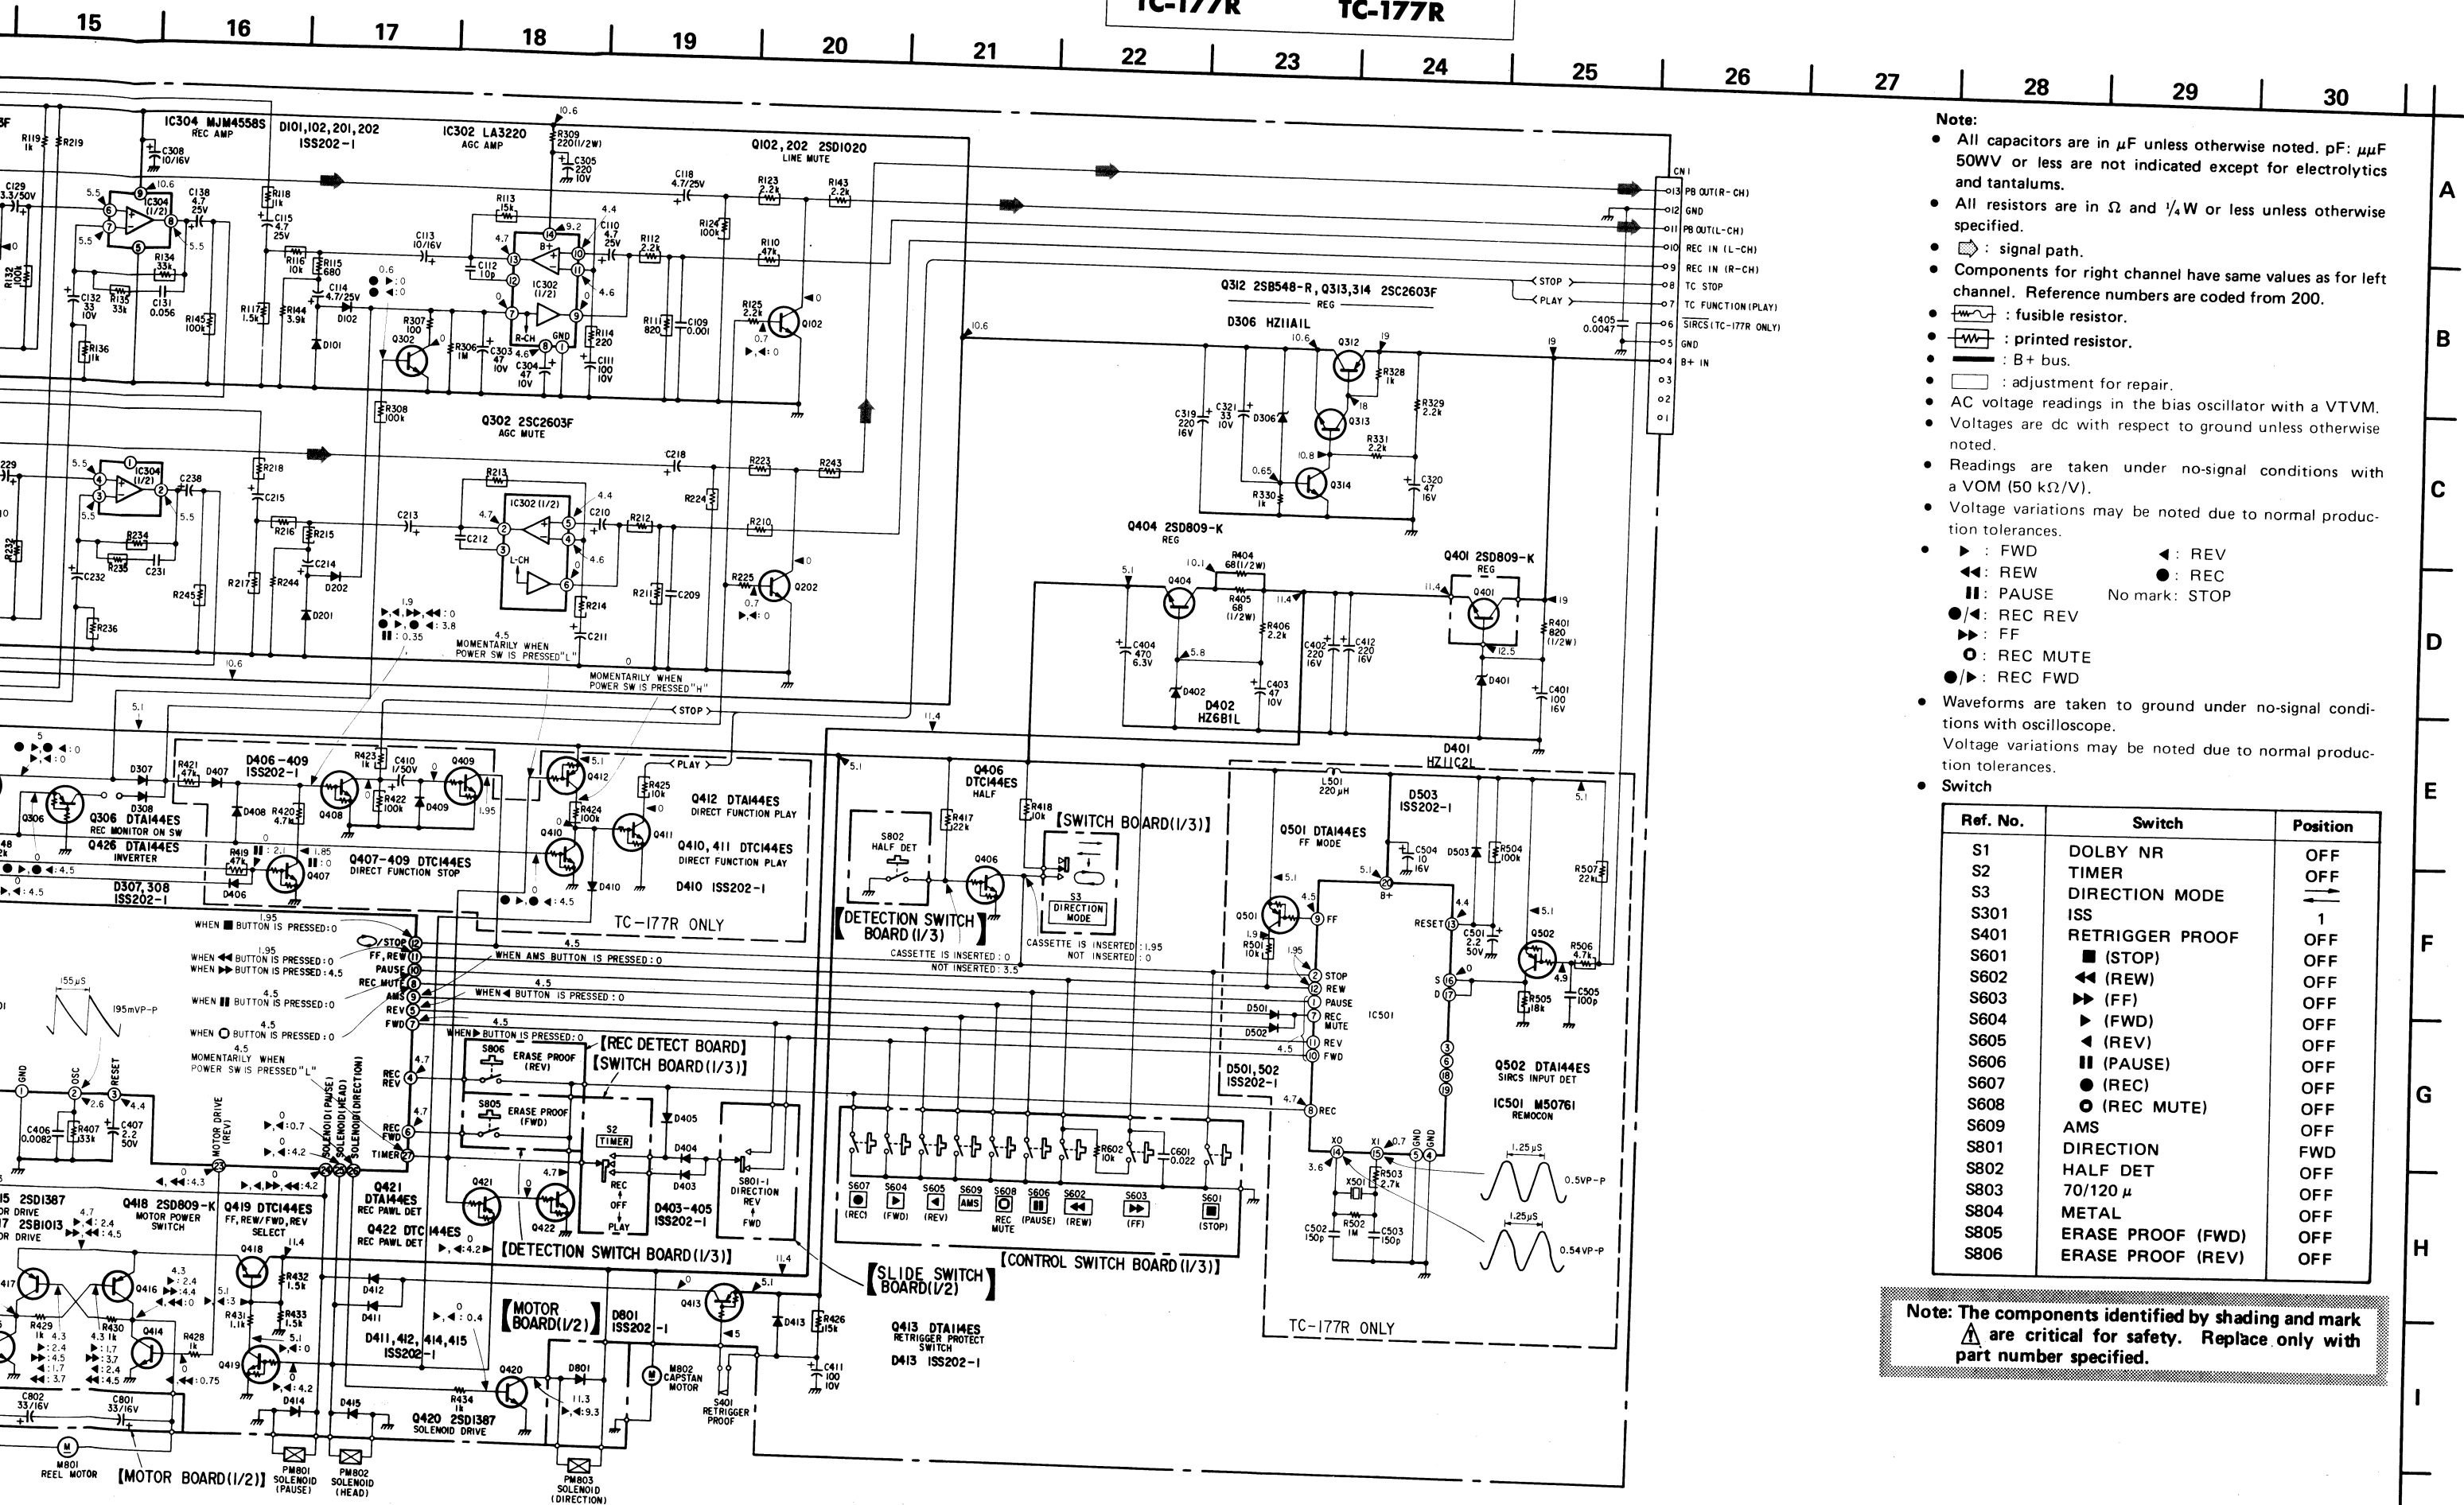

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----


D	PH1401			801					
		606		601			605		604
			603			602			

11

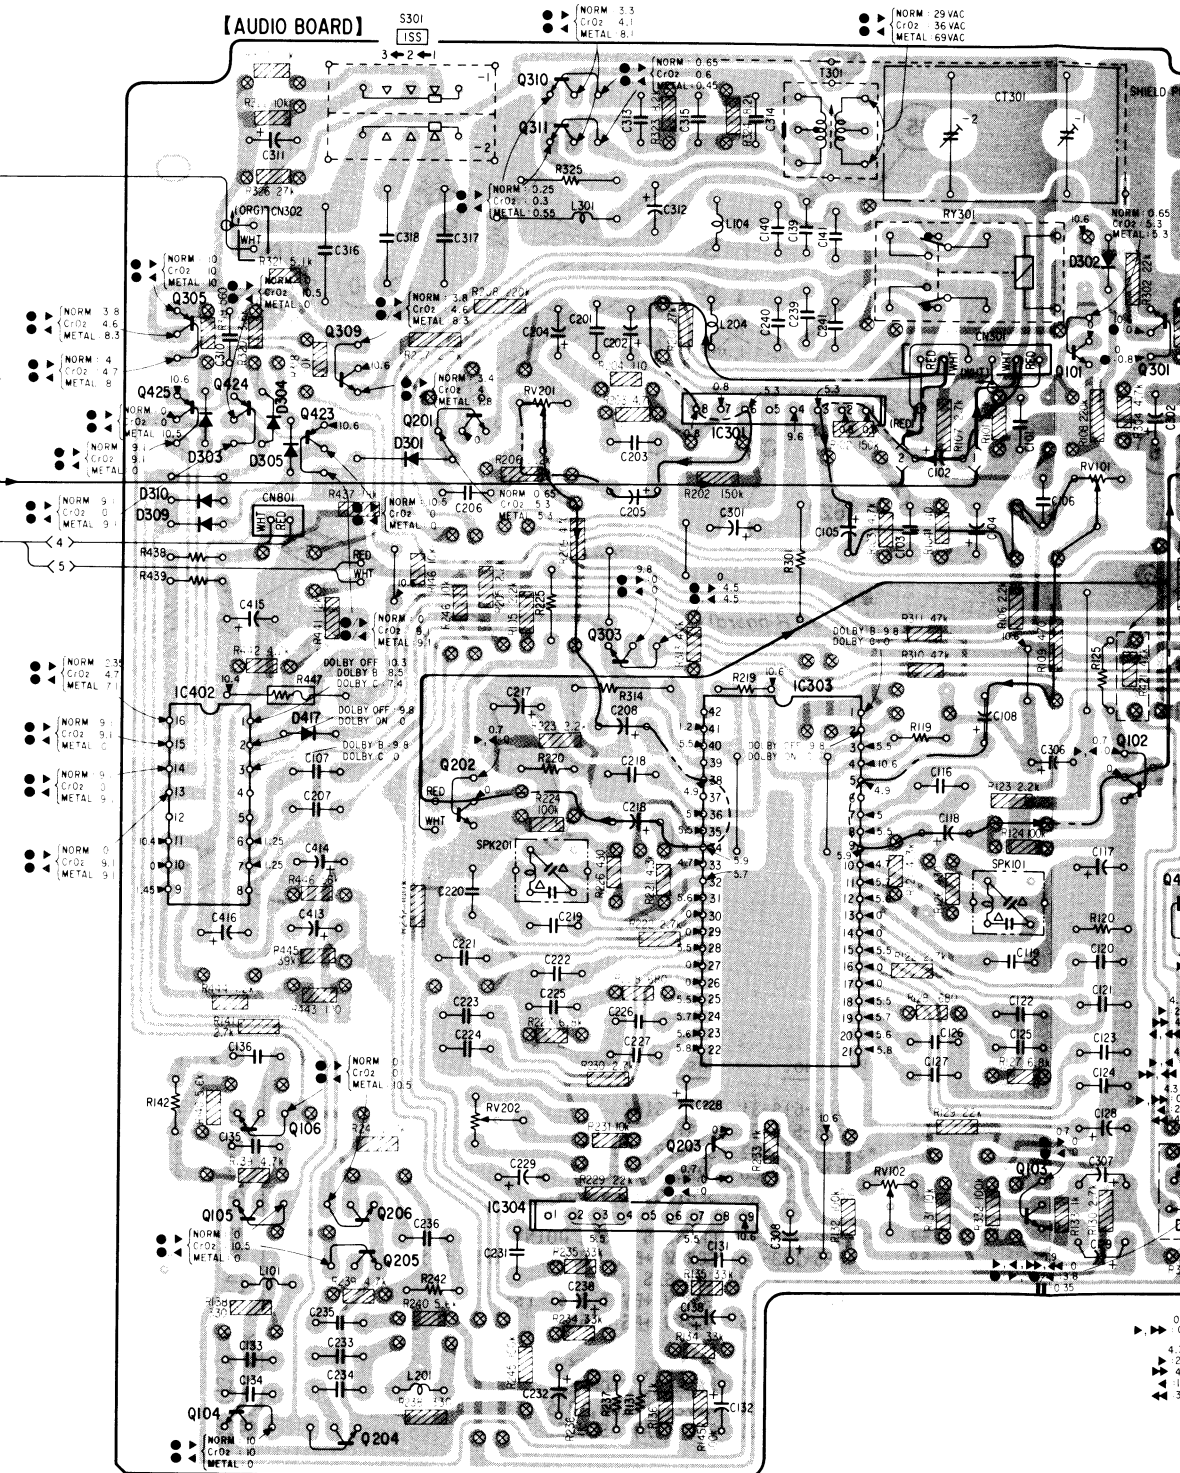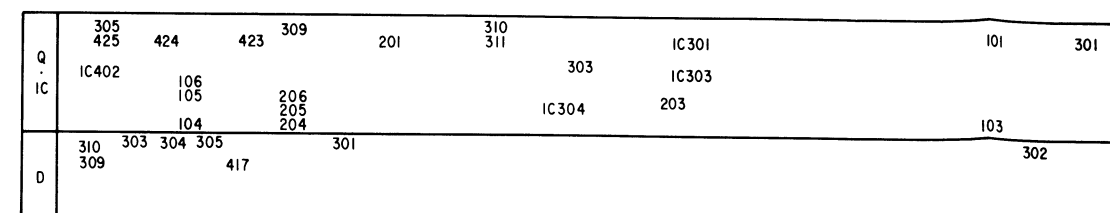

A horizontal number line with tick marks at every integer from 7 to 22. The numbers are labeled above the line.

Q IC	305 425	424	423	309	201	310 311	IC301	101	301	312 313 314	419 414 416	410	411	413	401 402 403	404 426	IC302 306	302 421	412 501	
	IC402	106 105		206 205 204		IC304	203		418	417 415	315 304 407 409	420		IC401		406 405	422	IC501	502	
D	310 309	303	304	305	417	301		103	302	408	306		410,411,412	402 311 307	401 312 308		202 201	102 101	405,404,403 501,502	503

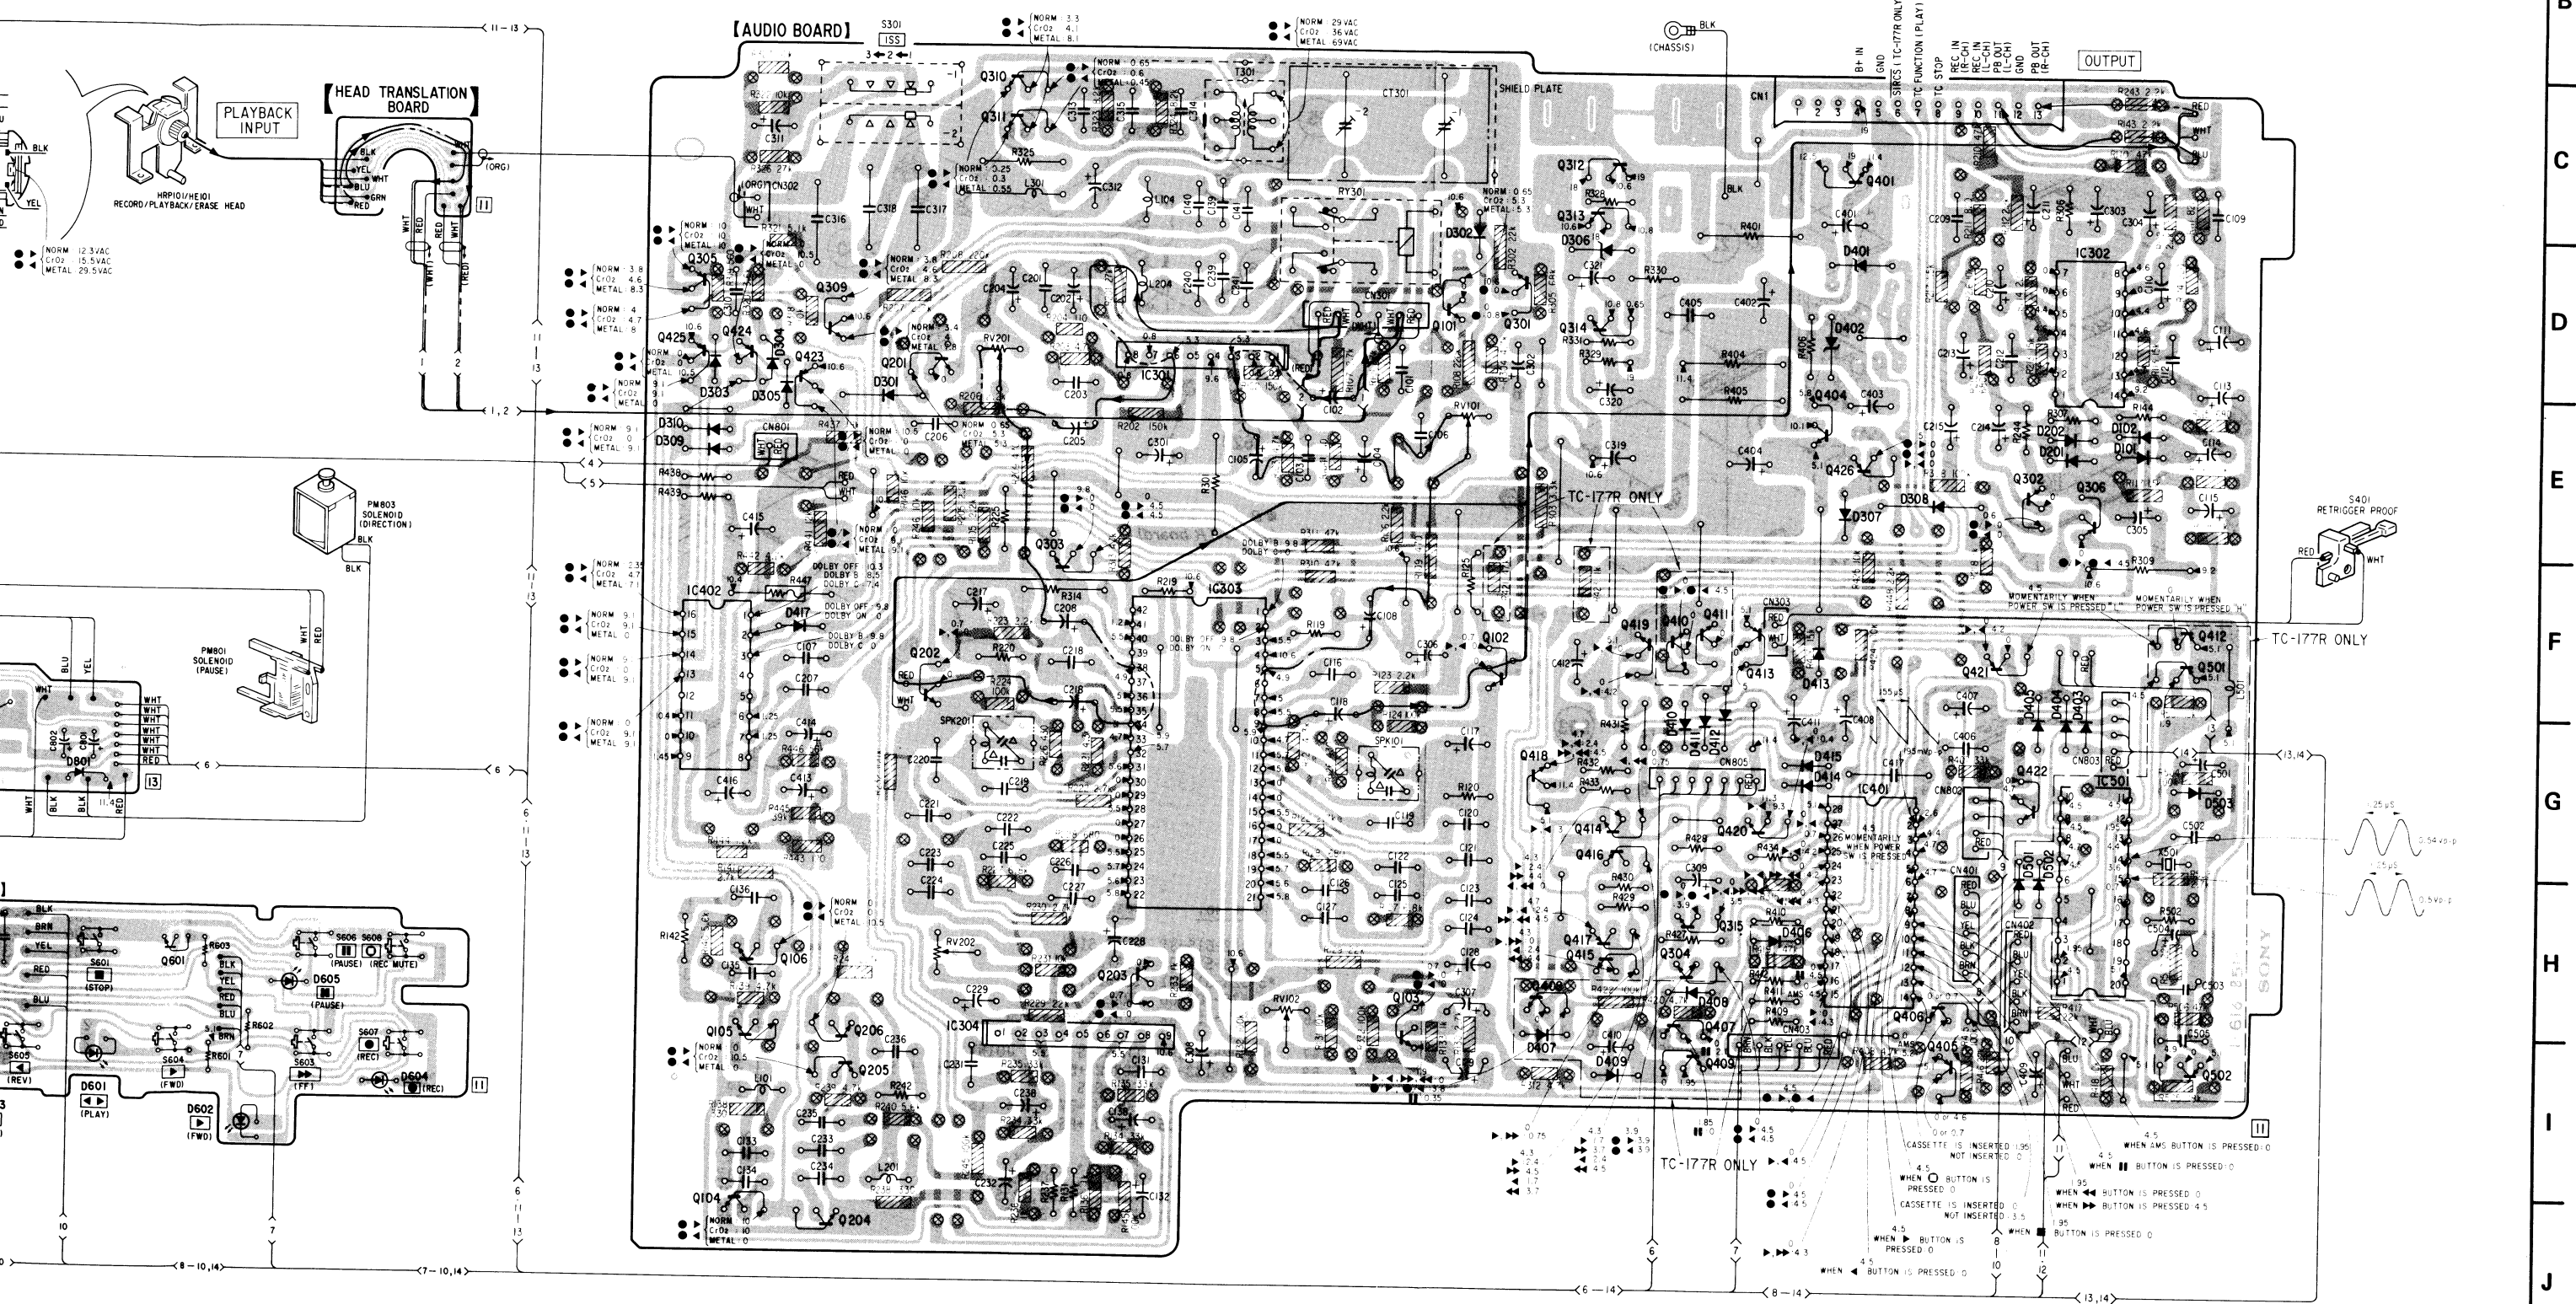


SECTION 5
EXPLODED VIEWS AND PARTS LIST


NOTE:

The mechanical parts with no reference number in the exploded views are not supplied.

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


The construction parts of an assembled part are indicated with a collation number in the remark column.

The components identified by shading and mark  are critical for safety. Replace only with part number specified.

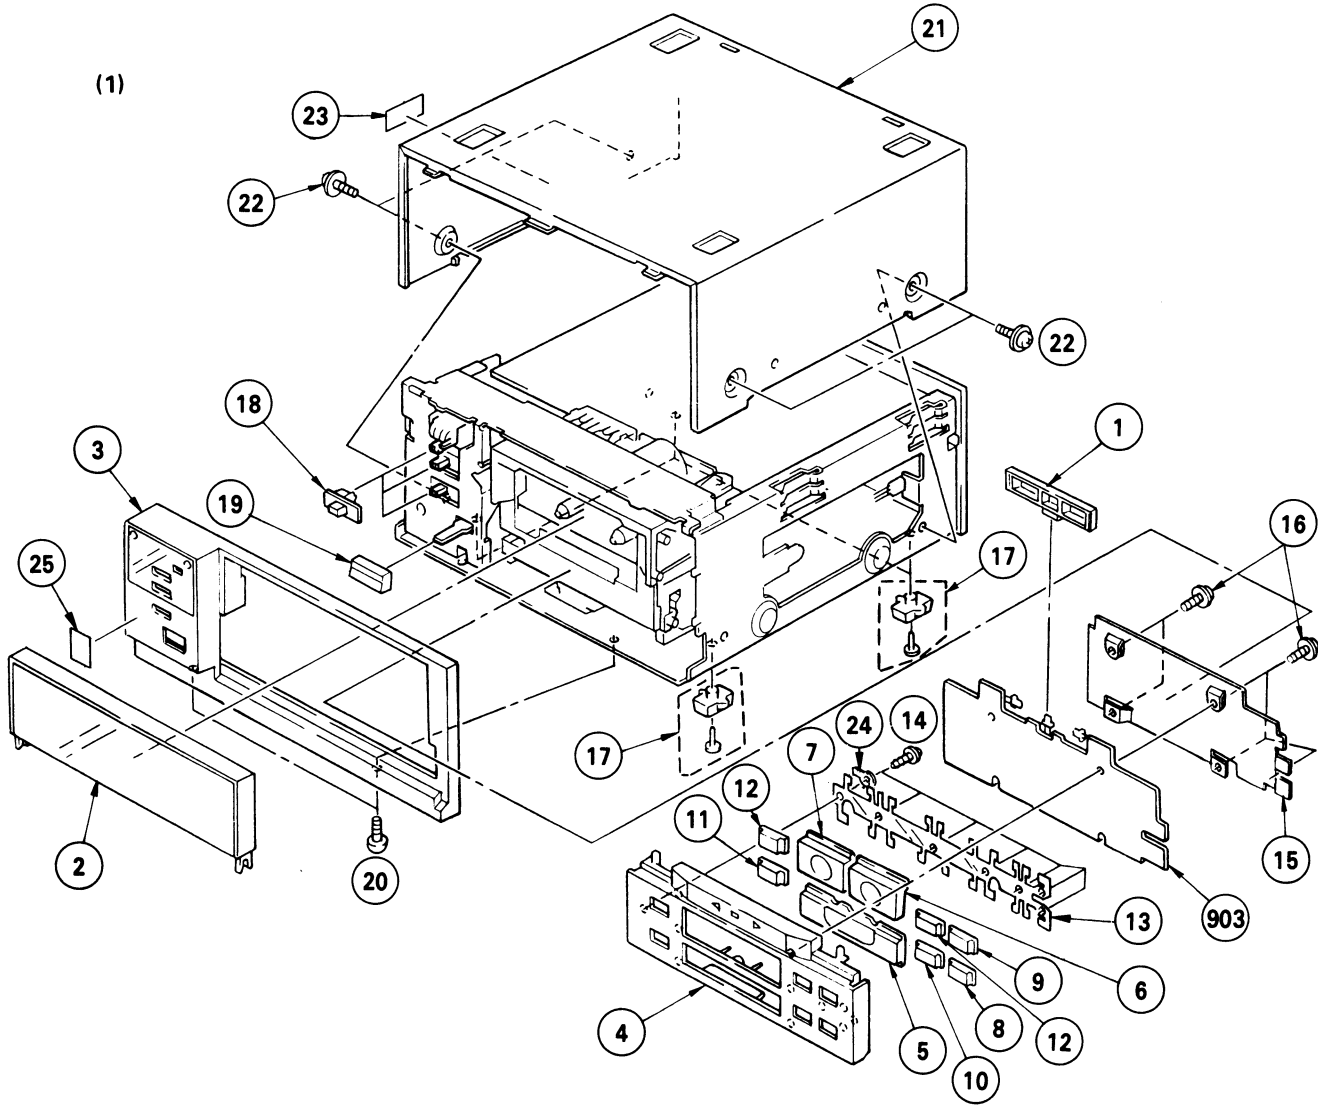

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	*3-325-508-01	HOUSE, LED		13	3-325-512-01	SPRING	
2	X-3325-542-1 X-3325-543-1	(E model).....WINDOW ASSY, CASSETTE (EXCEPT FOR E model)..WINDOW ASSY, CASSETTE		14	7-687-202-11	TOTSU, TAPPING PTPWH 2X4	
3	X-3325-523-1	PANEL ASSY, FRONT		15	*3-325-511-01	PLATE, SHIELD	
4	X-3325-525-1	ESCUTCHEON ASSY		16	7-687-233-11	SCREW, TOTSU PTPWH 2.6X6, TYPE2	
5	3-325-506-01	BUTTON (B), STOP		17	X-4902-937-1	FOOT ASSY, RUBBER	
6	3-325-504-01	BUTTON (B), FWD		18	3-307-538-21	KNOB, SWITCH, TIMER	
7	3-325-505-01	BUTTON (B), REV		19	3-575-533-31	BUTTON, EJECT	
8	3-325-503-31	BUTTON (B), REC MUTE		20	7-685-871-01	SCREW +BVTT 3X6 (S)	
9	3-325-503-11	BUTTON, REC		21	4-910-078-31	CASE	
10	3-325-503-21	BUTTON (B), PAUSE		22	4-886-821-01	SCREW, M3 CASE	
11	3-325-503-41	BUTTON, AMS		23	*3-325-581-01	LABEL, MODEL NUMBER (W)	
12	3-325-503-01	BUTTON (B), FF.REW		24	7-623-505-01	LUG, 2	
				25	3-703-709-41	STICKER, SONY SYMBOL (15)	
				903	*1-615-390-11	PC BOARD, CONTROL SWITCH	

(2)

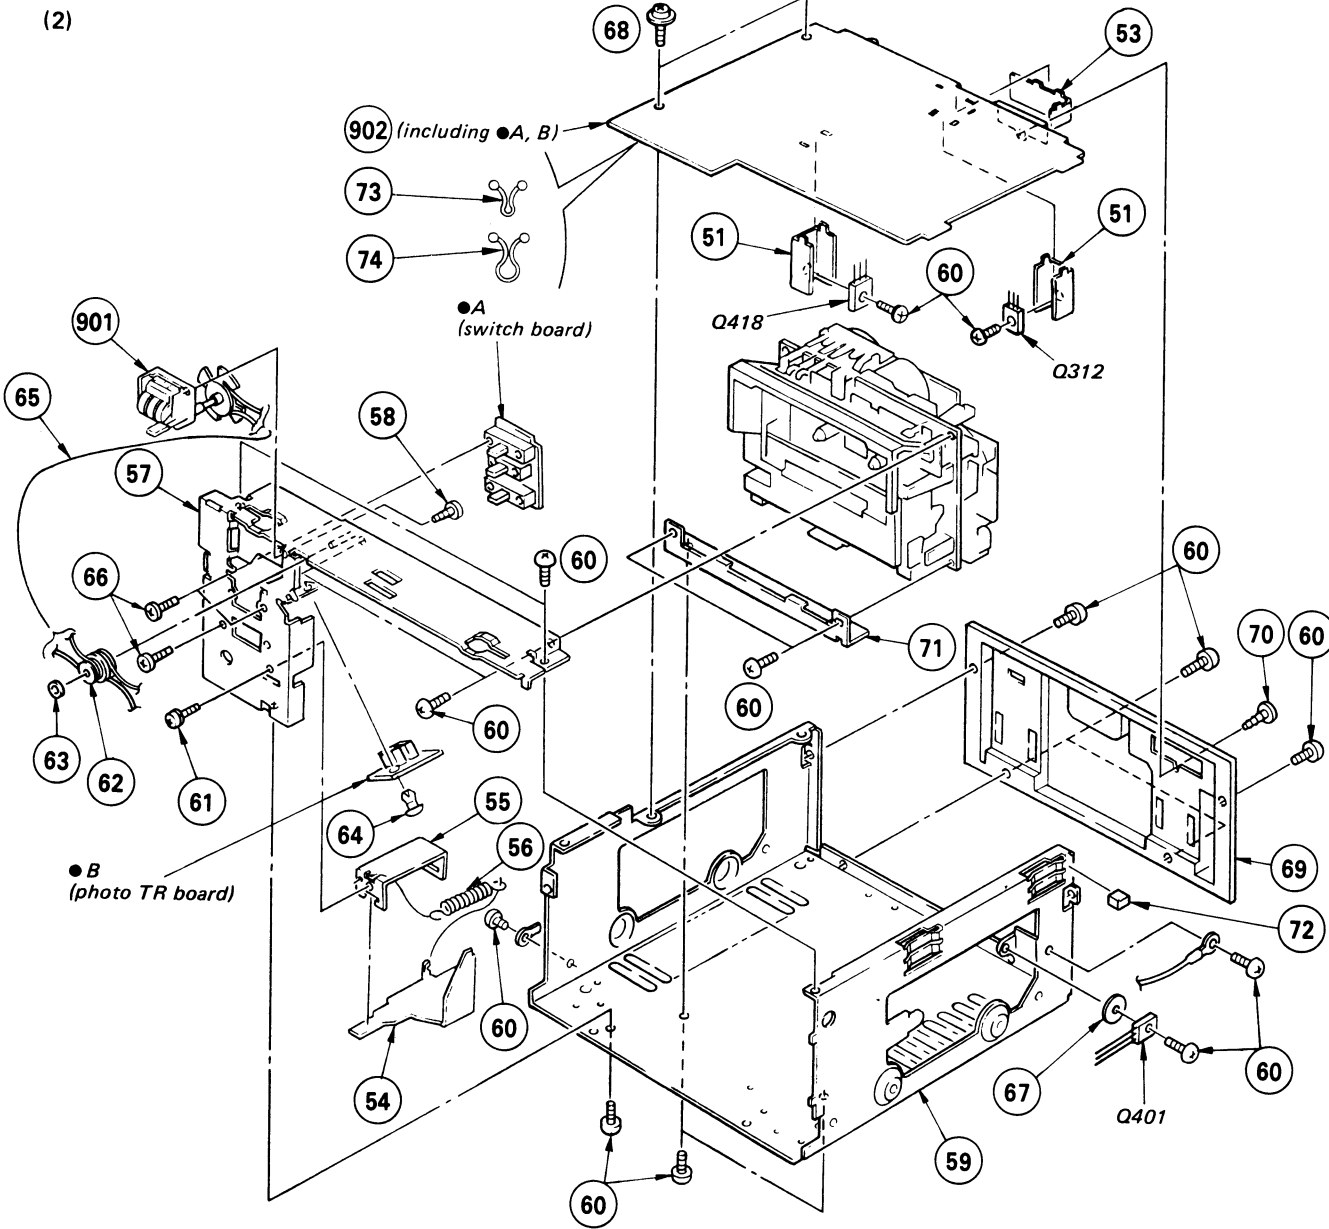

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	*3-312-615-31	HEAT SINK		66	7-621-775-10	SCREW +B 2.6X4	
53	*3-325-515-01	PLATE, SHIELD		67	3-572-365-11	SHEET, INSULATING (A)	
54	*3-325-513-01	SLIDER, EJECT		68	3-703-249-01	SCREW, S TIGHT, +PTTWH 3X6	
55	*3-575-502-00	BRACKET, EJECT		69	3-309-129-71	PLATE, JACK	
56	3-534-238-XX	SPRING, TENSION		70	7-685-647-14	SCREW +BVTP 3X10 TYPE2 N-S	
57	*X-3325-501-1	CHASSIS ASSY, JOINT		71	*3-319-722-01	BRACKET, MD	
58	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S		72	9-911-841-XX	CUSHION	
59	*3-309-132-12	CHASSIS		73	*2-056-665-00	HOLDER, WIRE (PURCE LOCK 5 DIA)	
60	7-685-871-01	SCREW +BVTT 3X6 (S)		74	*2-056-666-00	PURCE LOCK (8 DIA.)	
61	7-628-254-05	SCREW +PS 2.6X5		901	1-548-563-91	COUNTER, TAPE (MIDDLE TYPE)	
62	3-318-825-01	PULLEY, MIDWAY		902	*A-2056-296-A	MOUNTED PCB, AUDIO	
63	3-558-708-21	WASHER, STOPPER		Q312	8-729-154-82	TRANSISTOR 2SB548-R	
64	4-812-134-11	RIVET NYLON, 3.5		Q401	8-729-180-92	TRANSISTOR 2SD809-K	
65	3-325-509-01	BELT (A), SQUARE		Q418	8-729-180-92	TRANSISTOR 2SD809-K	


(3)



No.	Part No.	Description	Remarks
201	7-6		
202	3-5		
203	3-3		
204	3-3		
205	3-3		
206	3-3		
207	3-3		
208	3-3		
209	3-3		
210	3-3		
211	X-3		
212	3-3		
213	3-3		
214	3-5		
215	*3-3		
216	3-3		
217	3-3		
218	3-3		
219	3-3		
220	3-3		
221	3-3		
222	3-3		
223	*3-3		

Identified
mark are
ty. part


(2)

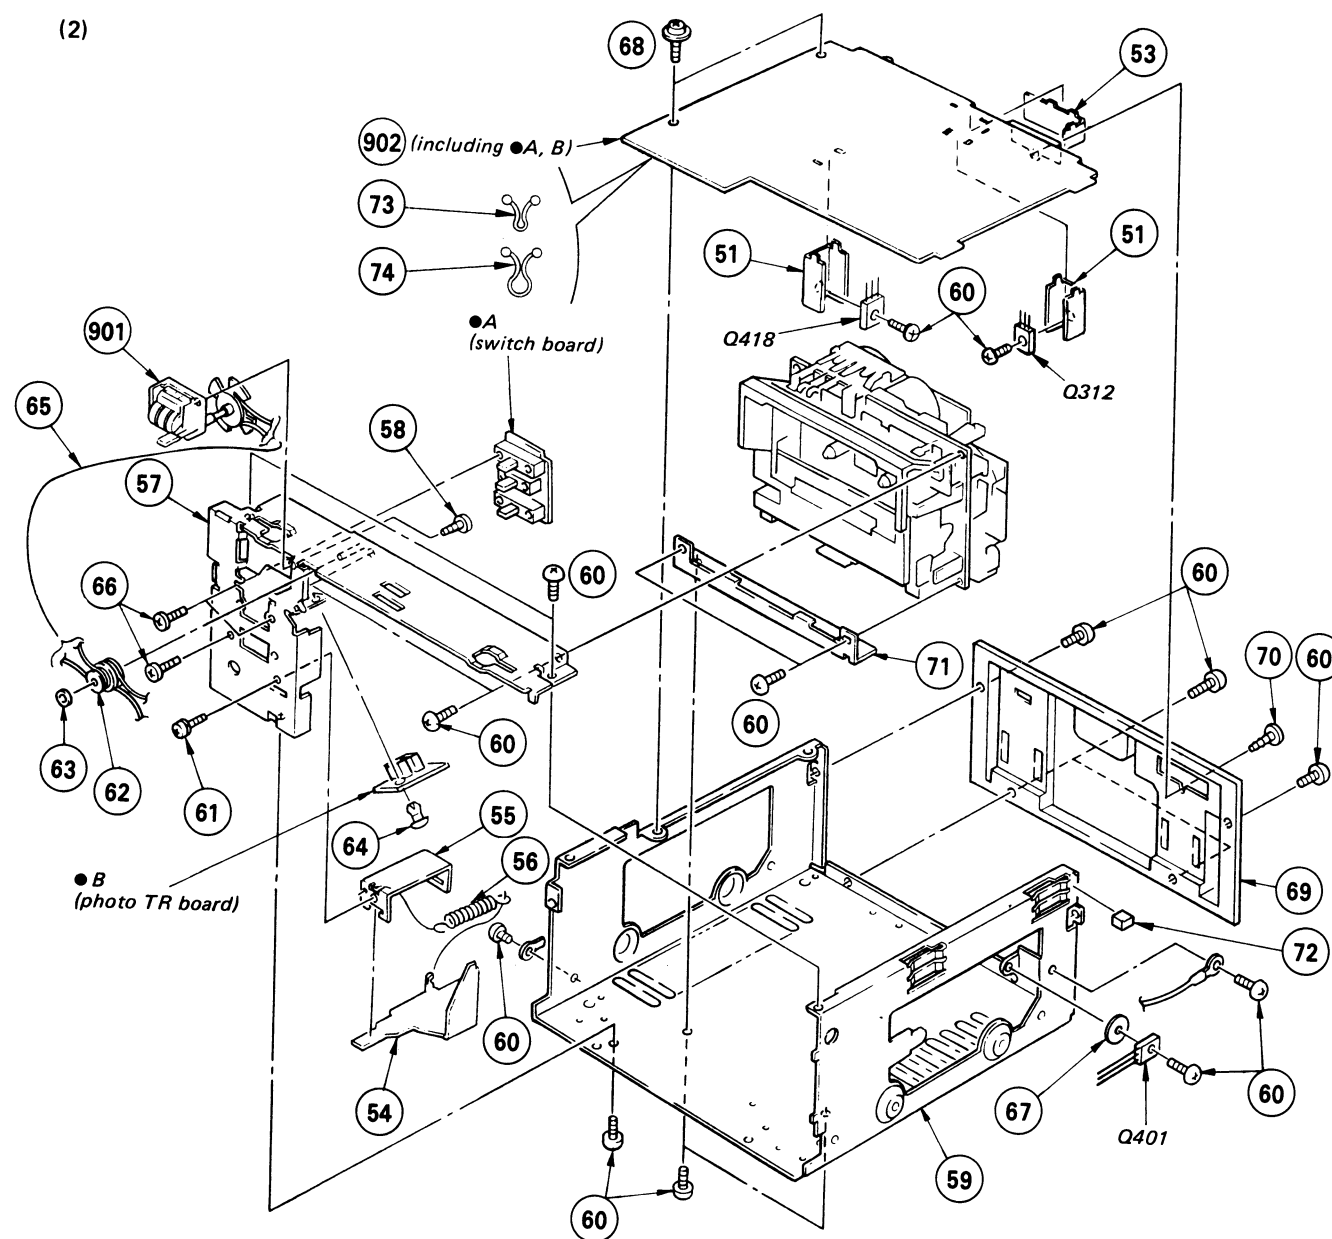

No.	Part No.	Description	Remarks
51	*3-312-615-31	HEAT SINK	
53	*3-325-515-01	PLATE, SHIELD	
54	*3-325-513-01	SLIDER, EJECT	
55	*3-575-502-00	BRACKET, EJECT	
56	3-534-238-XX	SPRING, TENSION	
57	*X-3325-501-1	CHASSIS ASSY, JOINT	
58	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S	
59	*3-309-132-12	CHASSIS	
60	7-685-871-01	SCREW +BVTT 3X6 (S)	
61	7-628-254-05	SCREW +PS 2.6X5	
62	3-318-825-01	PULLEY, MIDWAY	
63	3-558-708-21	WASHER, STOPPER	
64	4-812-134-11	RIVET NYLON, 3.5	
65	3-325-509-01	BELT (A), SQUARE	


No.	Part No.	Description	Remarks
66	7-621-775-10	SCREW +B 2.6X4	
67	3-572-365-11	SHEET, INSULATING (A)	
68	3-703-249-01	SCREW, S TIGHT, +PTTWH 3X6	
69	3-309-129-71	PLATE, JACK	
70	7-685-647-14	SCREW +BVTP 3X10 TYPE2 N-S	
71	*3-319-722-01	BRACKET, MD	
72	9-911-841-XX	CUSHION	
73	*2-056-665-00	HOLDER, WIRE (PURSE LOCK 5 DIA)	
74	*2-056-666-00	PURSE LOCK (8 DIA.)	
901	1-548-563-91	COUNTER, TAPE (MIDDLE TYPE)	
902	*A-2056-296-A	MOUNTED PCB, AUDIO	
Q312	8-729-154-82	TRANSISTOR 2SB548-R	
Q401	8-729-180-92	TRANSISTOR 2SD809-K	
Q418	8-729-180-92	TRANSISTOR 2SD809-K	

(3)

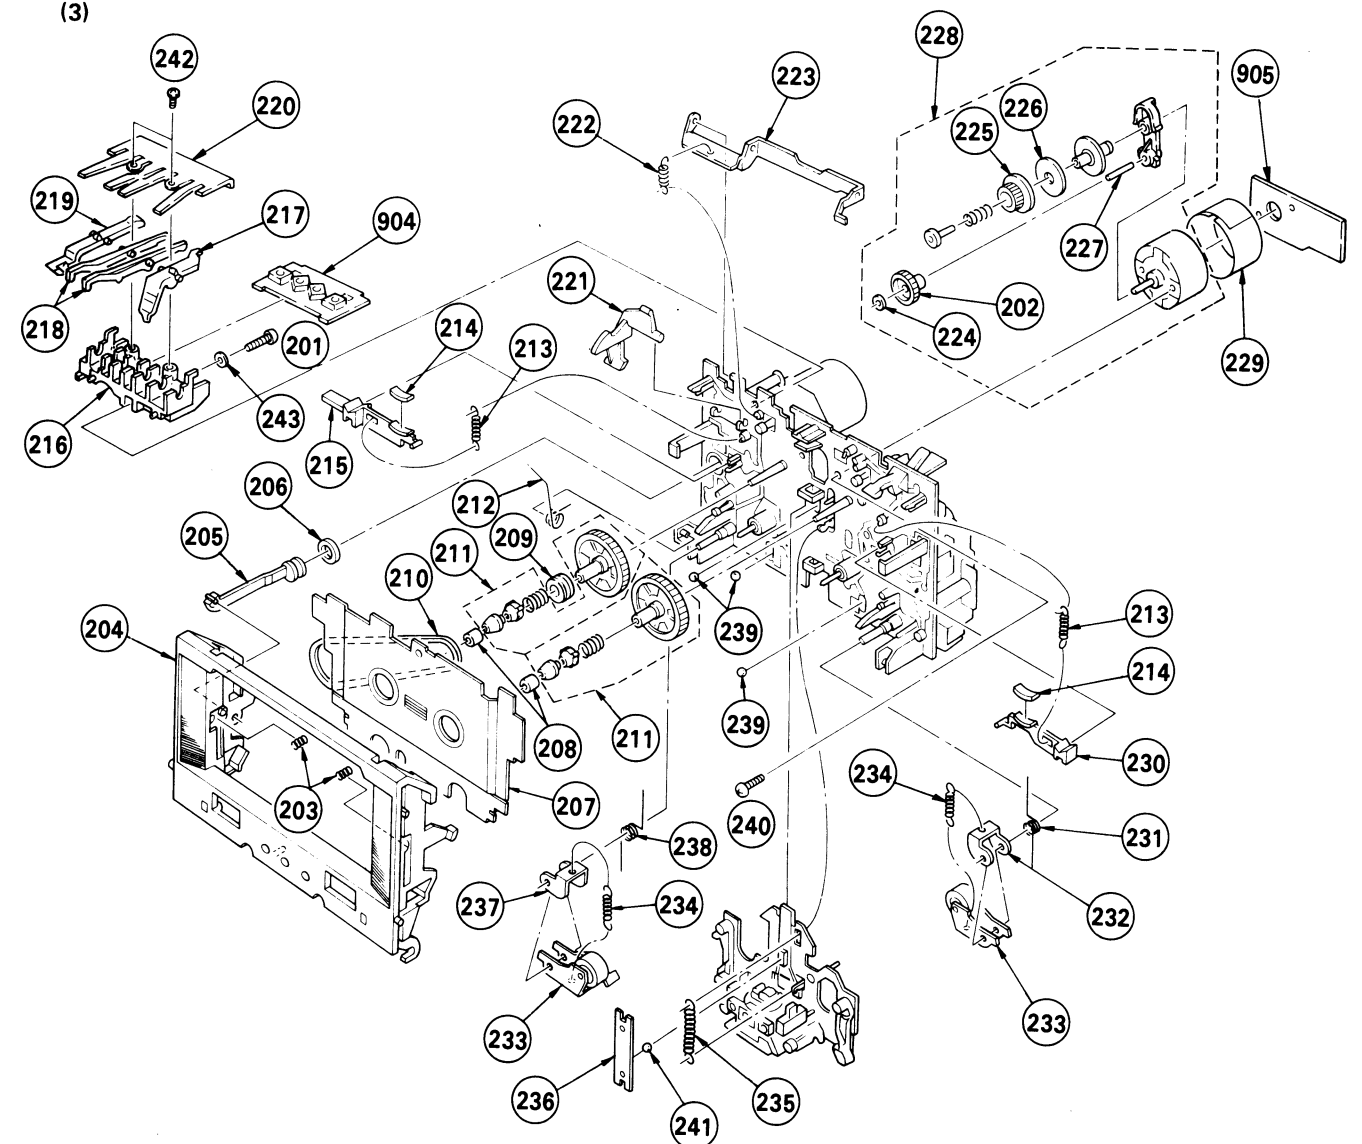


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
201	7-685-865-01	SCREW +BVTT 2.6X12 (S)		224	3-307-394-00	RETAINER (B), THRUST	
202	3-575-332-00	GEAR, FR		225	3-575-324-00	GEAR, LIMITER	
203	3-319-721-01	SPRING, COMPRESSION		226	3-564-027-11	FELT, LIMITER	
204	3-319-700-01	HOLDER, CASSETTE		227	3-575-304-00	SHAFT, GEAR, FR	
205	3-319-613-01	PISTON (B)		228	X-3319-612-1	MOTOR ASSY, REEL	202, 224-227
206	3-312-441-00	RING, PISTON		229	3-575-457-00	PLATE (B), SHIELD, MOTOR	
207	3-313-292-11	RETAINER, CASSETTE		230	*3-319-615-01	LEVER (RIGHT), BACK TENSION	
208	3-319-607-01	BUSHING, REEL TABLE		231	3-319-650-01	SPRING (R)	
209	3-319-657-01	PULLEY (B) CB		232	*3-319-652-01	PLATE (RIGHT), LIMITER	
210	3-325-510-01	BELT (B), SQUARE		233	X-3319-607-1	PINCH LEVER ASSY	
211	X-3319-617-1	PULLEY ASSY, MOTOR		234	3-319-686-01	SPRING, TENSION	
212	3-319-614-01	SPRING		235	3-319-685-01	SPRING, TENSION	
213	3-319-694-01	SPRING, TENSION		236	3-319-601-01	SPRING	
214	3-575-346-01	FELT, BREKE		237	*3-319-653-01	PLATE (LEFT), LIMITER	
215	*3-319-611-01	LEVER (LEFT), BACK TENSION		238	3-319-651-01	SPRING (L)	
216	3-319-670-01	HOLDER, SWITCH, DETECTION		239	7-671-112-01	STEEL, BALL	
217	3-319-605-01	LEVER, METAL DETECTION		240	7-621-775-60	SCREW +B 2.6X12	
218	3-319-603-01	LEVER, REC DETECTION		241	7-671-112-11	BALL, STEEL	
219	3-319-604-01	LEVER, HALF DETECTION		242	7-685-102-21	SCREW +PTP 2.6X4 TYPE2 SLIT	
220	3-319-602-01	SPRING		243	7-688-002-01	W 2.6, SMALL	
221	3-319-669-01	LEVER, EJECT		904	*1-614-696-11	PC BOARD, DETECTION SW	
222	3-312-432-00	SPRING, TENSION		905	*1-613-522-11	PC BOARD, TRANSLATION	
223	*3-319-678-01	LEVER, SWITCH LIFT					

(4)

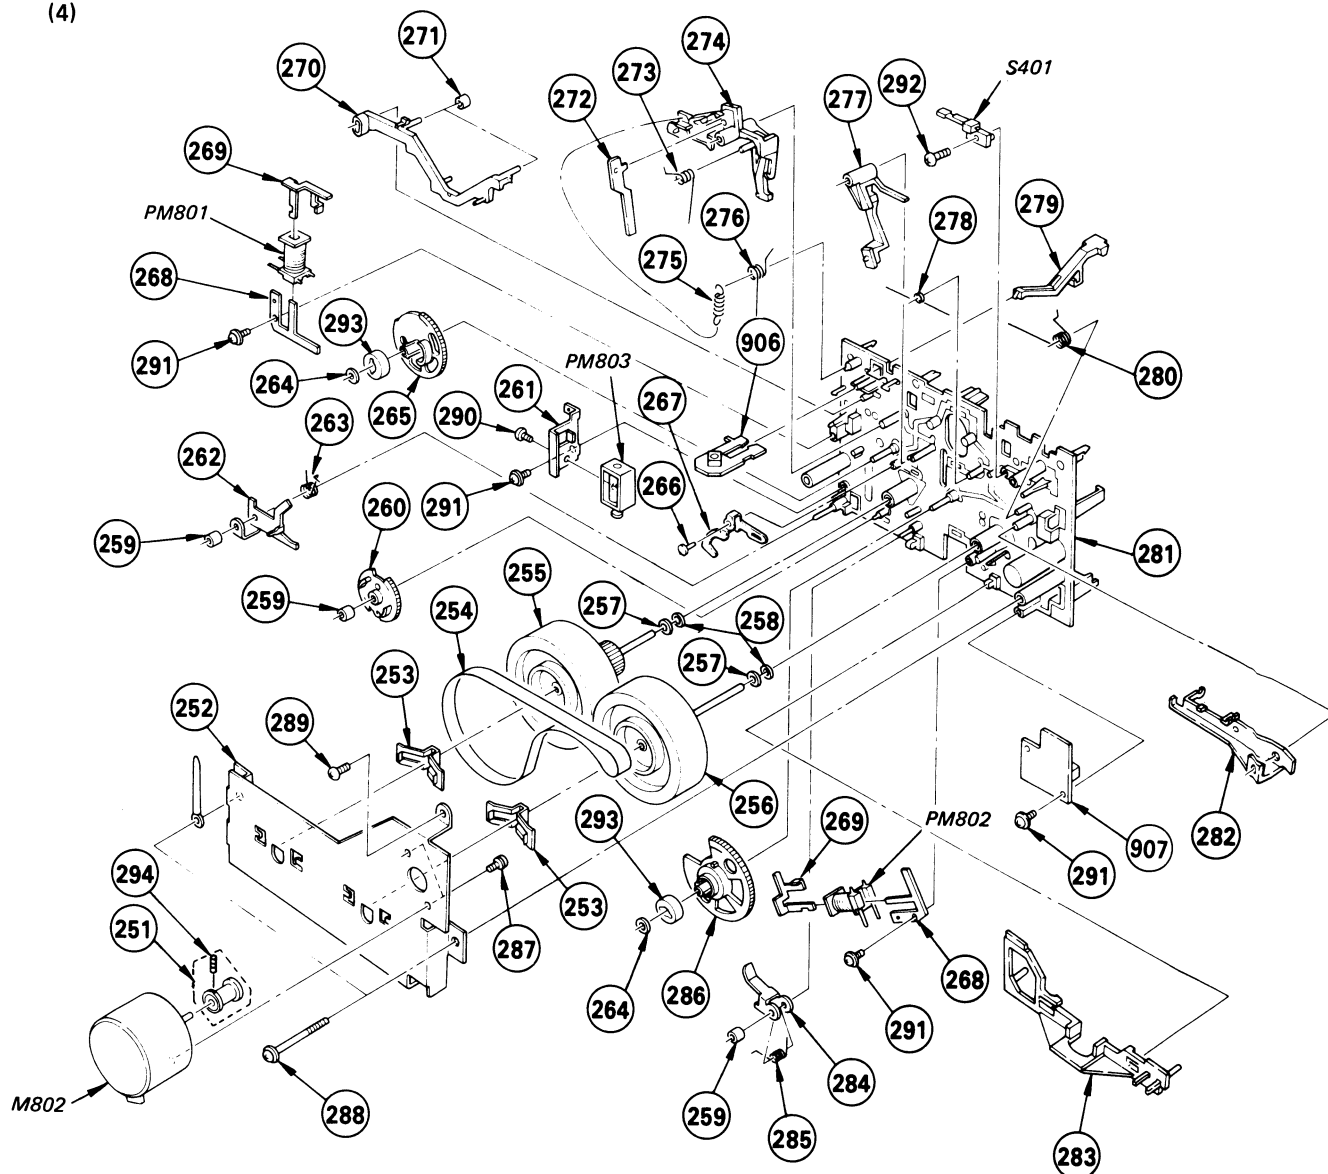

No.	Part No.	Description	REMARKS	No.	Part No.	Description	REMARKS
251	X-3319-617-1	PULLEY ASSY, MOTOR	294	274	*X-3319-614-1	LEVER ASSY, PAUSE	
252	*3-319-665-01	RETAINER, THRUST		275	3-555-124-00	SPRING, TENSION	
253	3-319-608-01	RETAINER, THRUST		276	3-319-637-01	SPRING (R)	
254	3-319-630-01	BELT (R), CAPSTAN		277	*X-3319-615-1	LEVER ASSY, FWD LOCK	
255	X-3319-606-1	FLYWHEEL (T) ASSY		278	3-319-649-01	SPRING	
256	X-3319-601-1	FLYWHEEL ASSY		279	3-319-666-01	LEVER (RIGHT), REC DETECTION	
257	3-701-438-11	WASHER, 2.5		280	3-319-633-01	SPRING	
258	3-307-482-00	WASHER, LUMILER		281	X-3319-611-1	CHASSIS ASSY, MECHANICAL	
259	3-319-607-01	BUSHING, REEL TABLE		282	*3-319-676-01	LEVER, FWD	
260	3-319-674-01	GEAR, REVERSE CAM		283	*3-319-681-01	SLIDER, REVERSE	
261	*3-319-639-01	BRACKET, TRIGGER PM		284	*3-319-658-01	LEVER, TRIGGER KICK	
262	*3-319-628-01	LEVER, REVERSE TRIGGER		285	3-319-660-01	SPRING	
263	3-319-648-01	SPRING		286	3-319-689-01	GEAR, FWD CAM	
264	3-307-394-00	RETAINER (B), THRUST		287	7-628-253-95	SCREW +PS 2.6X4	
265	3-319-688-01	GEAR, PAUSE CAM		288	7-685-879-01	SCREW +BVTT 3X30 (S)	
266	*3-319-664-01	SHAFT, CONTROL LEVER		289	7-685-646-21	SCREW +BVTP 3X8 (S)	
267	*3-319-683-01	LEVER, CONTROL, TRIGGER		290	7-685-850-01	SCREW +BVTT 2X3 (S)	
268	3-307-332-00	ARBOR, FIXED		291	7-687-204-11	TOTSU PTPWH 2X6 NON-SLIT, TYPE2	
269	3-307-333-00	ARBOR, TRIGGER		292	7-685-792-01	SCREW +PTT 2.6X5	
270	*3-319-668-01	PLATE, BRAKE		293	1-452-202-00	MAGNET	
271	3-319-662-01	RUBBER, BRAKE		294	7-621-733-08	SET-SCT, HEX 2X4 FLAT POINT	
272	3-319-612-01	SPRING		906	*1-612-727-11	PC BOARD, REC DET	
273	3-319-606-01	SPRING		907	*1-614-396-11	PC BOARD, SLIDE SW	

(5)

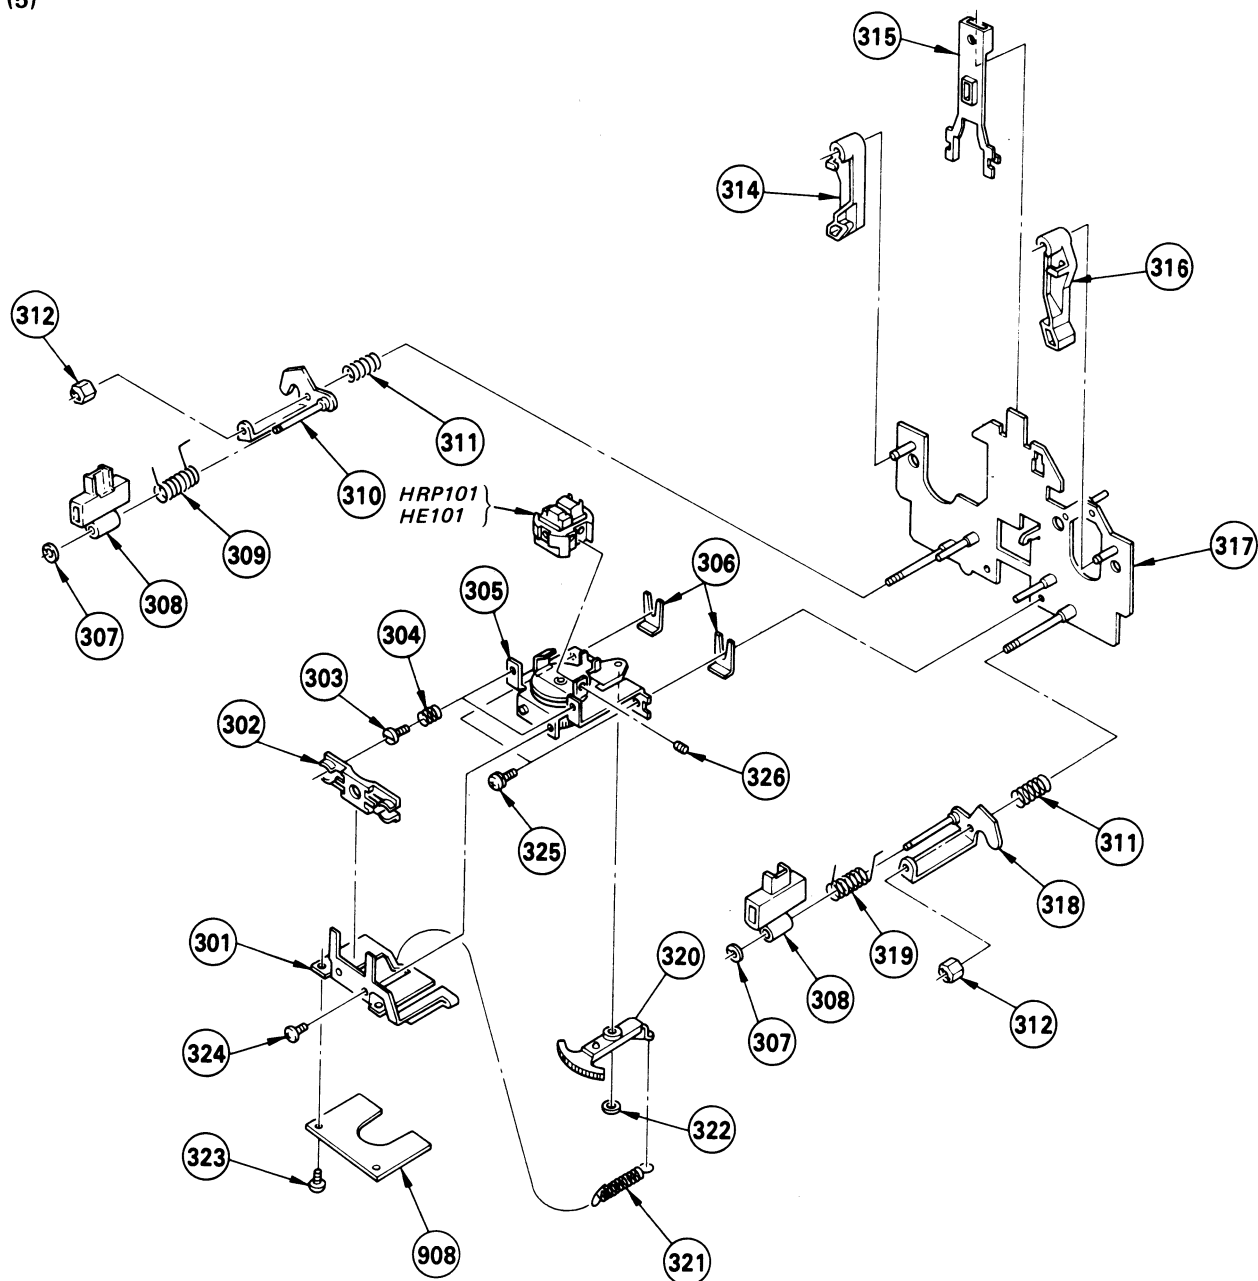

No.	Part No.	Description
301	3-319-620-01	PLATE, ORNAMENTAL, HEAD
302	3-319-644-01	STOPPER
303	3-319-663-01	SCREW, ADJUSTMENT, AZIMUTH
304	3-307-460-00	SPRING, COMPRESSION
305	X-3319-613-1	BRACKET COMPLETE ASSY, HEAD
306	3-307-477-01	SEAM (A), HEAD ADJUSTMENT
	3-307-477-11	SEAM (A), HEAD ADJUSTMENT
	3-307-477-21	SEAM (A), HEAD ADJUSTMENT
	3-307-477-31	SEAM (A), HEAD ADJUSTMENT
	3-307-477-41	SEAM (A), HEAD ADJUSTMENT
307	3-307-394-00	RETAINER (B), THRUST
308	3-306-269-01	GUIDE, TAPE
309	3-306-249-00	SPRING (LEFT)
310	*X-3319-609-1	LEVER (LEFT) ASSY, GUIDE
311	3-537-215-00	SPRING, COMPRESSION

REMARKS

No.	Part No.	Description
312	3-319-638-01	NUT, ADJUSTMENT
314	3-319-643-01	LEVER (L), P ROLLER SELECTION
315	3-319-684-01	PROTECTOR, EDGE
316	3-319-642-01	LEVER (R), P ROLLER SELECTION
317	*X-3319-610-1	CHASSIS ASSY, REVERSE HEAD
318	*X-3319-608-1	LEVER (RIGHT) ASSY, GUIDE
319	3-306-250-00	SPRING (RIGHT)
320	3-319-625-01	GEAR, ROTARY HEAD
321	3-306-258-01	SPRING, TENSION
322	7-624-102-04	STOP RING 1.5
323	7-685-850-01	SCREW +BVTT 2X3 (S)
324	7-627-553-17	SCREW, PRECISION +P 2X2
325	7-628-253-05	SCREW +PS 2X4
326	7-621-710-26	SET-SCREW, SLOT 2X3 FLAT POINT
908	*1-612-729-11	PC BOARD, HEAD TRANSLATION

REMARKS

SECTION 6

ELECTRICAL PARTS LIST

NOTE:

- Items marked " ★ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF:μF, PF:μμF.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

· MMH : mH, UH : μH

SEMICONDUCTORS

In each case, U : μ, for example:

 UA....: μA..., UPA....: μPA..., UPC....: μPC,
 UPD....: μPD...

The components identified by shading and mark are critical for safety. Replace only with part number specified.

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
901	1-548-563-91	COUNTER, TAPE (MIDDLE TYPE)			
902	*A-2056-296-A	MOUNTED PCB, AUDIO			
903	*1-615-390-11	PC BOARD, CONTROL SWITCH			
904	*1-614-696-11	PC BOARD, DETECTION SW			
905	*1-613-522-11	PC BOARD, TRANSLATION			
906	*1-612-727-11	PC BOARD, REC DET			
907	*1-614-396-11	PC BOARD, SLIDE SW			
908	*1-612-729-11	PC BOARD, HEAD TRANSLATION			
C101	1-162-293-31	CERAMIC	820PF	10%	50V
C102	1-123-384-00	ELECT	10MF	20%	50V
C103	1-136-157-00	FILM	0.022MF	5%	50V
C104	1-123-307-00	ELECT	100MF	20%	10V
C105	1-123-613-00	ELECT	3.3MF	20%	50V
C106	1-136-157-00	FILM	0.022MF	5%	50V
C107	1-136-158-00	FILM	0.027MF	5%	50V
C108	1-123-369-00	ELECT	4.7MF	20%	25V
C109	1-162-294-31	CERAMIC	0.001MF	10%	50V
C110	1-123-369-00	ELECT	4.7MF	20%	25V
C111	1-123-328-00	ELECT	100MF	20%	10V
C112	1-162-199-31	CERAMIC	10PF	5%	50V
C113	1-123-356-00	ELECT	10MF	20%	16V
C114	1-123-369-00	ELECT	4.7MF	20%	25V
C115	1-123-369-00	ELECT	4.7MF	20%	25V
C116	1-110-201-00	MYLAR	0.0033MF	5%	50V
C117	1-123-298-00	ELECT	470MF	20%	6.3V
C118	1-123-369-00	ELECT	4.7MF	20%	25V
C119	1-110-203-00	MYLAR	0.0047MF	5%	50V
C120	1-136-173-00	FILM	0.47MF	5%	50V
C121	1-136-167-00	FILM	0.15MF	5%	50V
C122	1-136-155-00	FILM	0.015MF	5%	50V
C123	1-136-169-00	FILM	0.22MF	5%	50V
C124	1-136-163-00	FILM	0.068MF	5%	50V
C125	1-136-161-00	FILM	0.047MF	5%	50V
C126	1-110-205-00	MYLAR	0.0068MF	5%	50V
C127	1-136-153-00	FILM	0.01MF	5%	50V
C128	1-123-369-00	ELECT	4.7MF	20%	25V
C129	1-123-382-00	ELECT	3.3MF	20%	50V
C131	1-136-162-00	FILM	0.056MF	5%	50V
C132	1-123-318-00	ELECT	33MF	20%	10V
C133	1-136-153-00	FILM	0.01MF	5%	50V
C134	1-110-200-00	MYLAR	0.0027MF	5%	50V
C135	1-136-157-00	FILM	0.022MF	5%	50V
C136	1-110-205-00	MYLAR	0.0068MF	5%	50V
C138	1-123-369-00	ELECT	4.7MF	20%	25V
C140	1-136-272-00	FILM	68PF	5%	630V
C141	1-136-271-00	FILM	56PF	5%	630V
C201	1-162-293-31	CERAMIC	820PF	10%	50V

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C202	1-123-384-00	ELECT	10MF	20%	50V
C203	1-136-157-00	FILM	0.022MF	5%	50V
C204	1-123-307-00	ELECT	100MF	20%	10V
C205	1-123-613-00	ELECT	3.3MF	20%	50V
C206	1-136-157-00	FILM	0.022MF	5%	50V
C207	1-136-158-00	FILM	0.027MF	5%	50V
C208	1-123-369-00	ELECT	4.7MF	20%	25V
C209	1-162-294-31	CERAMIC	0.001MF	10%	50V
C210	1-123-369-00	ELECT	4.7MF	20%	25V
C211	1-123-307-00	ELECT	100MF	20%	10V
C212	1-162-199-31	CERAMIC	10PF	5%	50V
C213	1-123-356-00	ELECT	10MF	20%	16V
C214	1-123-369-00	ELECT	4.7MF	20%	25V
C215	1-123-369-00	ELECT	4.7MF	20%	25V
C216	1-110-201-00	MYLAR	0.0033MF	5%	50V
C217	1-123-298-00	ELECT	470MF	20%	6.3V
C218	1-123-369-00	ELECT	4.7MF	20%	25V
C219	1-110-203-00	MYLAR	0.0047MF	5%	50V
C220	1-136-173-00	FILM	0.47MF	5%	50V
C221	1-136-167-00	FILM	0.15MF	5%	50V
C222	1-136-155-00	FILM	0.015MF	5%	50V
C223	1-136-169-00	FILM	0.22MF	5%	50V
C224	1-136-163-00	FILM	0.068MF	5%	50V
C225	1-136-161-00	FILM	0.047MF	5%	50V
C226	1-110-205-00	MYLAR	0.0068MF	5%	50V
C227	1-136-153-00	FILM	0.01MF	5%	50V
C228	1-123-369-00	ELECT	4.7MF	20%	25V
C229	1-123-382-00	ELECT	3.3MF	20%	50V
C231	1-136-162-00	FILM	0.056MF	5%	50V
C232	1-123-318-00	ELECT	33MF	20%	10V
C233	1-136-153-00	FILM	0.01MF	5%	50V
C234	1-110-200-00	MYLAR	0.0027MF	5%	50V
C235	1-136-157-00	FILM	0.022MF	5%	50V
C236	1-110-205-00	MYLAR	0.0068MF	5%	50V
C238	1-123-369-00	ELECT	4.7MF	20%	25V
C240	1-136-272-00	FILM	68PF	5%	630V
C241	1-136-271-00	FILM	56PF	5%	630V
C301	1-123-308-00	ELECT	220MF	20%	10V
C302	1-123-382-00	ELECT	3.3MF	20%	50V
C303	1-123-306-00	ELECT	47MF	20%	10V
C304	1-123-306-00	ELECT	47MF	20%	10V
C305	1-123-308-00	ELECT	220MF	20%	10V
C306	1-123-321-00	ELECT	220MF	20%	16V
C307	1-123-381-00	ELECT	2.2MF	20%	50V
C308	1-123-356-00	ELECT	10MF	20%	16V

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C309	1-123-356-00	ELECT	10MF	20%	16V
C311	1-123-379-00	ELECT	0.47MF	20%	50V
C312	1-123-356-00	ELECT	10MF	20%	16V
C313	1-130-289-00	FILM	0.0047MF	5%	100V
C314	1-130-289-00	FILM	0.0047MF	5%	100V
C315	1-130-295-00	FILM	0.0082MF	5%	100V
C316	1-129-713-00	FILM	0.0082MF	10%	630V
C317	1-129-898-00	FILM	0.0022MF	10%	630V
C318	1-129-705-00	FILM	0.0018MF	10%	630V
C319	1-123-321-00	ELECT	220MF	20%	16V
C320	1-123-332-00	ELECT	47MF	20%	16V
C321	1-123-318-00	ELECT	33MF	20%	10V
C401	1-123-333-00	ELECT	100MF	20%	16V
C402	1-123-321-00	ELECT	220MF	20%	16V
C403	1-123-306-00	ELECT	47MF	20%	10V
C404	1-123-298-00	ELECT	470MF	20%	6.3V
C405	1-162-304-31	CERAMIC	0.0047MF	20%	16V
C406	1-110-206-00	MYLAR	0.0082MF	5%	50V
C407	1-123-381-00	ELECT	2.2MF	20%	50V
C408	1-123-356-00	ELECT	10MF	20%	16V
C409	1-123-611-00	ELECT	1MF	20%	50V
C410	1-123-380-00	ELECT	1MF	20%	50V
C411	1-123-307-00	ELECT	100MF	20%	10V
C412	1-123-321-00	ELECT	220MF	20%	16V
C413	1-123-380-00	ELECT	1MF	20%	50V
C414	1-123-380-00	ELECT	1MF	20%	50V
C415	1-123-308-00	ELECT	220MF	20%	10V
C416	1-123-381-00	ELECT	2.2MF	20%	50V
C417	1-161-494-00	CERAMIC	0.022MF	30%	25V
C501	1-123-381-00	ELECT	2.2MF	20%	50V
C502	1-162-284-31	CERAMIC	150PF	10%	50V
C503	1-162-284-31	CERAMIC	150PF	10%	50V
C504	1-123-356-00	ELECT	10MF	20%	16V
C505	1-162-282-31	CERAMIC	100PF	10%	50V
C601	1-161-494-00	CERAMIC	0.022MF	30%	25V
CN1	1-562-068-13	SOCKET, CONNECTOR 13P			
CN301	*1-564-509-11	PLUG, CONNECTOR 6P			
CN302	*1-564-505-11	PLUG, CONNECTOR 2P			
CN303	*1-564-505-11	PLUG, CONNECTOR 2P			
CN401	*1-564-508-11	PLUG, CONNECTOR 5P			
CN402	*1-564-508-11	PLUG, CONNECTOR 5P			
CN403	*1-564-508-11	PLUG, CONNECTOR 5P			
CN801	*1-564-336-00	PIN, CONNECTOR 2P			
CN802	*1-564-338-00	PIN, CONNECTOR 4P			
CN803	*1-564-339-00	PIN, CONNECTOR 5P			
CN805	*1-564-341-11	PIN, CONNECTOR 7P			
CT301	1-141-225-00	CAP, TUNING, TRIMAR			
D101	8-719-107-94	DIODE 1SS202-1			
D102	8-719-107-94	DIODE 1SS202-1			
D201	8-719-107-94	DIODE 1SS202-1			
D202	8-719-107-94	DIODE 1SS202-1			
D301	8-719-107-94	DIODE 1SS202-1			
D302	8-719-107-94	DIODE 1SS202-1			
D303	8-719-107-94	DIODE 1SS202-1			

ELECTRICAL PARTS

Ref.No.	Part No.	Description
D304	8-719-107-94	DIODE 1SS202-1
D305	8-719-107-94	DIODE 1SS202-1
D306	8-719-910-11	DIODE HZ11A1L
D307	8-719-107-94	DIODE 1SS202-1
D308	8-719-107-94	DIODE 1SS202-1
D309	8-719-107-94	DIODE 1SS202-1
D310	8-719-107-94	DIODE 1SS202-1
D401	8-719-910-18	DIODE HZ11C2L
D402	8-719-910-64	DIODE HZ6B1L
D403	8-719-107-94	DIODE 1SS202-1
D404	8-719-107-94	DIODE 1SS202-1
D405	8-719-107-94	DIODE 1SS202-1
D406	8-719-107-94	DIODE 1SS202-1
D407	8-719-107-94	DIODE 1SS202-1
D408	8-719-107-94	DIODE 1SS202-1
D409	8-719-107-94	DIODE 1SS202-1
D410	8-719-107-94	DIODE 1SS202-1
D411	8-719-107-94	DIODE 1SS202-1
D412	8-719-107-94	DIODE 1SS202-1
D413	8-719-107-94	DIODE 1SS202-1
D414	8-719-107-94	DIODE 1SS202-1
D415	8-719-107-94	DIODE 1SS202-1
D417	8-719-107-94	DIODE 1SS202-1
D501	8-719-107-94	DIODE 1SS202-1
D502	8-719-107-94	DIODE 1SS202-1
D503	8-719-107-94	DIODE 1SS202-1
D601	8-719-920-03	DIODE GL-8PG1
D602	8-719-920-03	DIODE GL-8PG1
D603	8-719-920-03	DIODE GL-8PG1
D604	8-719-918-65	DIODE GL-1PR102
D605	8-719-918-66	DIODE GL-1HY102
D606	8-719-918-67	DIODE GL-1EG102
D801	8-719-107-94	DIODE 1SS202-1
HE101	X-3319-616-1	HEAD UNIT ASSY
HRP101	X-3319-616-1	HEAD UNIT ASSY
IC301	8-759-800-36	IC LA3160
IC302	8-759-800-92	IC LA3220
IC303	8-752-018-70	IC CX20187
IC304	8-759-700-08	IC NJM4558S
IC401	8-759-204-31	IC TC9312N-001
IC402	8-759-700-46	IC CX10034
IC501	8-759-602-47	IC M50761-417P
L101	1-408-923-00	MICRO INDUCTOR 8.2MMH
L104	1-408-930-00	MICRO INDUCTOR 33MMH
L201	1-408-923-00	MICRO INDUCTOR 8.2MMH
L204	1-408-930-00	MICRO INDUCTOR 33MMH
L301	1-408-096-00	MICRO INDUCTOR 470UH
L501	1-408-579-00	MICRO INDUCTOR 220UH
M802	1-541-239-00	MOTOR (CAPSTAIN)
PHI401	8-719-902-90	PHOTO INTERRUPTOR SPI201-20
Q101	8-729-900-89	TRANSISTOR DTC144ES
Q102	8-729-102-03	TRANSISTOR 2SD1020
Q103	8-729-606-33	TRANSISTOR 2SC2603F

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
Q104	8-729-900-89	TRANSISTOR DTC144ES			
Q105	8-729-900-89	TRANSISTOR DTC144ES			
Q106	8-729-900-89	TRANSISTOR DTC144ES			
Q201	8-729-900-89	TRANSISTOR DTC144ES			
Q202	8-729-102-03	TRANSISTOR 2SD1020			
Q203	8-729-606-33	TRANSISTOR 2SC2603F			
Q204	8-729-900-89	TRANSISTOR DTC144ES			
Q205	8-729-900-89	TRANSISTOR DTC144ES			
Q206	8-729-900-89	TRANSISTOR DTC144ES			
Q301	8-729-606-33	TRANSISTOR 2SC2603F			
Q302	8-729-606-33	TRANSISTOR 2SC2603F			
Q303	8-729-900-89	TRANSISTOR DTC144ES			
Q304	8-729-900-89	TRANSISTOR DTC144ES			
Q305	8-729-117-54	TRANSISTOR 2SA1175			
Q306	8-729-900-65	TRANSISTOR DTA144ES			
Q309	8-729-801-93	TRANSISTOR 2SD1387			
Q310	8-729-606-33	TRANSISTOR 2SC2603F			
Q311	8-729-606-33	TRANSISTOR 2SC2603F			
Q312	8-729-154-82	TRANSISTOR 2SB548-R			
Q313	8-729-606-33	TRANSISTOR 2SC2603F			
Q314	8-729-606-33	TRANSISTOR 2SC2603F			
Q315	8-729-900-89	TRANSISTOR DTC144ES			
Q401	8-729-180-92	TRANSISTOR 2SD809-K			
Q404	8-729-180-92	TRANSISTOR 2SD809-K			
Q405	8-729-117-54	TRANSISTOR 2SA1175			
Q406	8-729-900-89	TRANSISTOR DTC144ES			
Q407	8-729-900-89	TRANSISTOR DTC144ES			
Q408	8-729-900-89	TRANSISTOR DTC144ES			
Q409	8-729-900-89	TRANSISTOR DTC144ES			
Q410	8-729-900-89	TRANSISTOR DTC144ES			
Q411	8-729-900-89	TRANSISTOR DTC144ES			
Q412	8-729-900-65	TRANSISTOR DTA144ES			
Q413	8-729-900-80	TRANSISTOR DTA114ES			
Q414	8-729-801-93	TRANSISTOR 2SD1387			
Q415	8-729-801-93	TRANSISTOR 2SD1387			
Q416	8-729-801-83	TRANSISTOR 2SB1013			
Q417	8-729-801-83	TRANSISTOR 2SB1013			
Q418	8-729-180-92	TRANSISTOR 2SD809-K			
Q419	8-729-900-89	TRANSISTOR DTC144ES			
Q420	8-729-801-93	TRANSISTOR 2SD1387			
Q421	8-729-900-65	TRANSISTOR DTA144ES			
Q422	8-729-900-89	TRANSISTOR DTC144ES			
Q423	8-729-900-65	TRANSISTOR DTA144ES			
Q424	8-729-900-65	TRANSISTOR DTA144ES			
Q425	8-729-900-65	TRANSISTOR DTA144ES			
Q426	8-729-900-65	TRANSISTOR DTA144ES			
Q501	8-729-900-65	TRANSISTOR DTA144ES			
Q502	8-729-900-65	TRANSISTOR DTA144ES			
Q601	8-729-606-33	TRANSISTOR 2SC2603F			
R101	1-249-434-11	CARBON	27K	5%	1/6W
R102	1-247-883-00	CARBON	150K	5%	1/6W
R103	1-249-425-11	CARBON	4.7K	5%	1/6W
R104	1-247-808-00	CARBON	110	5%	1/6W
R105	1-249-421-11	CARBON	2.2K	5%	1/6W
R106	1-249-421-11	CARBON	2.2K	5%	1/6W
R107	1-247-841-00	CARBON	2.7K	5%	1/6W
R108	1-247-887-00	CARBON	220K	5%	1/6W
R109	1-247-823-00	CARBON	470	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R110	1-249-437-11	CARBON	47K	5%	1/6W
R111	1-247-829-00	CARBON	820	5%	1/6W
R112	1-249-421-11	CARBON	2.2K	5%	1/6W
R113	1-247-859-00	CARBON	15K	5%	1/6W
R114	1-247-815-00	CARBON	220	5%	1/6W
R115	1-247-827-00	CARBON	680	5%	1/6W
R116	1-249-429-11	CARBON	10K	5%	1/6W
R117	1-249-419-11	CARBON	1.5K	5%	1/6W
R118	1-247-831-00	CARBON	1K	5%	1/6W
R119	1-247-831-00	CARBON	1K	5%	1/6W
R120	1-247-831-00	CARBON	1K	5%	1/6W
R121	1-247-846-00	CARBON	4.3K	5%	1/6W
R122	1-247-841-00	CARBON	2.7K	5%	1/6W
R123	1-249-421-11	CARBON	2.2K	5%	1/6W
R124	1-247-879-00	CARBON	100K	5%	1/6W
R125	1-249-421-11	CARBON	2.2K	5%	1/6W
R126	1-247-822-00	CARBON	430	5%	1/6W
R127	1-247-851-00	CARBON	6.8K	5%	1/6W
R128	1-247-827-00	CARBON	680	5%	1/6W
R129	1-249-433-11	CARBON	22K	5%	1/6W
R130	1-247-841-00	CARBON	2.7K	5%	1/6W
R131	1-249-429-11	CARBON	10K	5%	1/6W
R132	1-247-879-00	CARBON	100K	5%	1/6W
R133	1-247-831-00	CARBON	1K	5%	1/6W
R134	1-247-867-00	CARBON	33K	5%	1/6W
R135	1-247-867-00	CARBON	33K	5%	1/6W
R136	1-247-831-00	CARBON	1K	5%	1/6W
R138	1-247-819-00	CARBON	330	5%	1/6W
R139	1-249-425-11	CARBON	4.7K	5%	1/6W
R140	1-247-849-00	CARBON	5.6K	5%	1/6W
R141	1-247-841-00	CARBON	2.7K	5%	1/6W
R142	1-247-845-00	CARBON	3.9K	5%	1/6W
R143	1-249-421-11	CARBON	2.2K	5%	1/6W
R144	1-247-845-00	CARBON	3.9K	5%	1/6W
R145	1-247-879-00	CARBON	100K	5%	1/6W
R146	1-249-429-11	CARBON	10K	5%	1/6W
R201	1-249-434-11	CARBON	27K	5%	1/6W
R202	1-247-883-00	CARBON	150K	5%	1/6W
R203	1-249-425-11	CARBON	4.7K	5%	1/6W
R204	1-247-808-00	CARBON	110	5%	1/6W
R205	1-249-421-11	CARBON	2.2K	5%	1/6W
R206	1-249-421-11	CARBON	2.2K	5%	1/6W
R207	1-247-841-00	CARBON	2.7K	5%	1/6W
R208	1-247-887-00	CARBON	220K	5%	1/6W
R209	1-247-823-00	CARBON	470	5%	1/6W
R210	1-249-437-11	CARBON	47K	5%	1/6W
R211	1-247-829-00	CARBON	820	5%	1/6W
R212	1-249-421-11	CARBON	2.2K	5%	1/6W
R213	1-247-859-00	CARBON	15K	5%	1/6W
R214	1-247-815-00	CARBON	220	5%	1/6W
R215	1-247-827-00	CARBON	680	5%	1/6W
R216	1-249-429-11	CARBON	10K	5%	1/6W
R217	1-249-419-11	CARBON	1.5K	5%	1/6W
R218	1-247-831-00	CARBON	1K	5%	1/6W
R219	1-247-831-00	CARBON	1K	5%	1/6W
R220	1-247-831-00	CARBON	1K	5%	1/6W
R221	1-247-846-00	CARBON	4.3K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R222	1-247-841-00	CARBON	2.7K	5%	1/6W
R223	1-249-421-11	CARBON	2.2K	5%	1/6W
R224	1-247-879-00	CARBON	100K	5%	1/6W
R225	1-249-421-11	CARBON	2.2K	5%	1/6W
R226	1-247-822-00	CARBON	430	5%	1/6W
R227	1-247-851-00	CARBON	6.8K	5%	1/6W
R228	1-247-827-00	CARBON	680	5%	1/6W
R229	1-249-433-11	CARBON	22K	5%	1/6W
R230	1-247-841-00	CARBON	2.7K	5%	1/6W
R231	1-249-429-11	CARBON	10K	5%	1/6W
R232	1-247-879-00	CARBON	100K	5%	1/6W
R233	1-247-831-00	CARBON	1K	5%	1/6W
R234	1-247-867-00	CARBON	33K	5%	1/6W
R235	1-247-867-00	CARBON	33K	5%	1/6W
R236	1-247-831-00	CARBON	1K	5%	1/6W
R238	1-247-819-00	CARBON	330	5%	1/6W
R239	1-249-425-11	CARBON	4.7K	5%	1/6W
R240	1-247-849-00	CARBON	5.6K	5%	1/6W
R241	1-247-841-00	CARBON	2.7K	5%	1/6W
R242	1-247-845-00	CARBON	3.9K	5%	1/6W
R243	1-249-421-11	CARBON	2.2K	5%	1/6W
R244	1-247-845-00	CARBON	3.9K	5%	1/6W
R245	1-247-879-00	CARBON	100K	5%	1/6W
R246	1-249-429-11	CARBON	10K	5%	1/6W
R301	1-247-224-00	CARBON	220	5%	1/2W
R302	1-249-433-11	CARBON	22K	5%	1/6W
R303	1-247-843-00	CARBON	3.3K	5%	1/6W
R304	1-249-425-11	CARBON	4.7K	5%	1/6W
R305	1-247-875-00	CARBON	68K	5%	1/6W
R306	1-247-903-00	CARBON	1M	5%	1/6W
R307	1-247-807-00	CARBON	100	5%	1/6W
R308	1-247-879-00	CARBON	100K	5%	1/6W
R309	1-247-224-00	CARBON	220	5%	1/2W
R310	1-249-437-11	CARBON	47K	5%	1/6W
R311	1-249-437-11	CARBON	47K	5%	1/6W
R312	1-249-425-11	CARBON	4.7K	5%	1/6W
R313	1-249-437-11	CARBON	47K	5%	1/6W
R314	1-214-777-00	METAL	100K	1%	1/4W
R315	1-249-429-11	CARBON	10K	5%	1/6W
R318	1-249-429-11	CARBON	10K	5%	1/6W
R319	1-249-414-11	CARBON	560	5%	1/6W
R320	1-247-844-00	CARBON	3.6K	5%	1/6W
R321	1-247-848-00	CARBON	5.1K	5%	1/6W
R322	1-249-429-11	CARBON	10K	5%	1/6W
R323	1-247-853-00	CARBON	8.2K	5%	1/6W
R324	1-247-853-00	CARBON	8.2K	5%	1/6W
R325	1-247-080-00	CARBON	5.6	5%	1/4W
R326	1-249-434-11	CARBON	27K	5%	1/6W
R327	1-249-429-11	CARBON	10K	5%	1/6W
R328	1-247-831-00	CARBON	1K	5%	1/6W
R329	1-249-421-11	CARBON	2.2K	5%	1/6W
R330	1-247-831-00	CARBON	1K	5%	1/6W
R331	1-249-421-11	CARBON	2.2K	5%	1/6W
R332	1-247-879-00	CARBON	100K	5%	1/6W
R401	1-247-751-11	CARBON	820	5%	1/2W
R404	1-247-212-00	CARBON	68	5%	1/2W
R405	1-247-212-00	CARBON	68	5%	1/2W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R406	1-249-421-11	CARBON	2.2K	5%	1/6W
R407	1-247-867-00	CARBON	33K	5%	1/6W
R408	1-249-425-11	CARBON	4.7K	5%	1/6W
R409	1-247-811-00	CARBON	150	5%	1/6W
R410	1-247-823-00	CARBON	470	5%	1/6W
R411	1-247-815-00	CARBON	220	5%	1/6W
R412	1-247-815-00	CARBON	220	5%	1/6W
R413	1-247-819-00	CARBON	330	5%	1/6W
R414	1-249-429-11	CARBON	10K	5%	1/6W
R415	1-247-879-00	CARBON	100K	5%	1/6W
R416	1-249-433-11	CARBON	22K	5%	1/6W
R417	1-249-433-11	CARBON	22K	5%	1/6W
R418	1-249-429-11	CARBON	10K	5%	1/6W
R419	1-249-437-11	CARBON	47K	5%	1/6W
R420	1-249-425-11	CARBON	4.7K	5%	1/6W
R421	1-249-437-11	CARBON	47K	5%	1/6W
R422	1-247-879-00	CARBON	100K	5%	1/6W
R423	1-247-831-00	CARBON	1K	5%	1/6W
R424	1-247-879-00	CARBON	100K	5%	1/6W
R425	1-249-429-11	CARBON	10K	5%	1/6W
R426	1-247-859-00	CARBON	15K	5%	1/6W
R427	1-247-831-00	CARBON	1K	5%	1/6W
R428	1-247-831-00	CARBON	1K	5%	1/6W
R429	1-247-831-00	CARBON	1K	5%	1/6W
R430	1-247-831-00	CARBON	1K	5%	1/6W
R431	1-247-832-00	CARBON	1.1K	5%	1/6W
R432	1-249-419-11	CARBON	1.5K	5%	1/6W
R433	1-249-419-11	CARBON	1.5K	5%	1/6W
R434	1-247-831-00	CARBON	1K	5%	1/6W
R437	1-249-432-11	CARBON	18K	5%	1/6W
R438	1-247-795-00	CARBON	33	5%	1/6W
R439	1-249-429-11	CARBON	10K	5%	1/6W
R440	1-249-429-11	CARBON	10K	5%	1/6W
R441	1-247-857-00	CARBON	12K	5%	1/6W
R442	1-249-425-11	CARBON	4.7K	5%	1/6W
R443	1-247-809-00	CARBON	120	5%	1/6W
R444	1-247-833-00	CARBON	1.2K	5%	1/6W
R445	1-247-869-00	CARBON	39K	5%	1/6W
R446	1-247-873-00	CARBON	56K	5%	1/6W
R447	△1-217-391-00	FUSIBLE	22	5%	1/4W F
R448	1-249-421-11	CARBON	2.2K	5%	1/6W
R501	1-249-429-11	CARBON	10K	5%	1/6W
R502	1-247-903-00	CARBON	1M	5%	1/6W
R503	1-247-841-00	CARBON	2.7K	5%	1/6W
R504	1-247-879-00	CARBON	100K	5%	1/6W
R505	1-249-432-11	CARBON	18K	5%	1/6W
R506	1-249-425-11	CARBON	4.7K	5%	1/6W
R507	1-249-433-11	CARBON	22K	5%	1/6W
R601	1-247-809-00	CARBON	120	5%	1/6W
R602	1-249-429-11	CARBON	10K	5%	1/6W
R603	1-247-867-00	CARBON	33K	5%	1/6W
RV101	1-228-995-00	RES, ADJ, CARBON	22K		
RV102	1-228-994-00	RES, ADJ, CARBON	10K		
RV201	1-228-995-00	RES, ADJ, CARBON	22K		
RV202	1-228-994-00	RES, ADJ, CARBON	10K		
RY301	1-515-535-11	RELAY			

ELECTRICAL PARTS


<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>
S1	1-554-691-00	SWITCH, SLIDE (DOLBY NR)
S2	1-554-691-00	SWITCH, SLIDE (TIMER)
S3	1-514-674-21	SWITCH, SLIDE (DIRECTION)
S301	1-554-277-00	SWITCH, SLIDE (ISS)
S601	1-553-856-00	SWITCH, KEY BOARD (STOP)
S602	1-553-856-00	SWITCH, KEY BOARD (REW)
S603	1-553-856-00	SWITCH, KEY BOARD (FF)
S604	1-553-856-00	SWITCH, KEY BOARD (FWD)
S605	1-553-856-00	SWITCH, KEY BOARD (REV)
S606	1-553-856-00	SWITCH, KEY BOARD (PAUSE)
S607	1-553-856-00	SWITCH, KEY BOARD (REC)
S608	1-553-856-00	SWITCH, KEY BOARD (REC MUTE)
S609	1-553-856-00	SWITCH, KEY BOARD (AMS)
S801	1-554-883-11	SWITCH, SLIDE (DIRECTION)
S802	1-553-856-00	SWITCH, KEY BOARD (HALF DET)
S803	1-553-856-00	SWITCH, KEY BOARD (70/120 U)
S804	1-553-856-00	SWITCH, KEY BOARD (METAL)
S805	1-553-856-00	SWITCH, KEY BOARD (ERASE PROOF/FWD)
S806	1-553-856-00	SWITCH, KEY BOARD (ERASE PROOF/REV)
SPK101	1-235-186-00	ENCAPSULATED COMPONENT
SPK201	1-235-186-00	ENCAPSULATED COMPONENT
T301	1-433-281-11	TRANSFORMER, BIAS OSCILLATOR
X501	1-527-532-00	OSCILLATOR, CERAMIC

SPEAKER SYSTEM


[APM-177M]

【NOTES ON REPLACING WOOFER UNIT AND V. SENS BOARD】

- As woofer unit and V. SENS board (fixed on rear plate of speaker cabinet) are supplied as a block, replace them at the same time. Be sure to discard former V. SENS board. After replacing, there is no problem even if V. SENS board gets out of fixed position a little.
- Adjustable resistor (RV101) on V. SENS board has already adjusted with woofer unit. Therefore do not adjust it.
- Be sure to insert 2 pin connector as illustrated on the right.

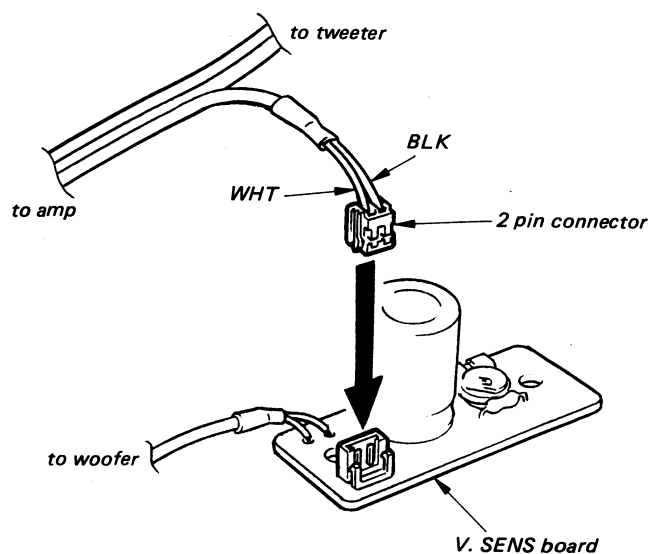


1. DISASSEMBLY FRONT PANEL REMOVAL

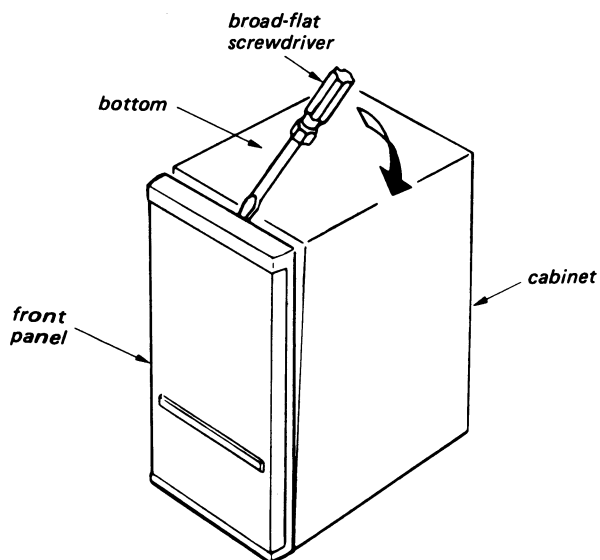


Note: Be careful not to scratch the cabinet.

2. WIRING DIAGRAM

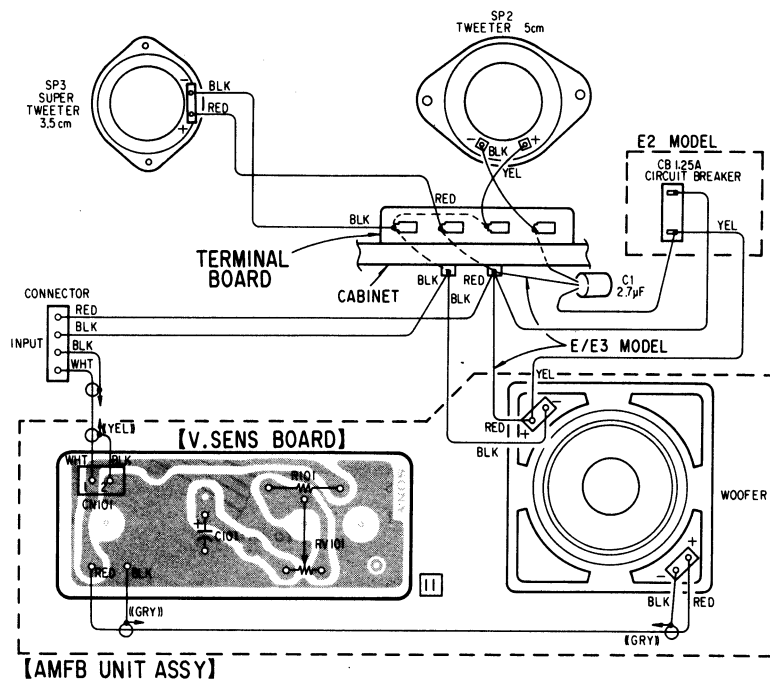

Note: Volume (RV101) cannot be replaced.

3. EXPLODED VIEW AND PARTS LIST

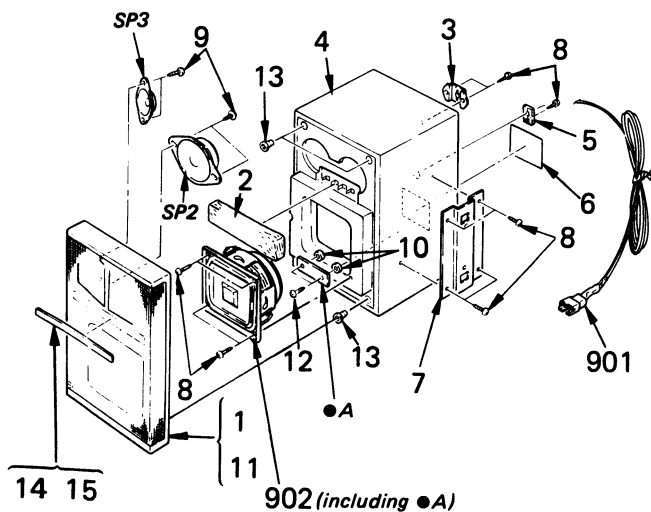

No.	Part No.	Description	Remarks
1	X-4910-067-1	PANEL (LEFT) ASSY (B), FRONT	
2	*4-910-045-01	ABSORBENT (C), ACOUSTIC	
3	*4-883-959-01	HOOK	
4	X-4910-046-1	CABINET ASSY, SPEAKER	
5	*4-914-306-01	CLAMP	
6	*4-910-397-01	(E)...LABEL, MODEL NUMBER	
	*4-914-311-01	(E2)...LABEL, MODEL NUMBER	
	*4-914-312-01	(E3)...LABEL, MODEL NUMBER	
7	*4-902-981-11	PLATE (B), SIDE	
8	4-874-614-11	SCREW (4)(3.5X14), TAPPING	
9	7-685-646-71	SCREW +BVTP 3X8 TYPE2 SLIT	
10	4-846-456-02	FOOT, FELT	
11	X-4910-068-1	PANEL (RIGHT) ASSY (B), FRONT	
12	7-685-148-01	SCREW +P 3X12 TYPE1	
13	*4-872-922-02	CATCHER	
14	4-914-332-01	PLATE (LEFT), ORNAMENTAL	
15	4-914-331-01	PLATE (RIGHT), ORNAMENTAL	

ELECTRICAL PARTS

Ref.No.	Part No.	Description
901	1-558-469-11	CORD, SPEAKER
902	X-4910-076-1	(E).....AMFB UNIT ASSY
	X-4910-077-1	(E2/3)...AMFB UNIT ASSY
C1	1-123-545-00	ELECT 2.7MF 20% 50V
C101	1-123-311-00	CAP, ELECT 1000MF
CB	1-532-664-00	(E2)...CIRCUIT BREAKER, 1.25A
R101	1-247-698-11	RES, CARBON 68
SP2	1-503-590-11	SPEAKER (5CM CONE TYPE)
SP3	1-503-591-11	SPEAKER (3.5CM)